

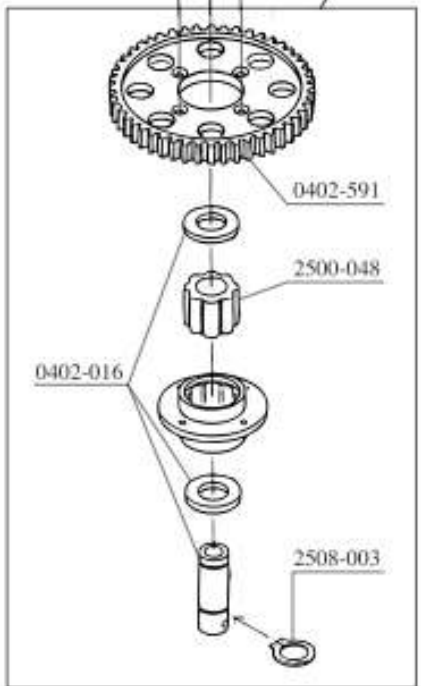
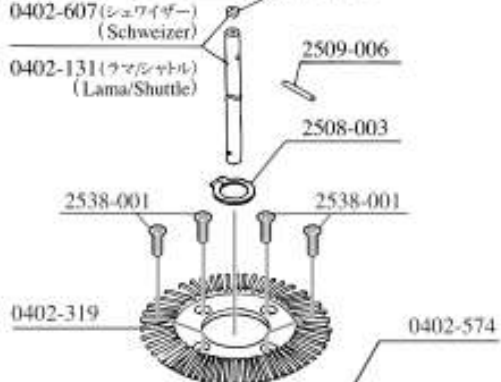


2522-004 (ラマ/シャトル) (Lama/Shuttle)
2522-009 (シュワイザー) (Schweizer)

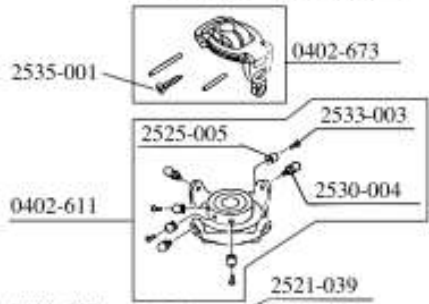




Lama 30
Tête tri-pales

HIROBO



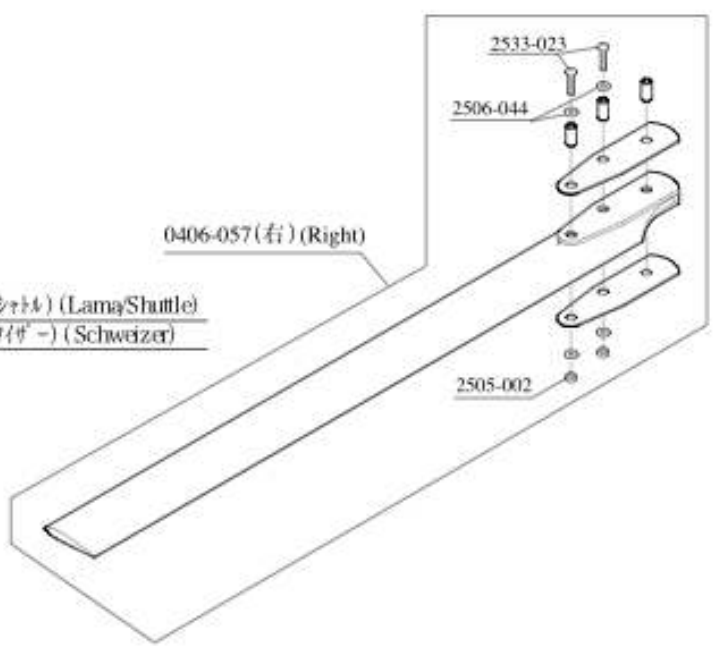


Lama 30 - 2

HIROBO

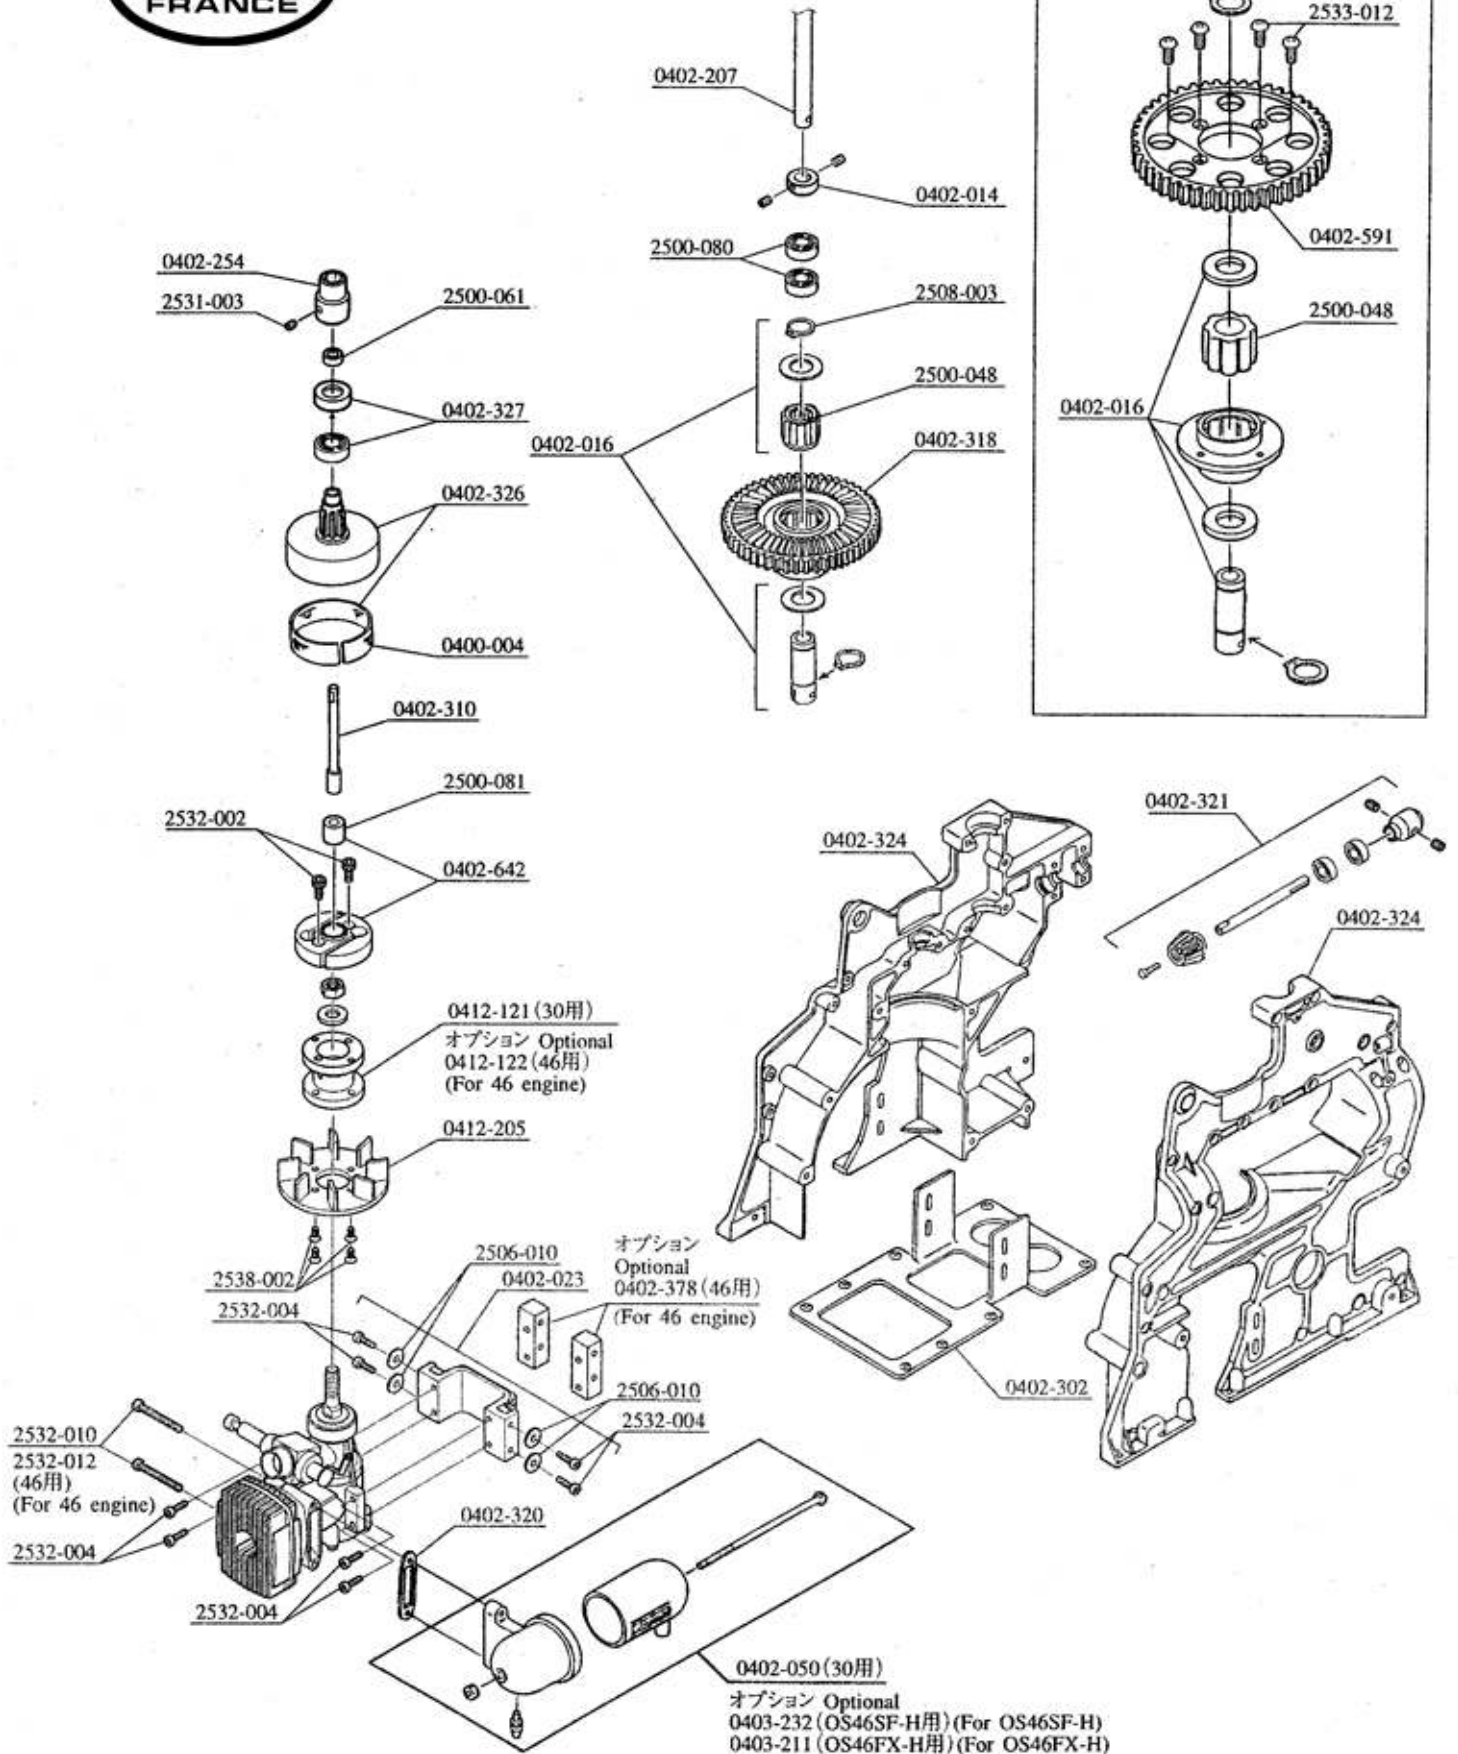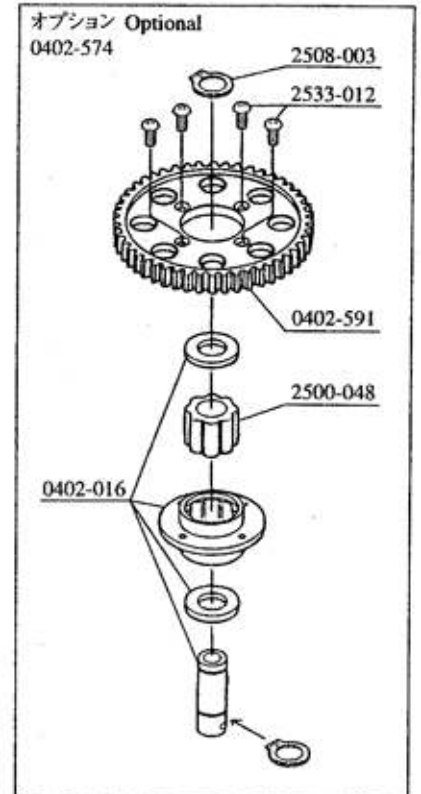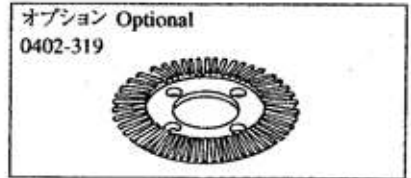



Lama 30 - 3 HIROBO

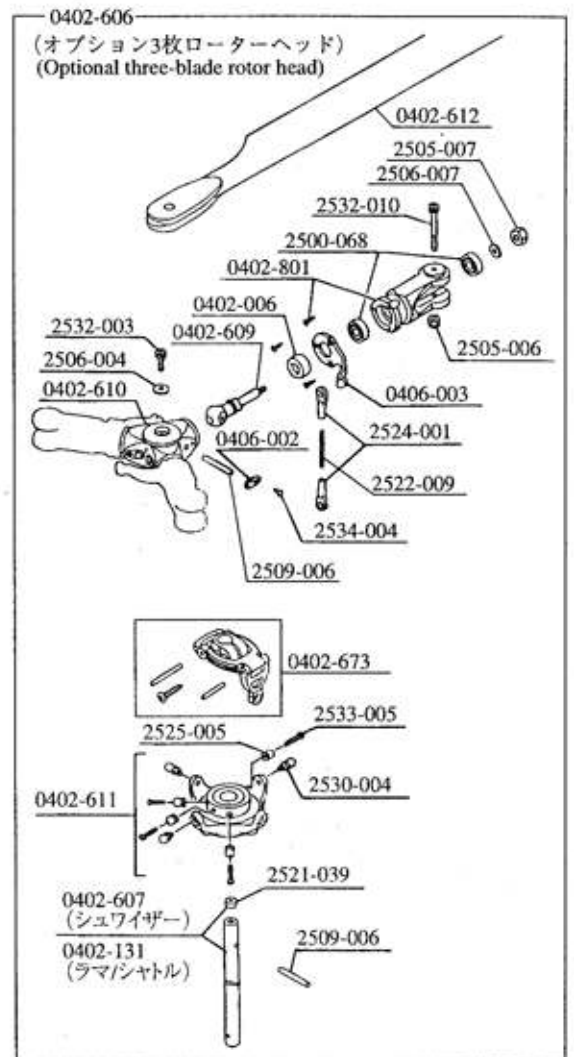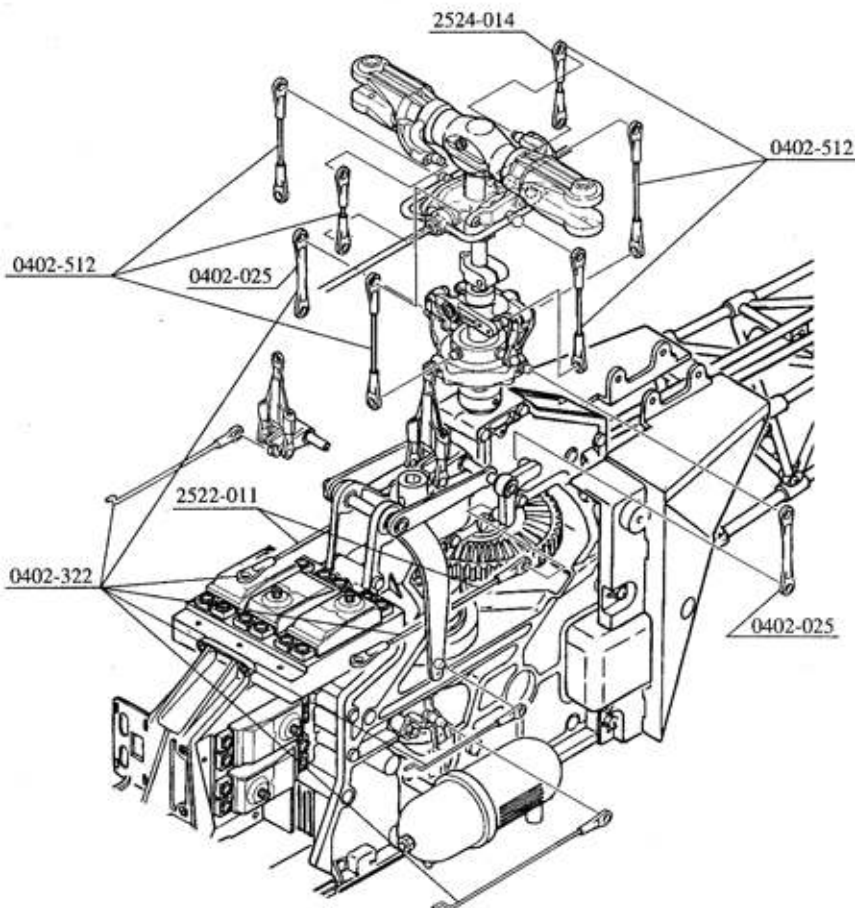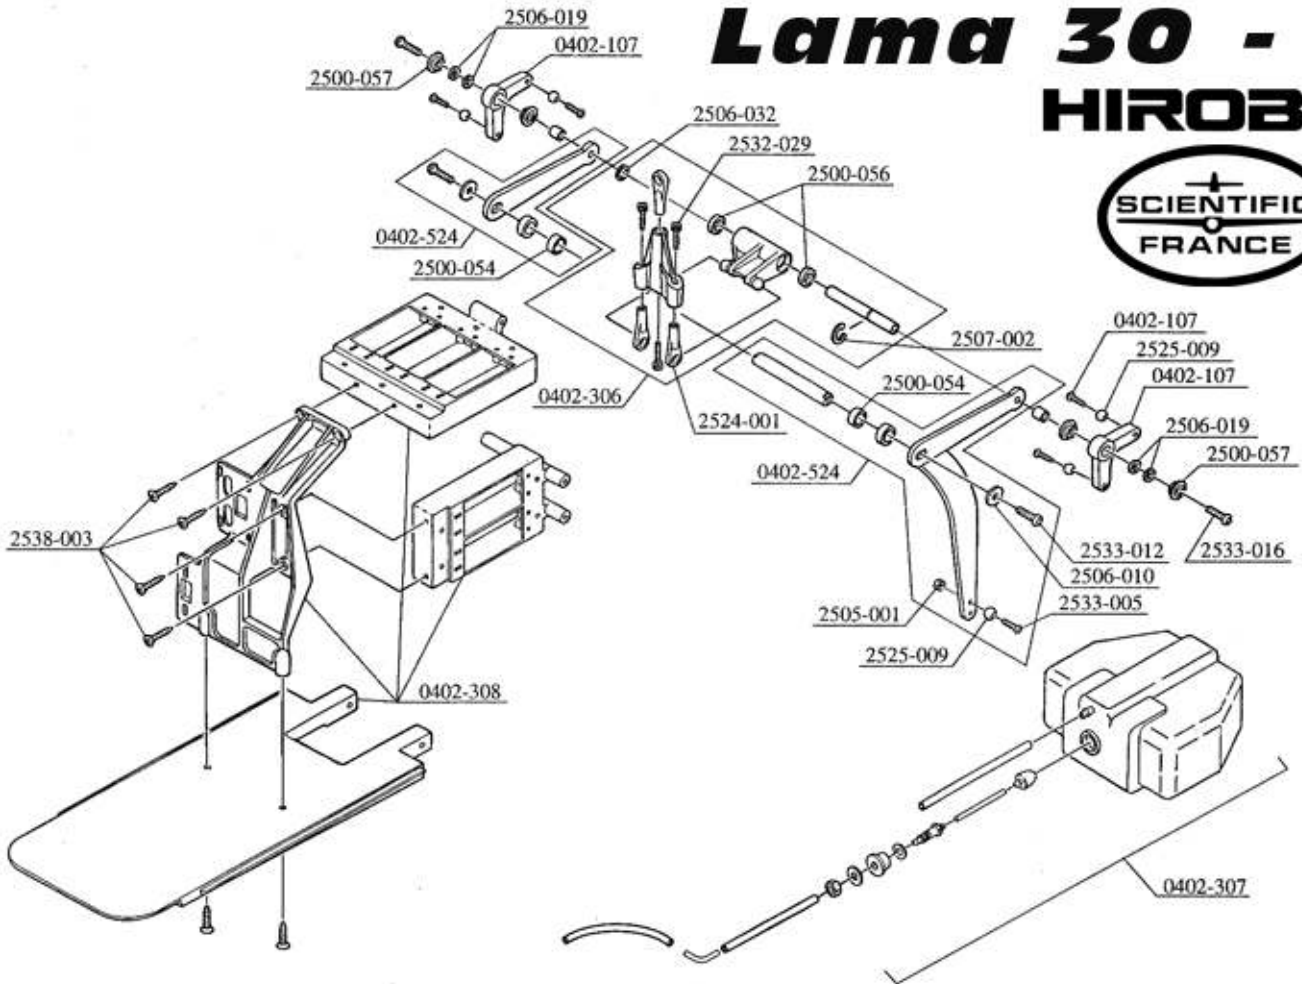


Lama 30 - 4

HIROBO

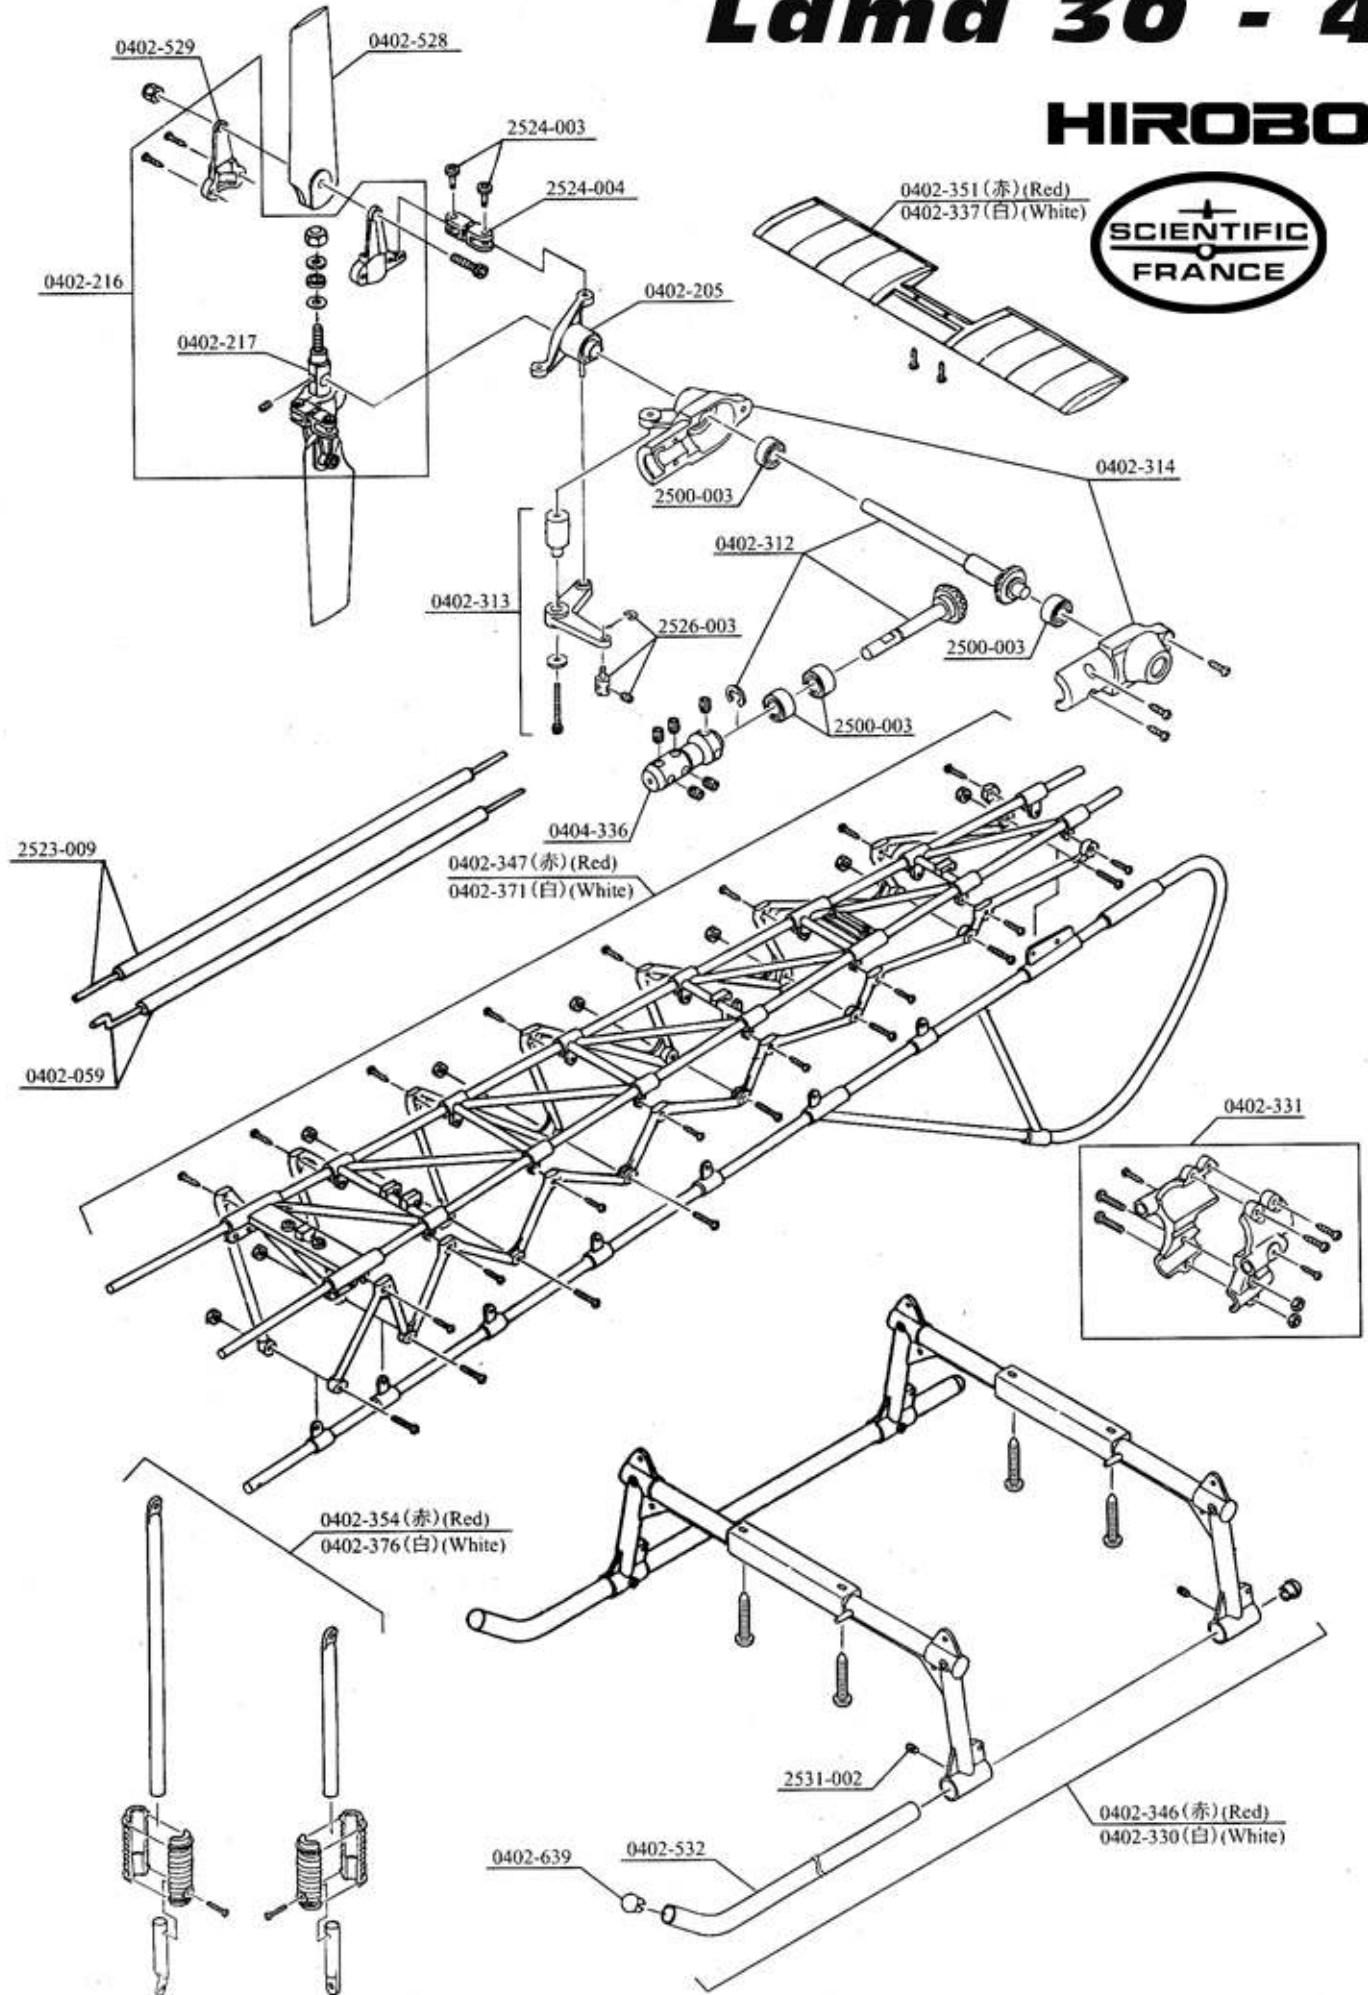


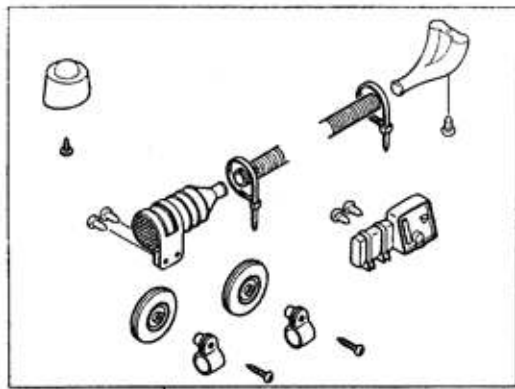

0402-345

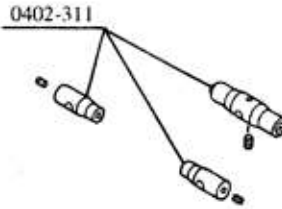

0402-311

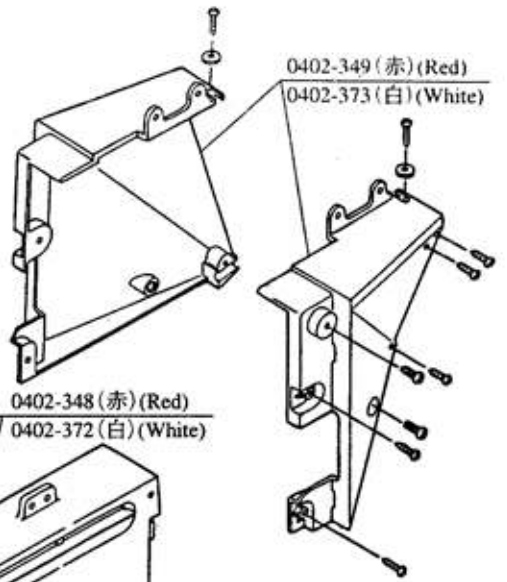

0402-349 (赤) (Red)
0402-373 (白) (White)

0402-355

0402-348 (赤) (Red)
0402-372 (白) (White)


0402-350 (赤) (Red)
0402-374 (白) (White)

0402-355 (赤) (Red)
0402-375 (白) (White)

Lama 30 - 5 HIROBO





0402-335

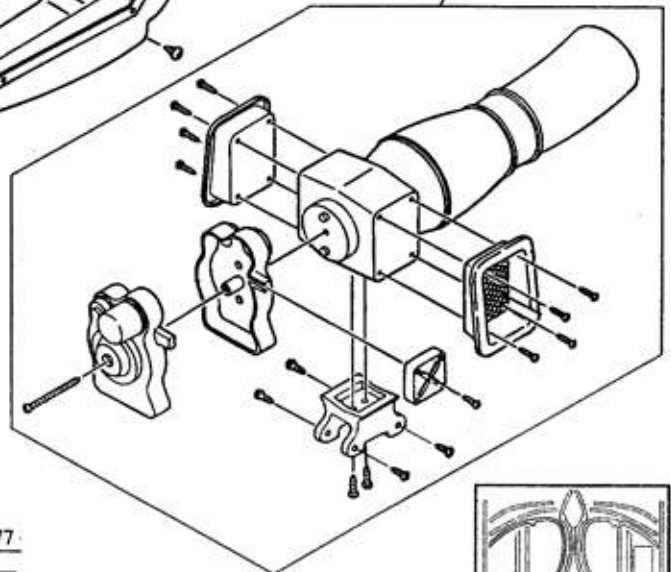

0402-377

0402-352 (イエローライン) (Yellow line)
0402-339 (ブルーライン) (Blue line)

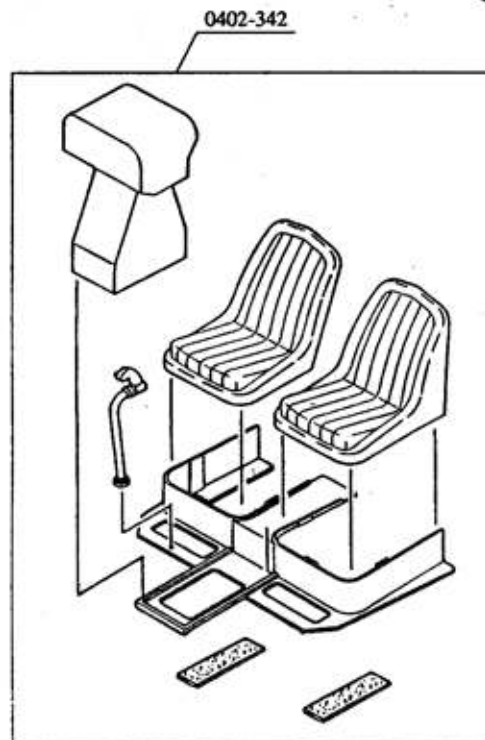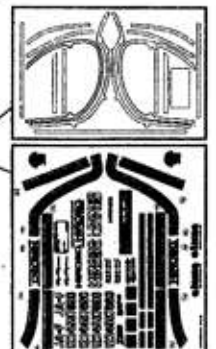

0402-342

0402-353