 
 
 
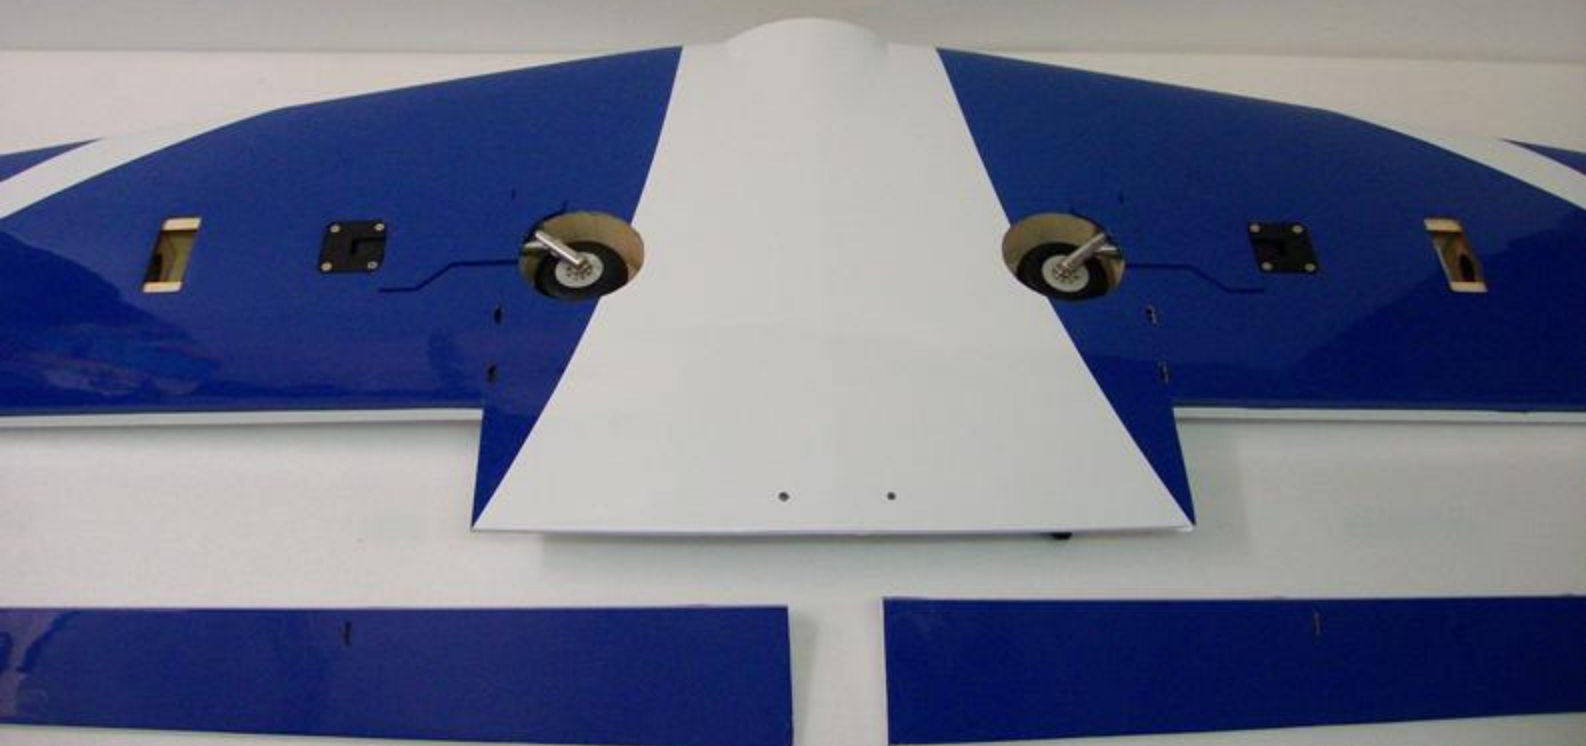 



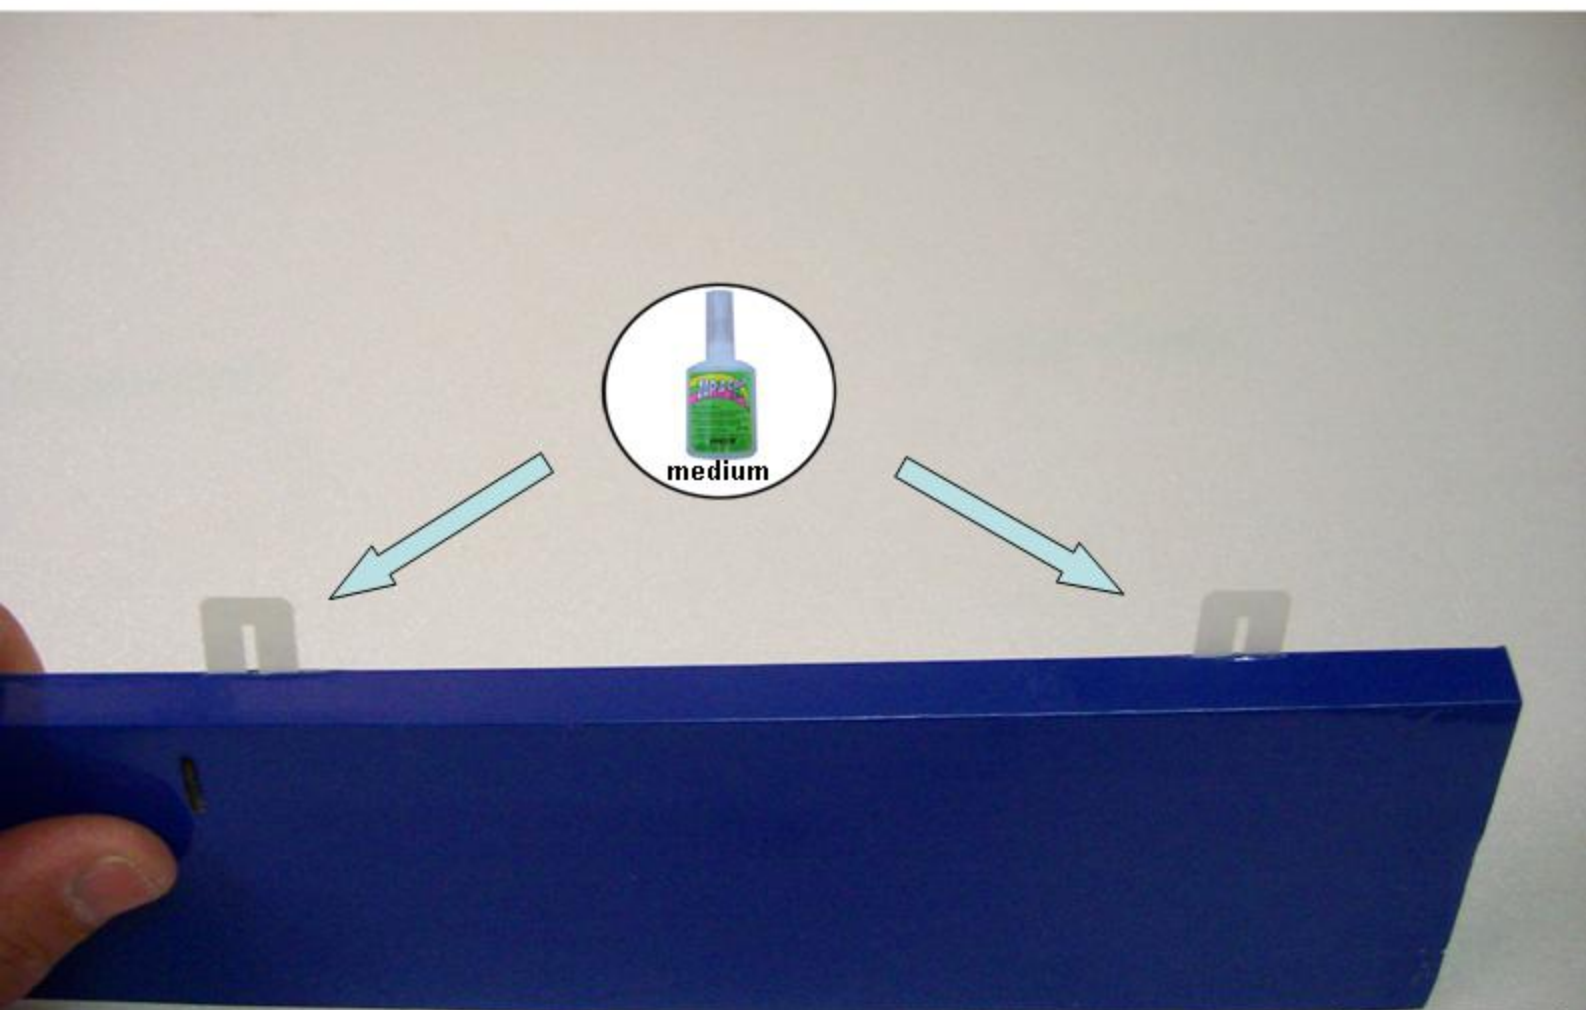


step 001

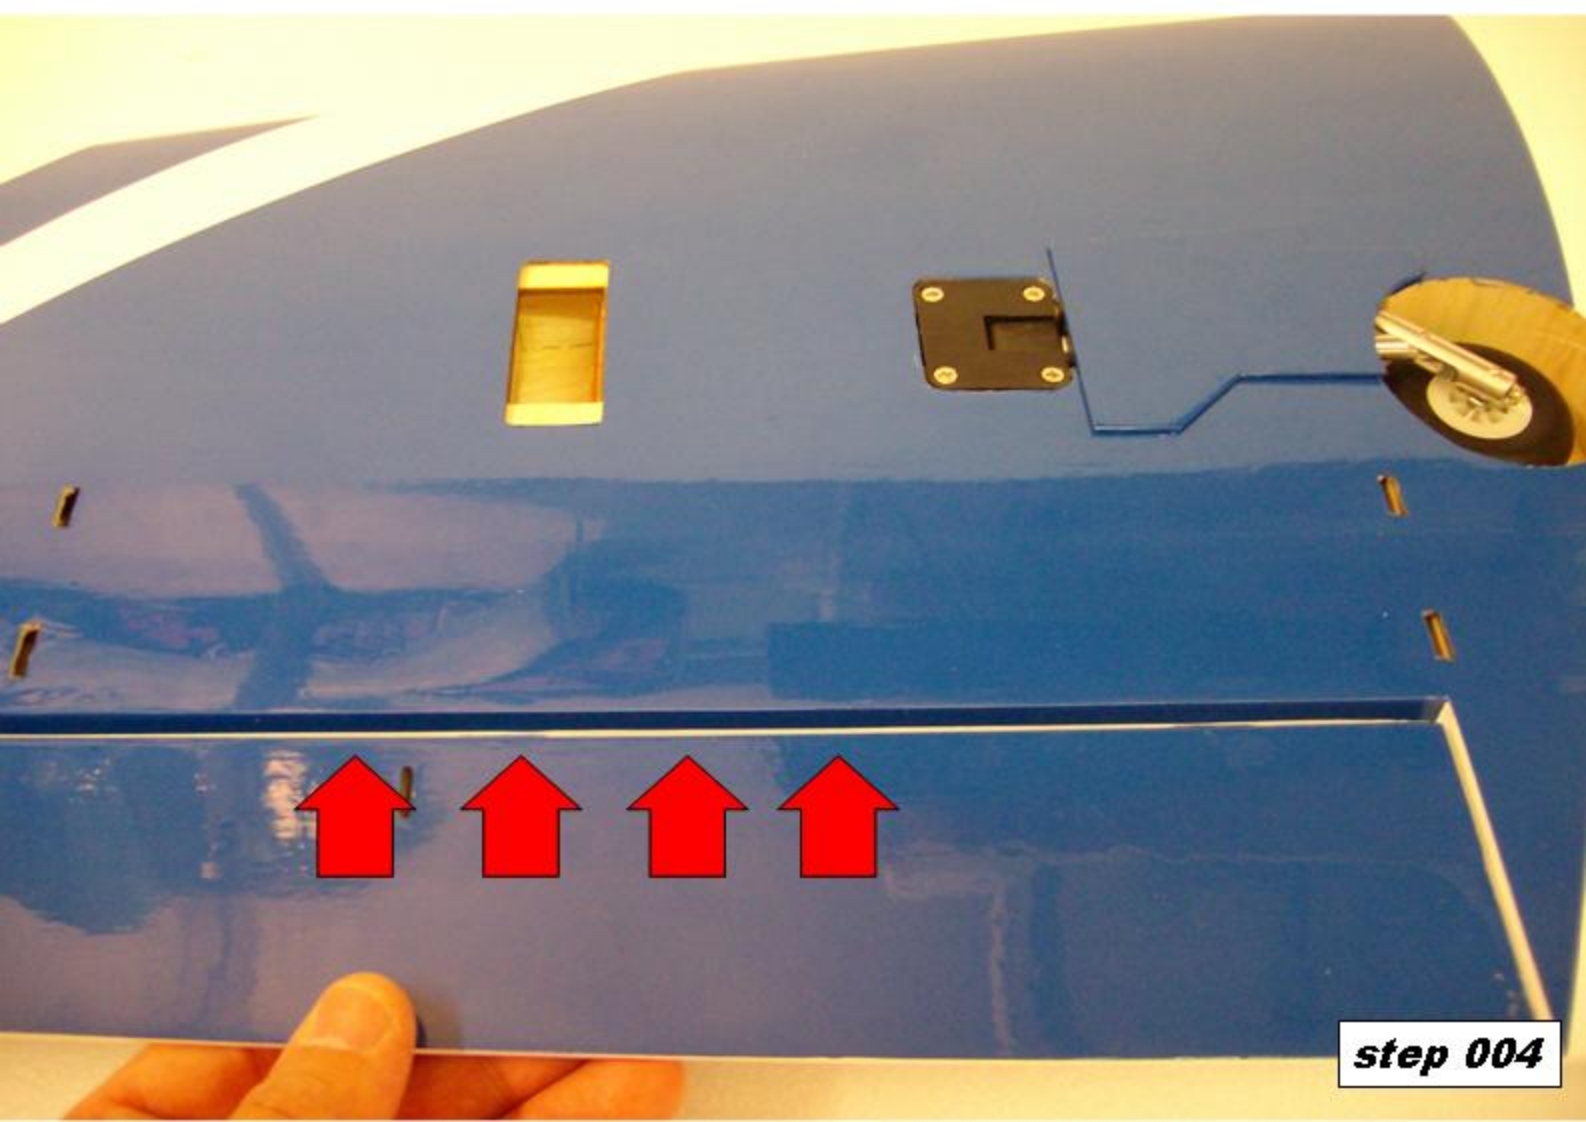

  
step 002

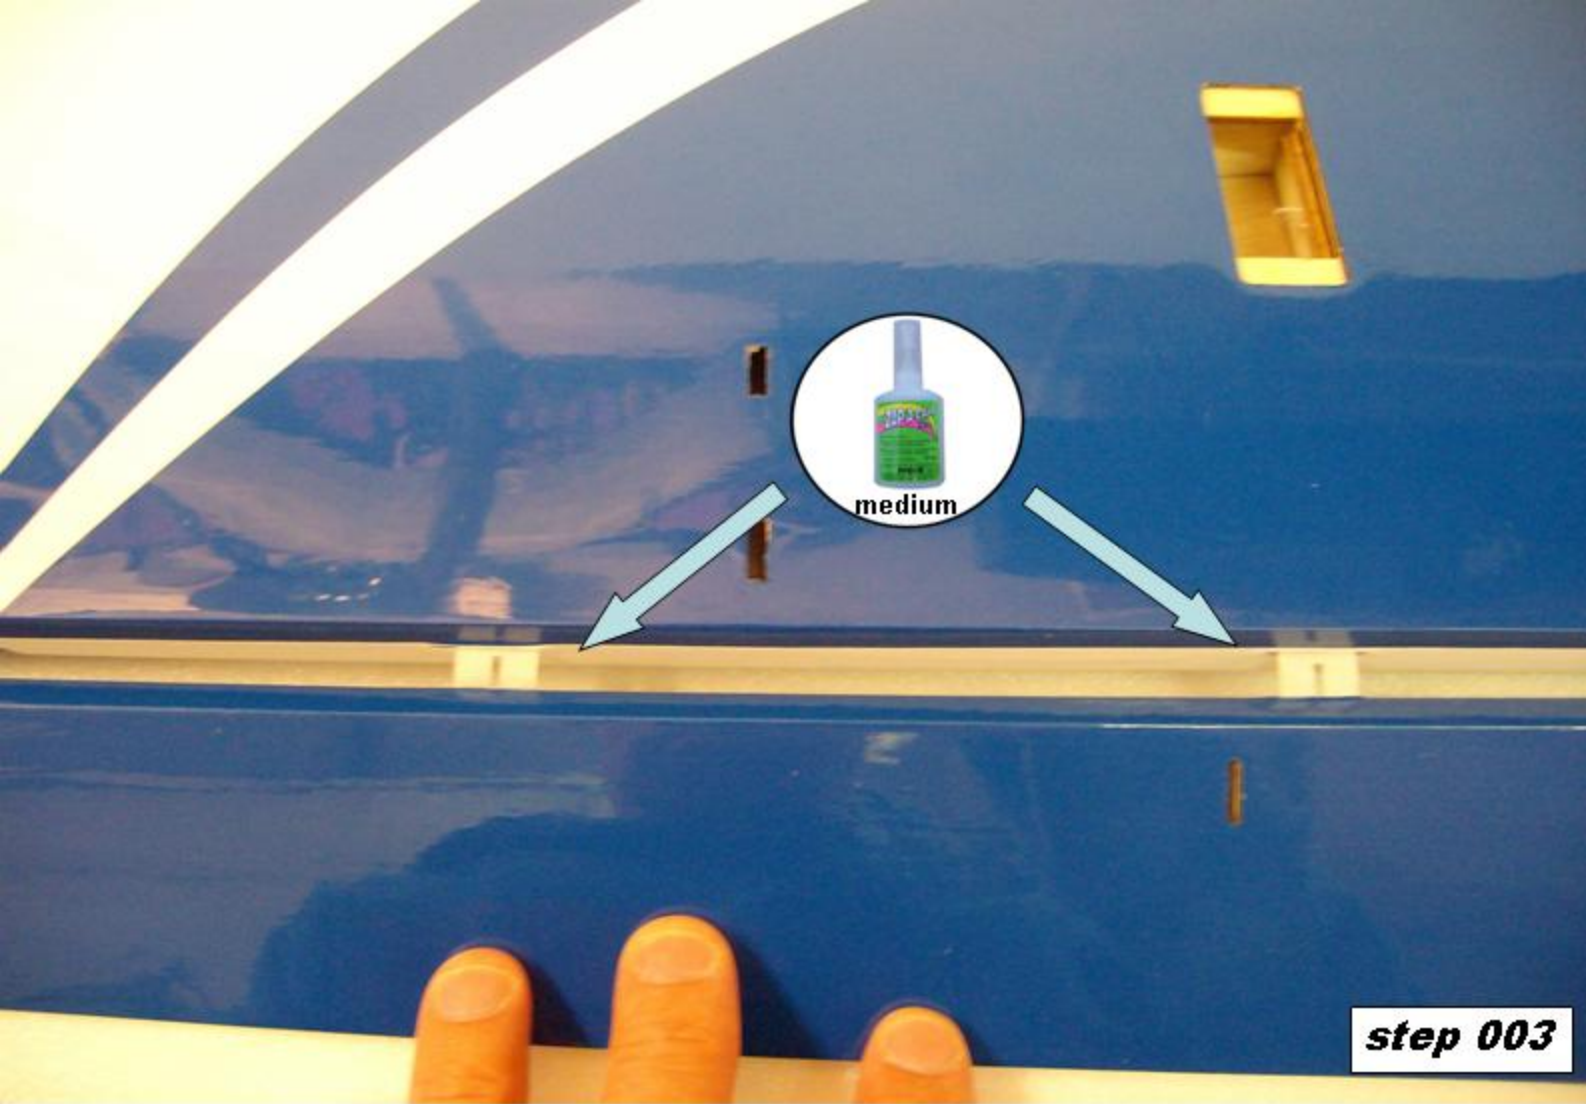

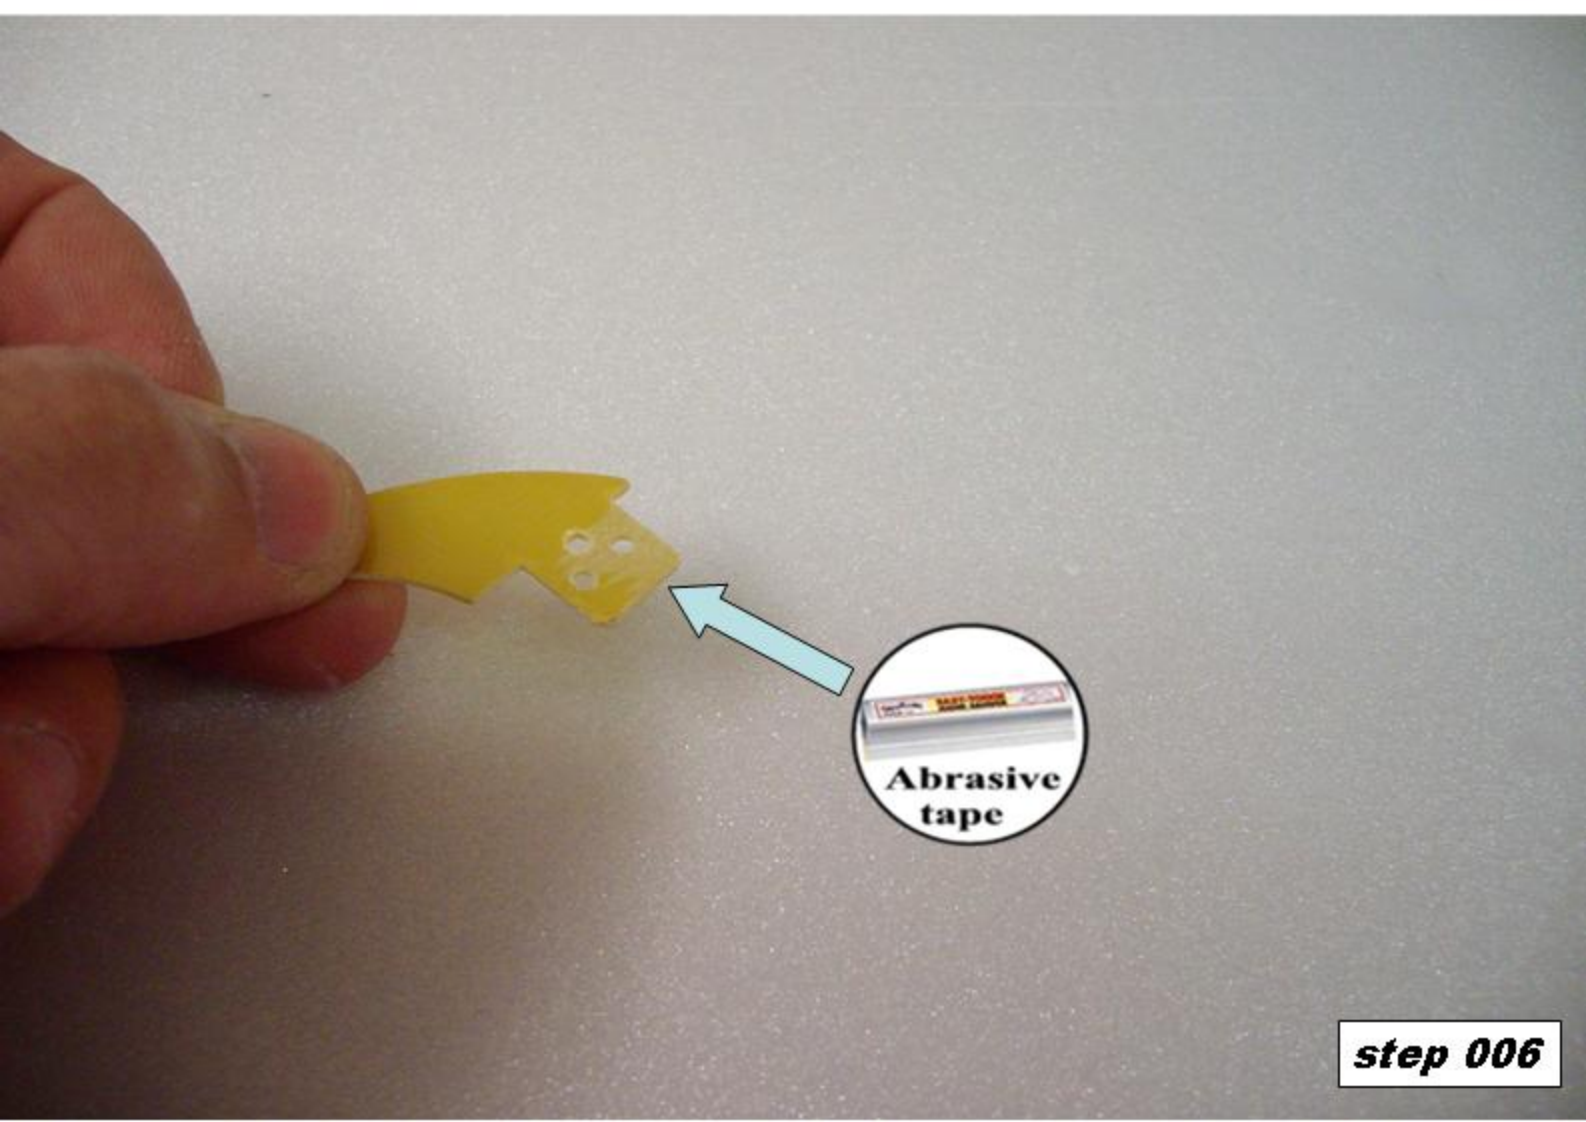
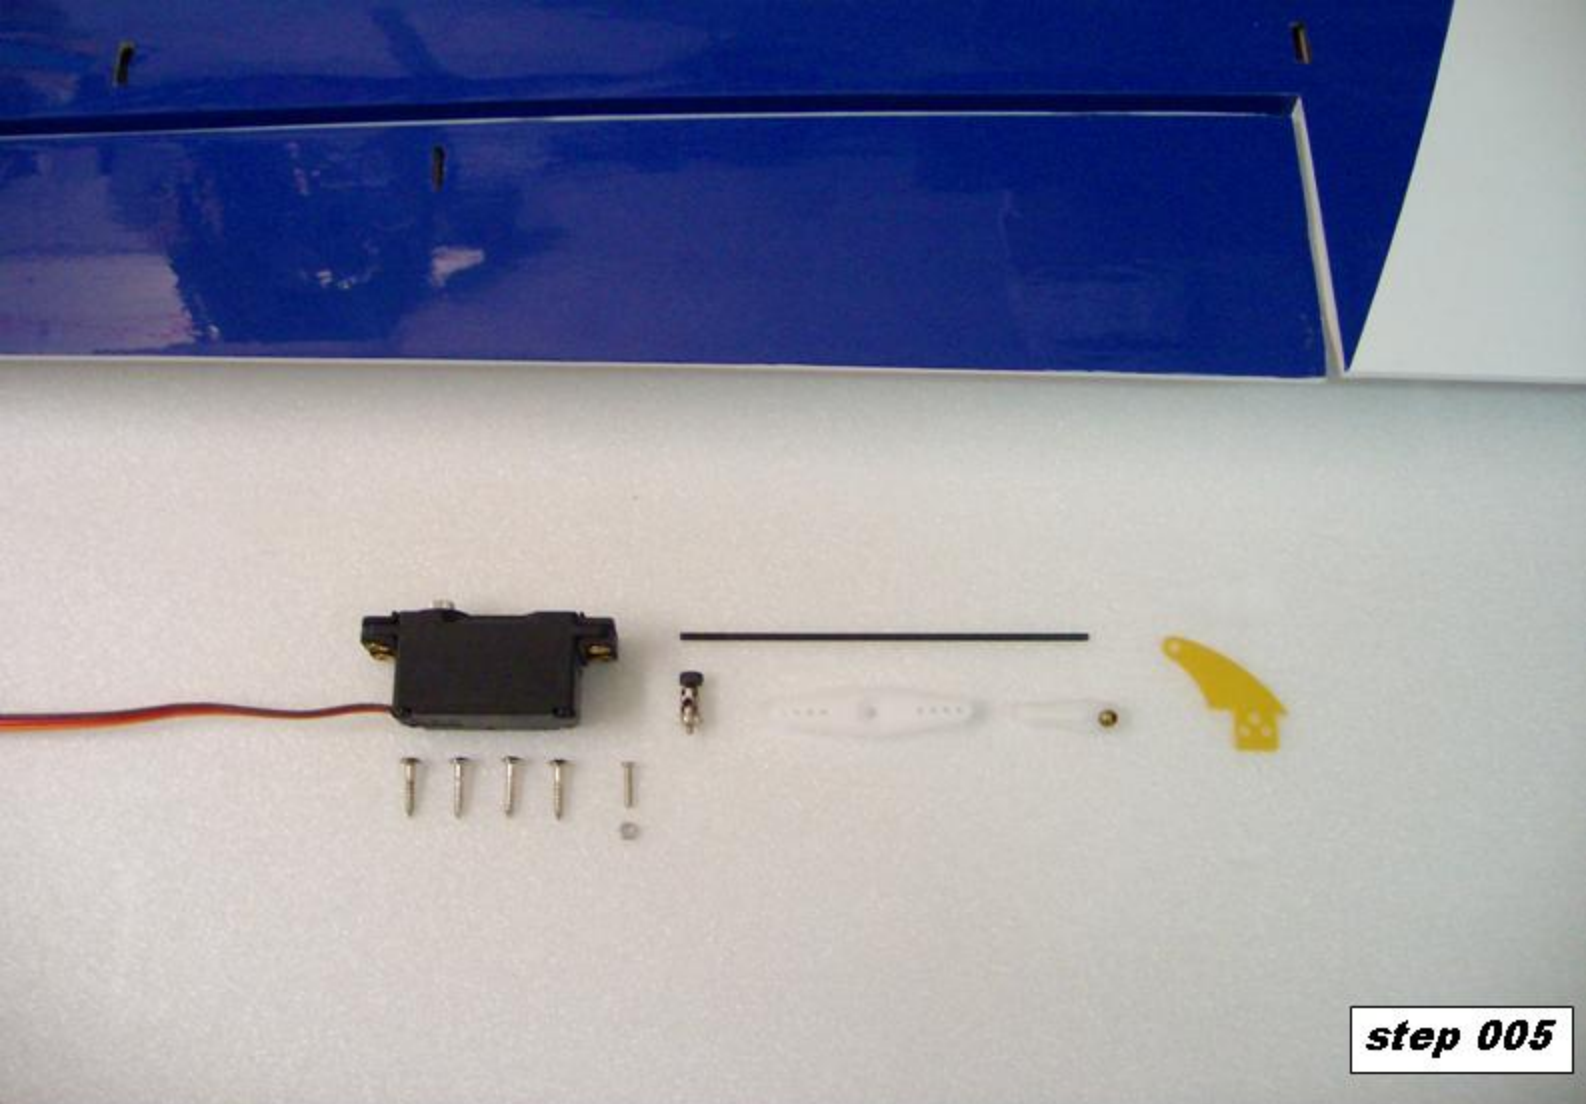








step 007


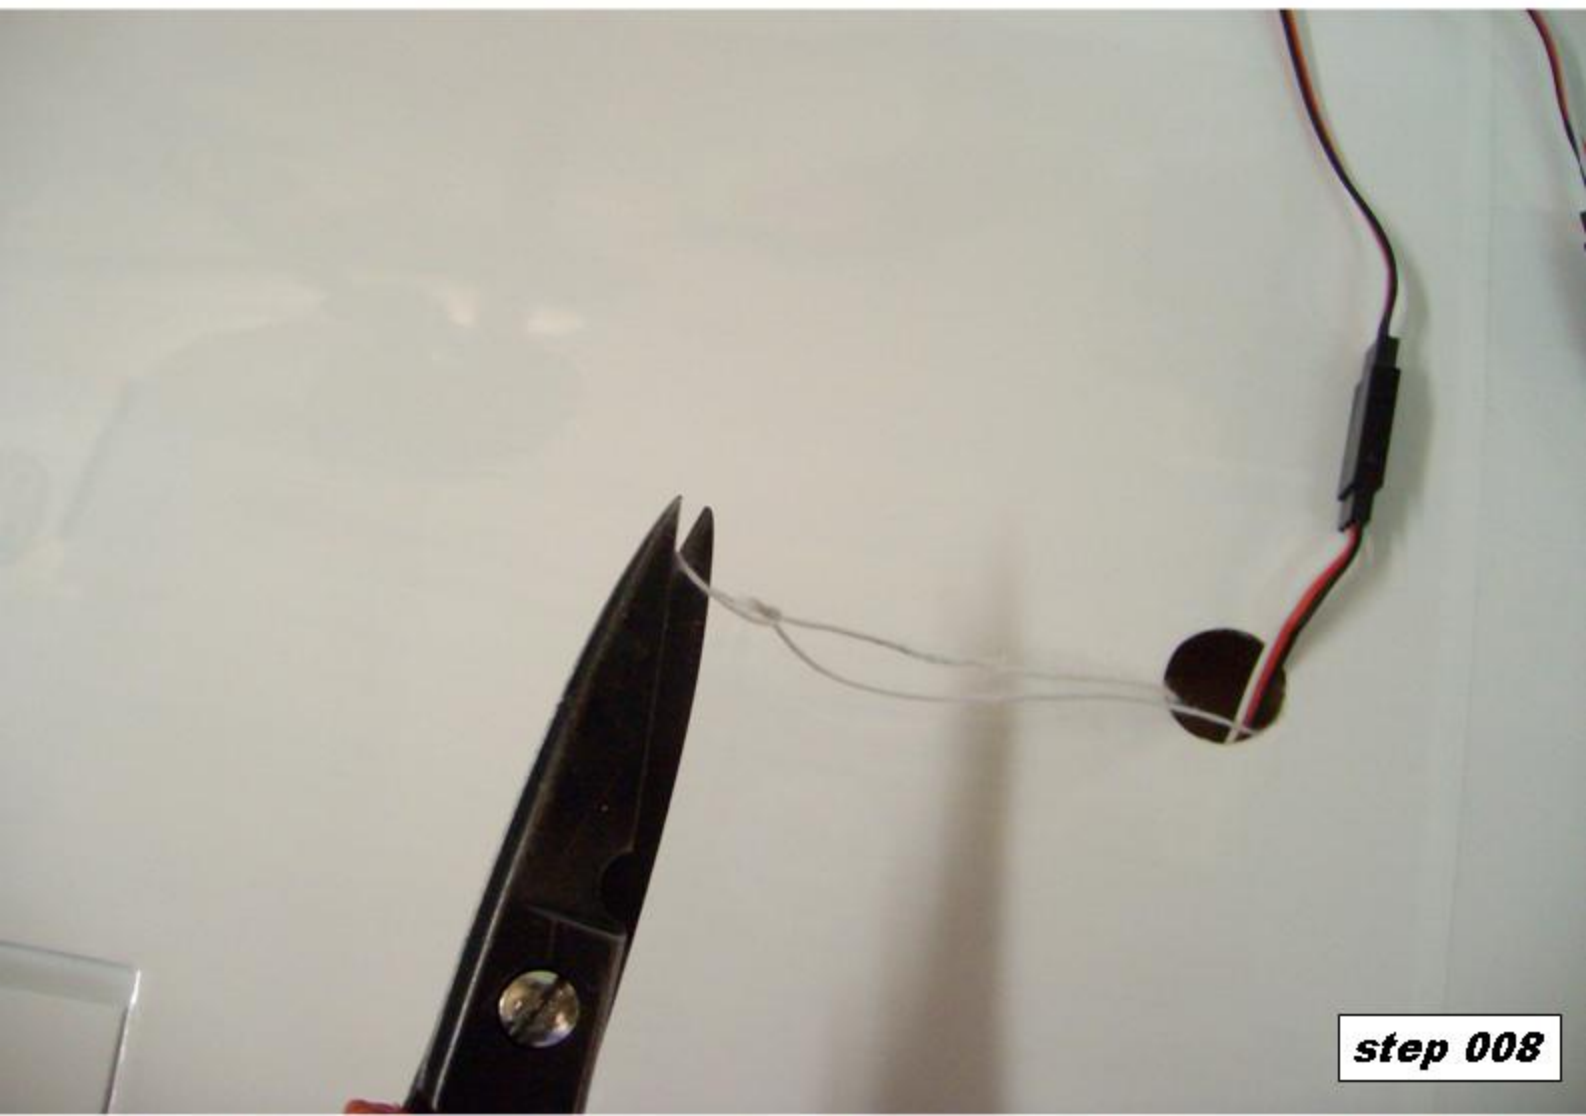




step 008

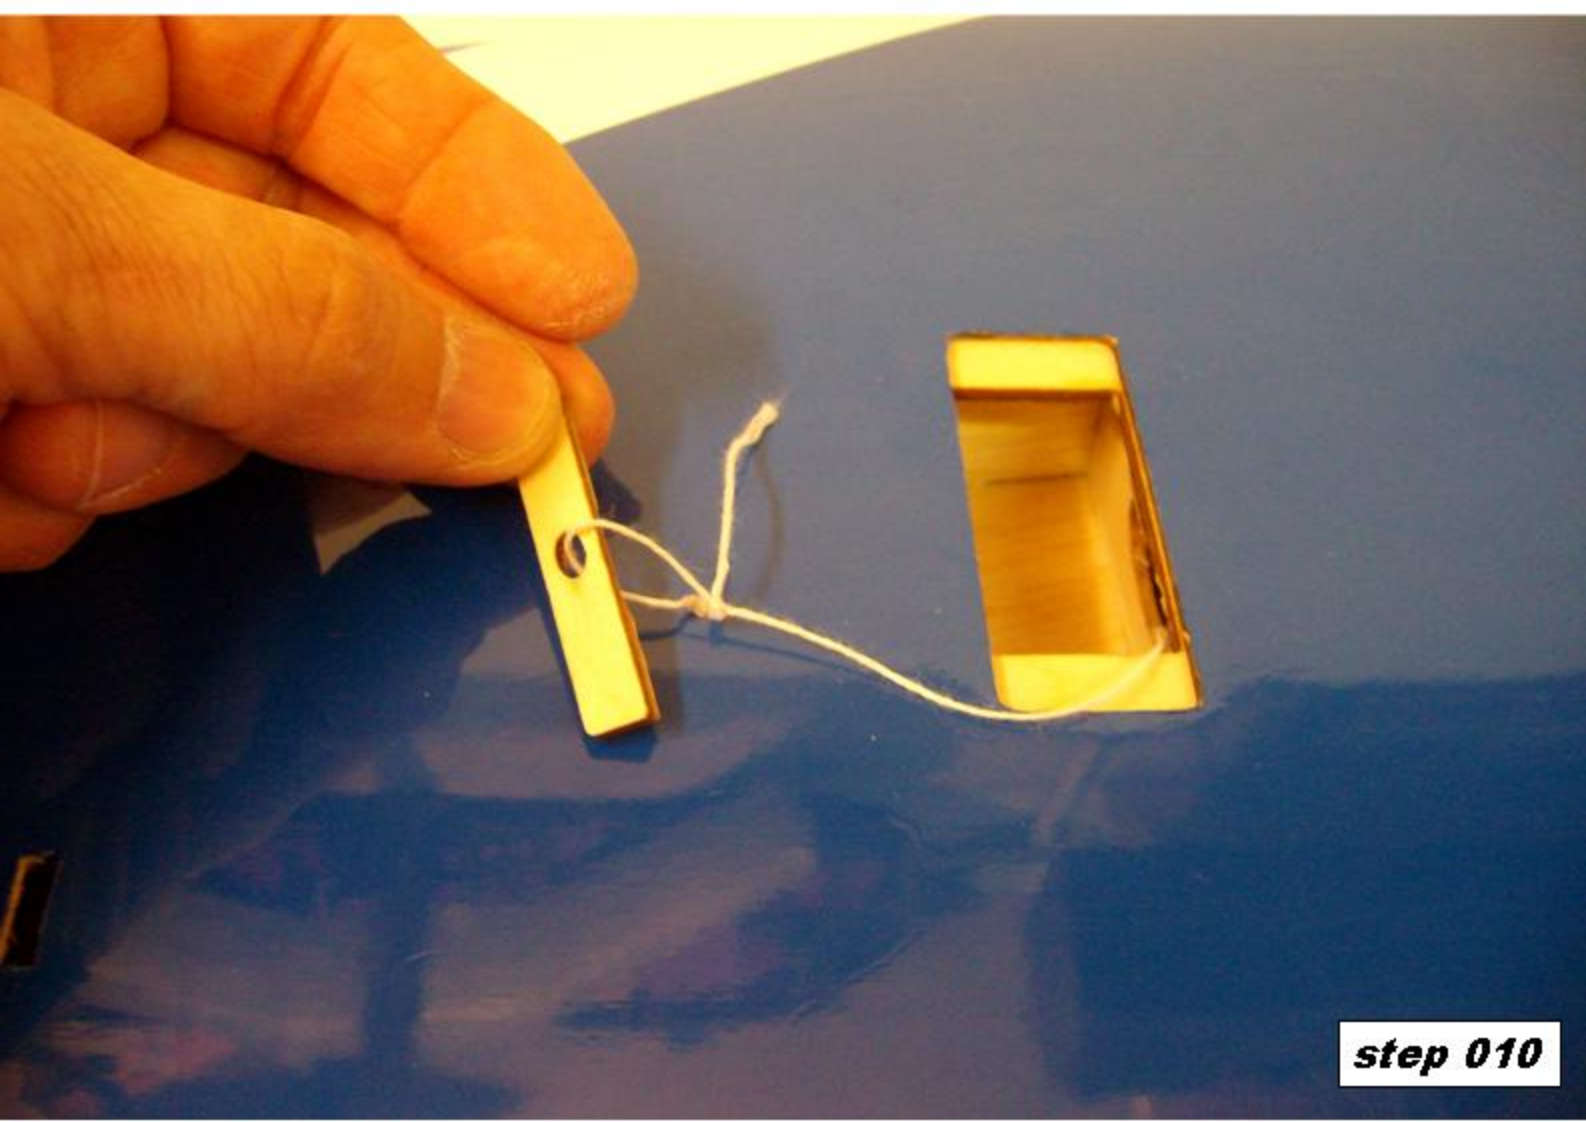
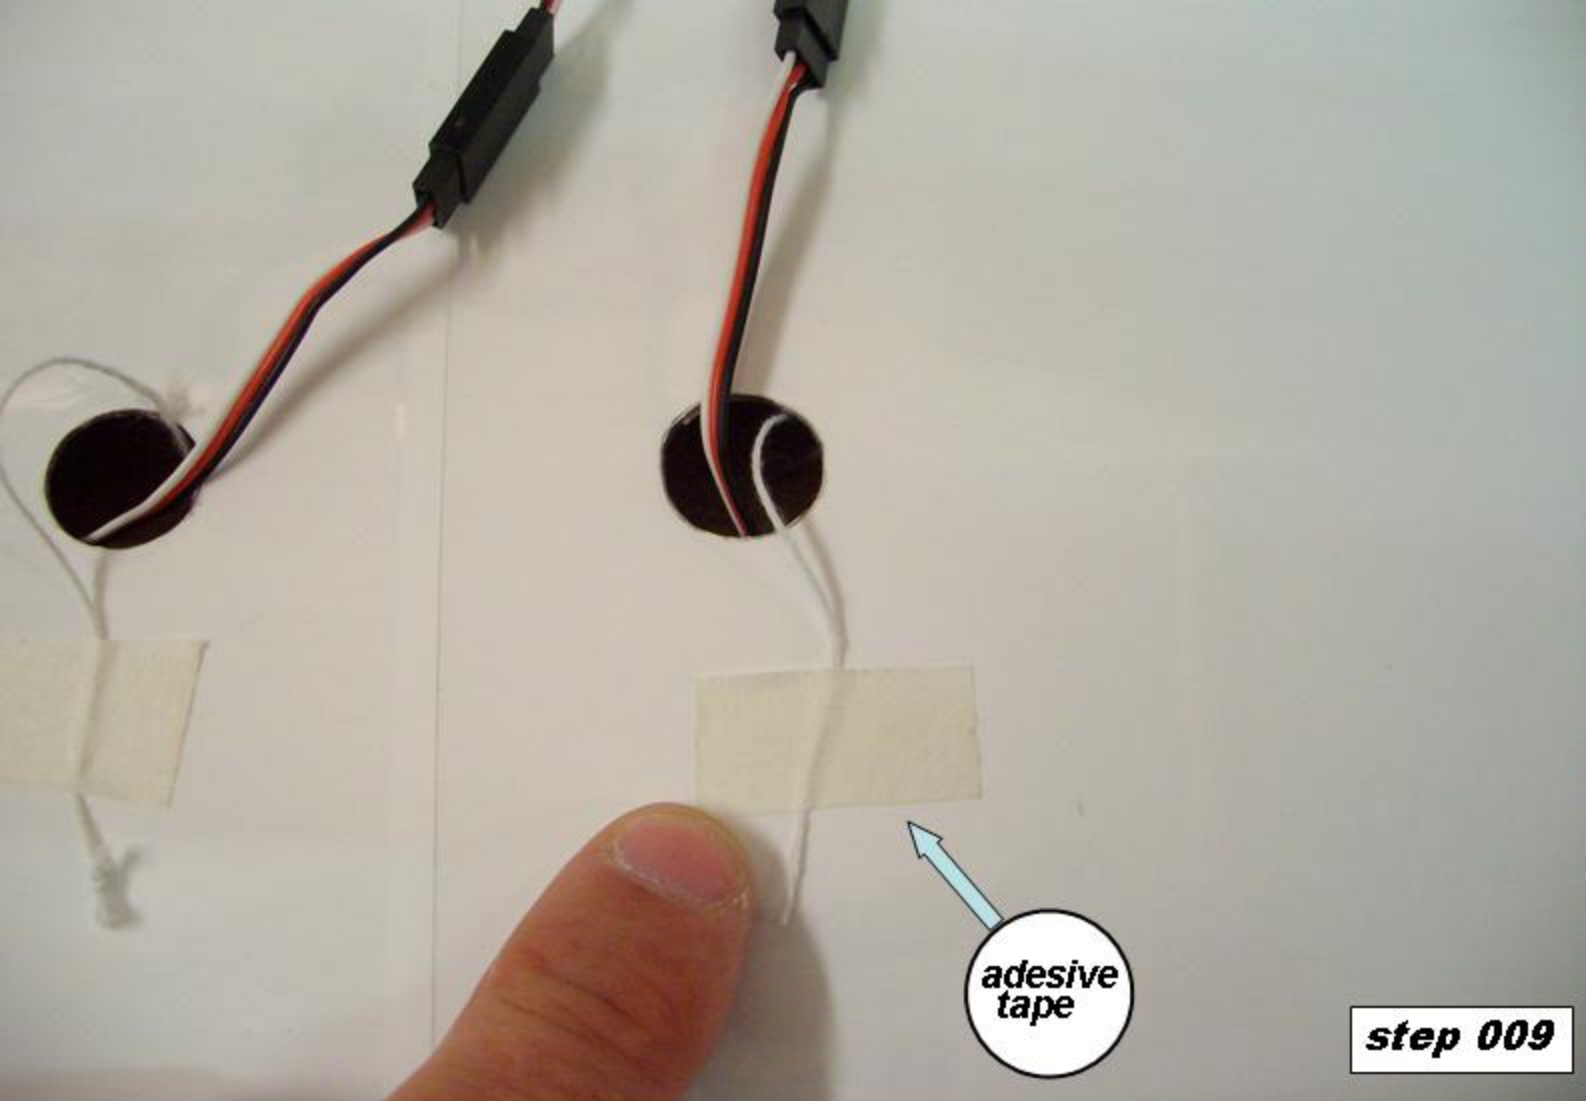


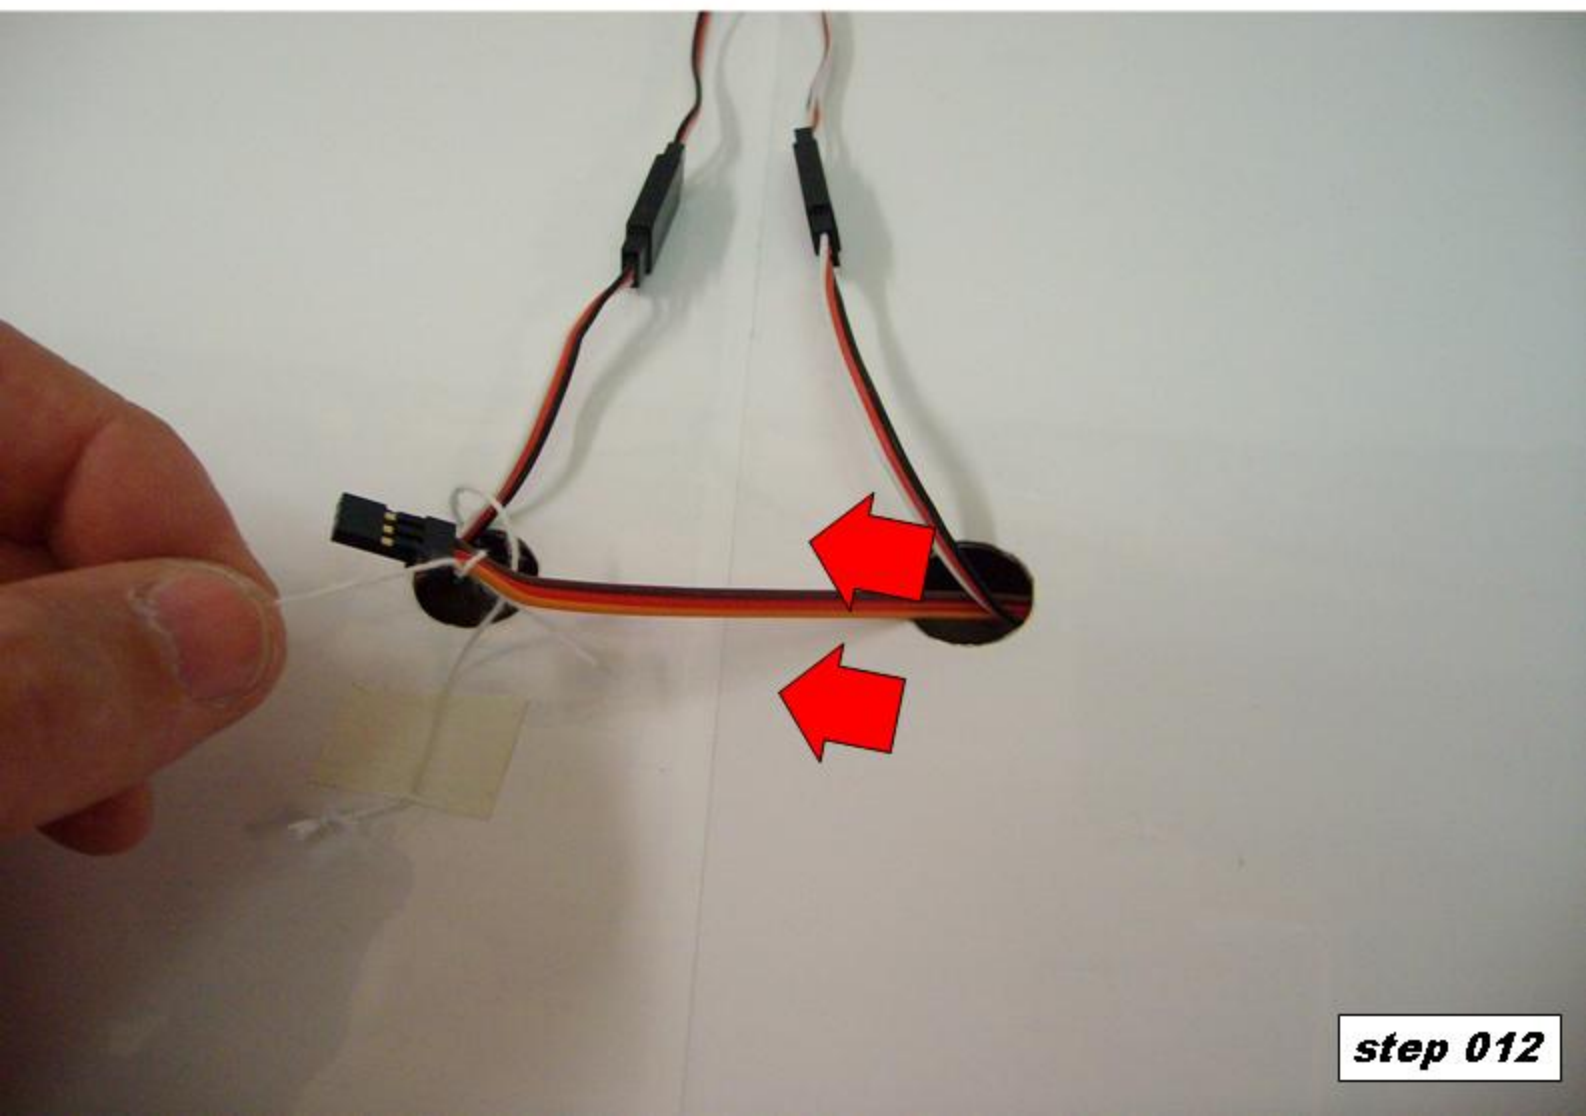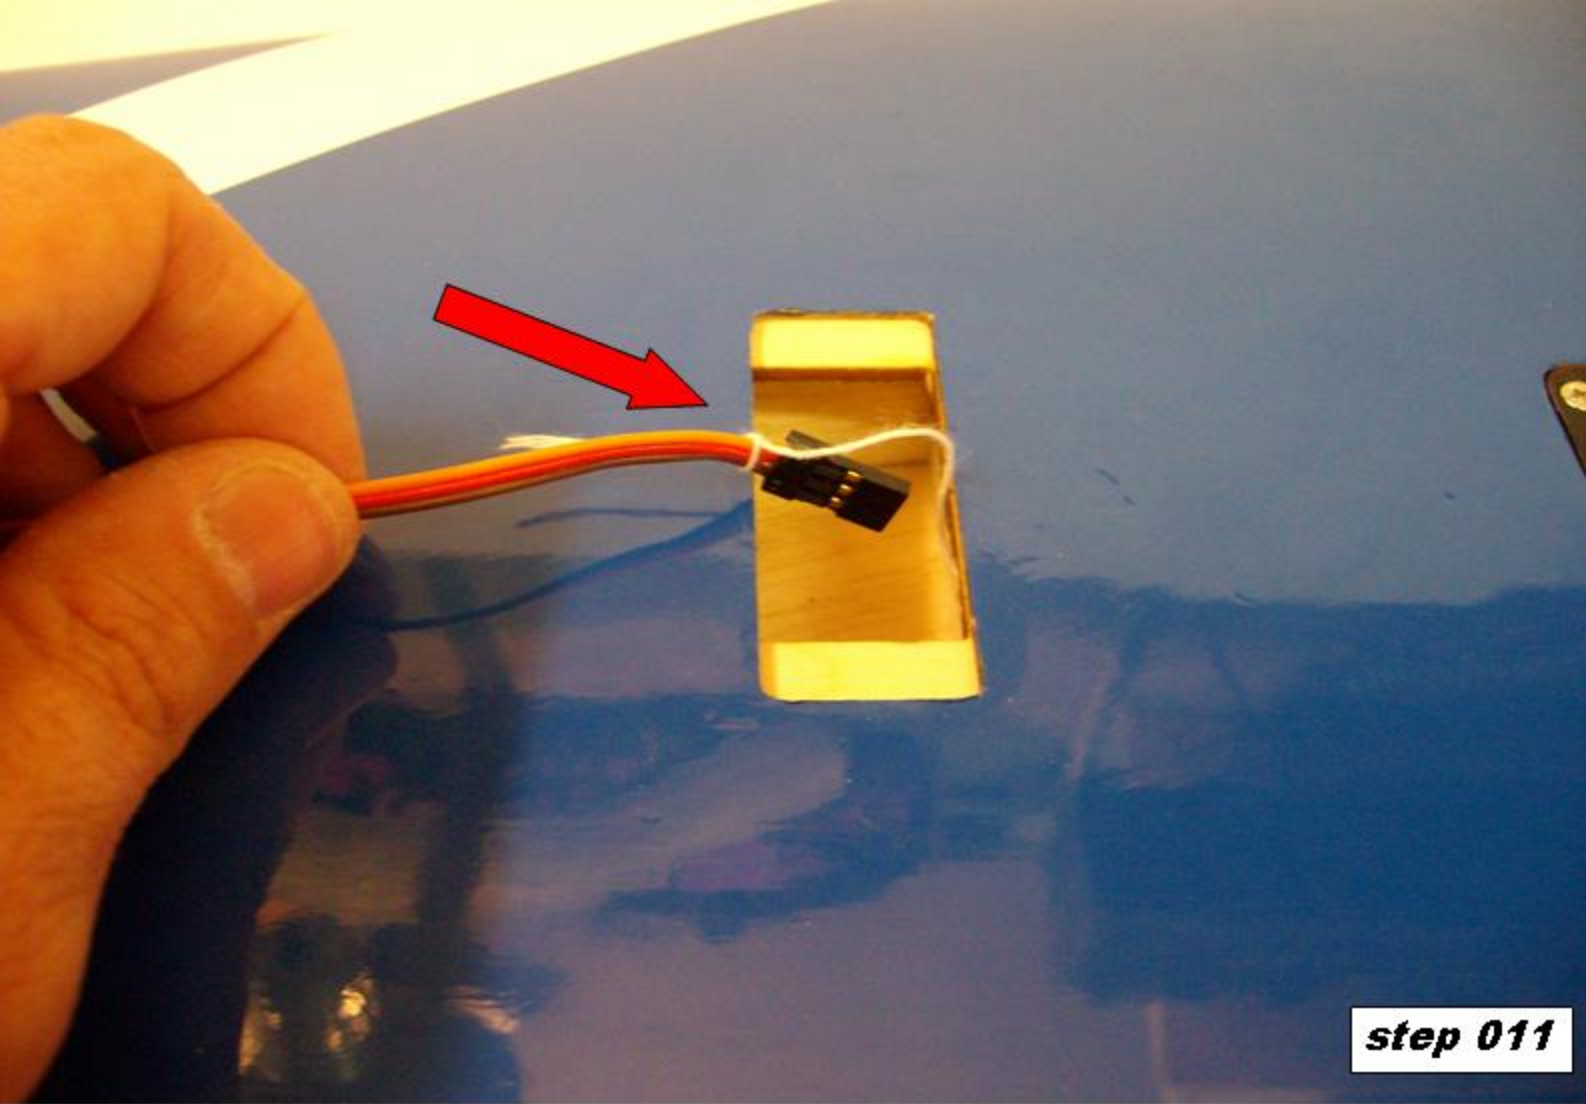


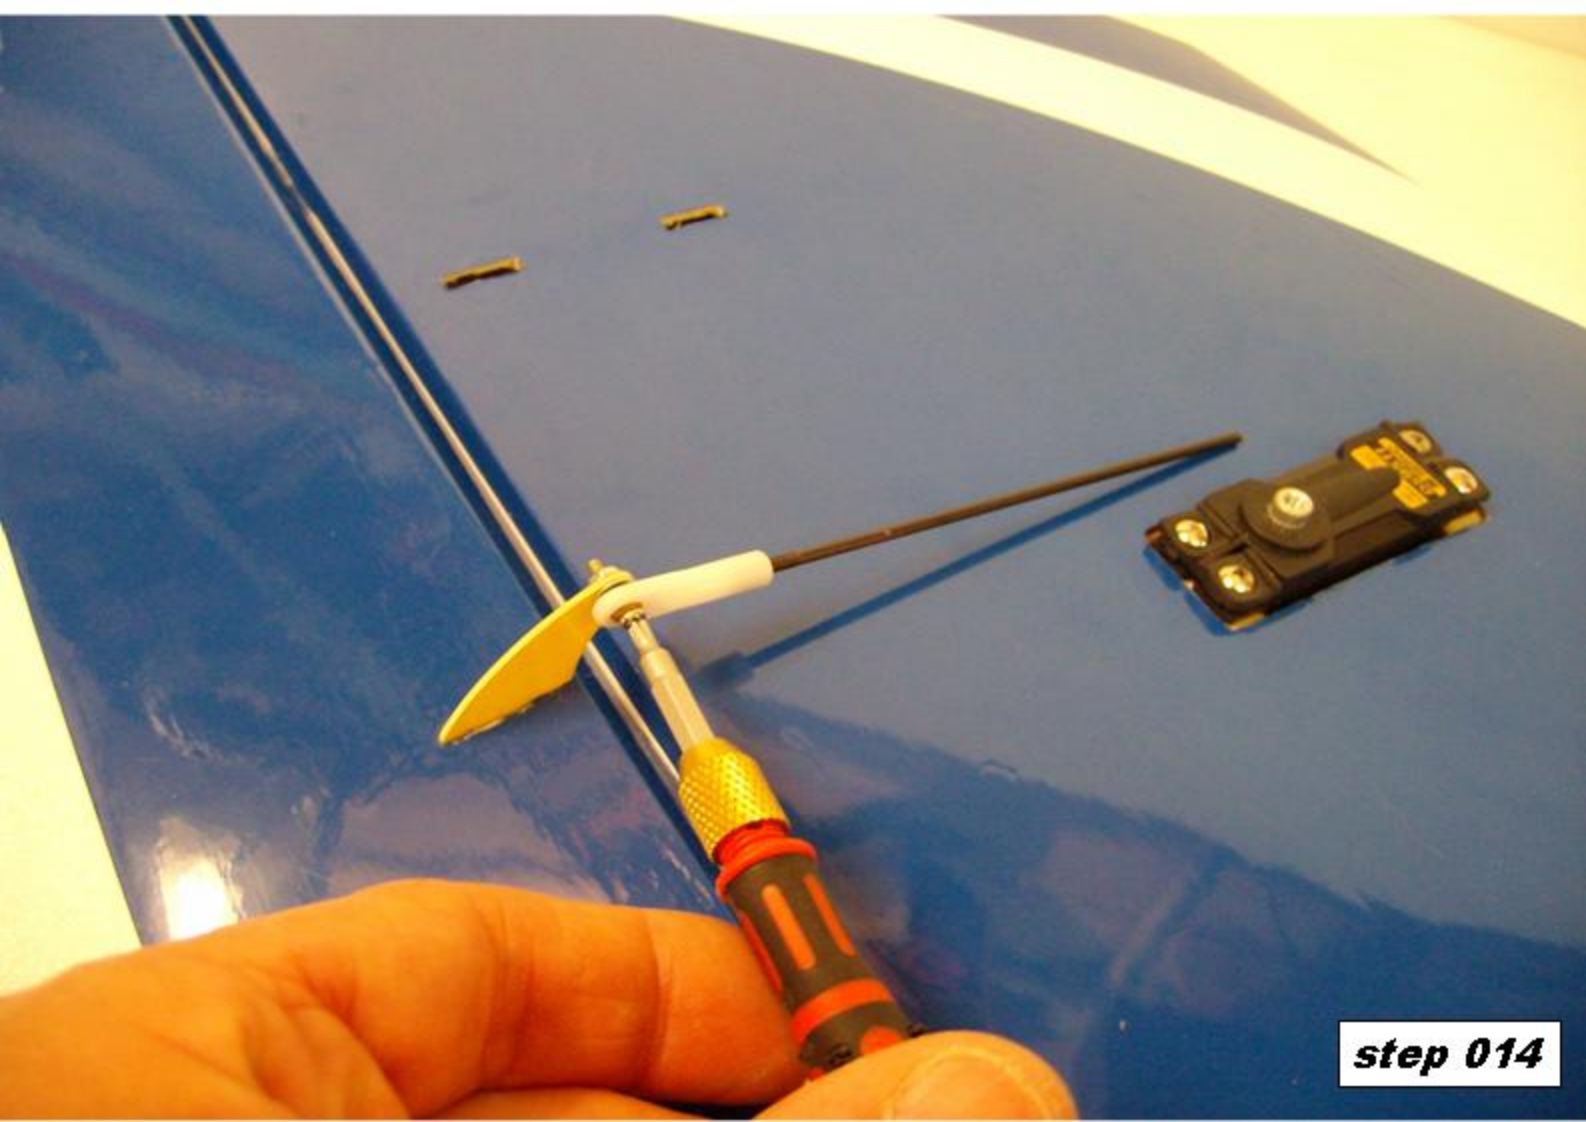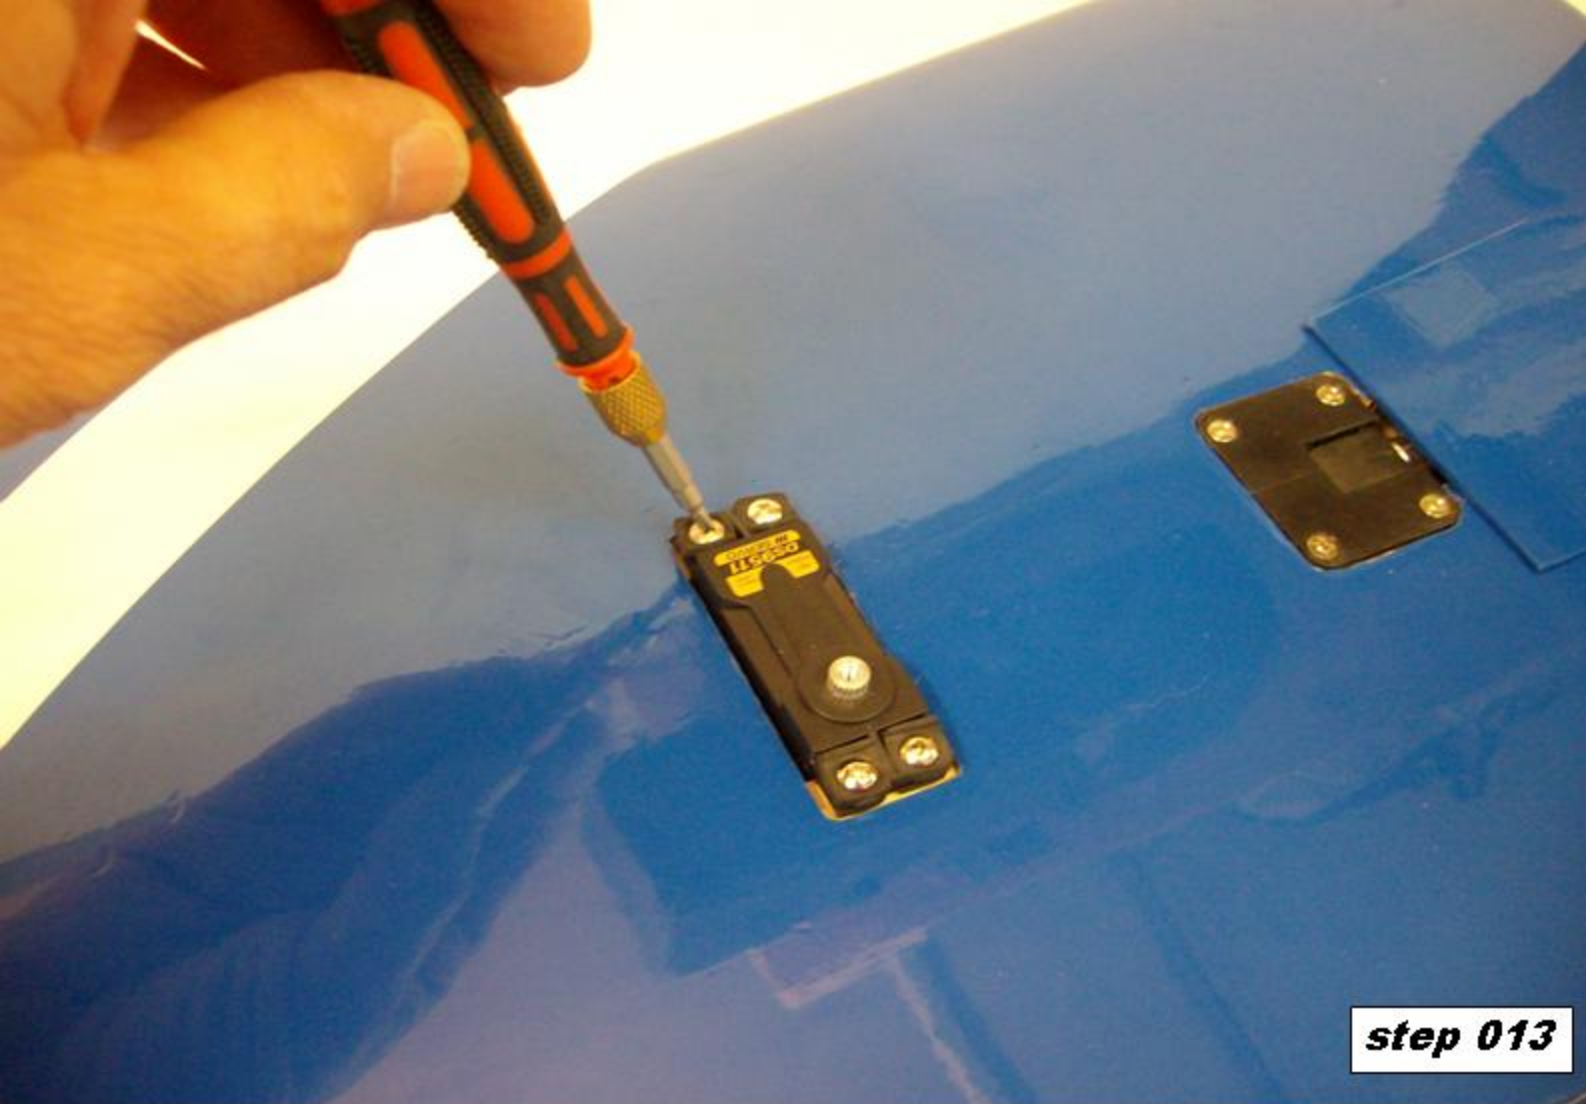


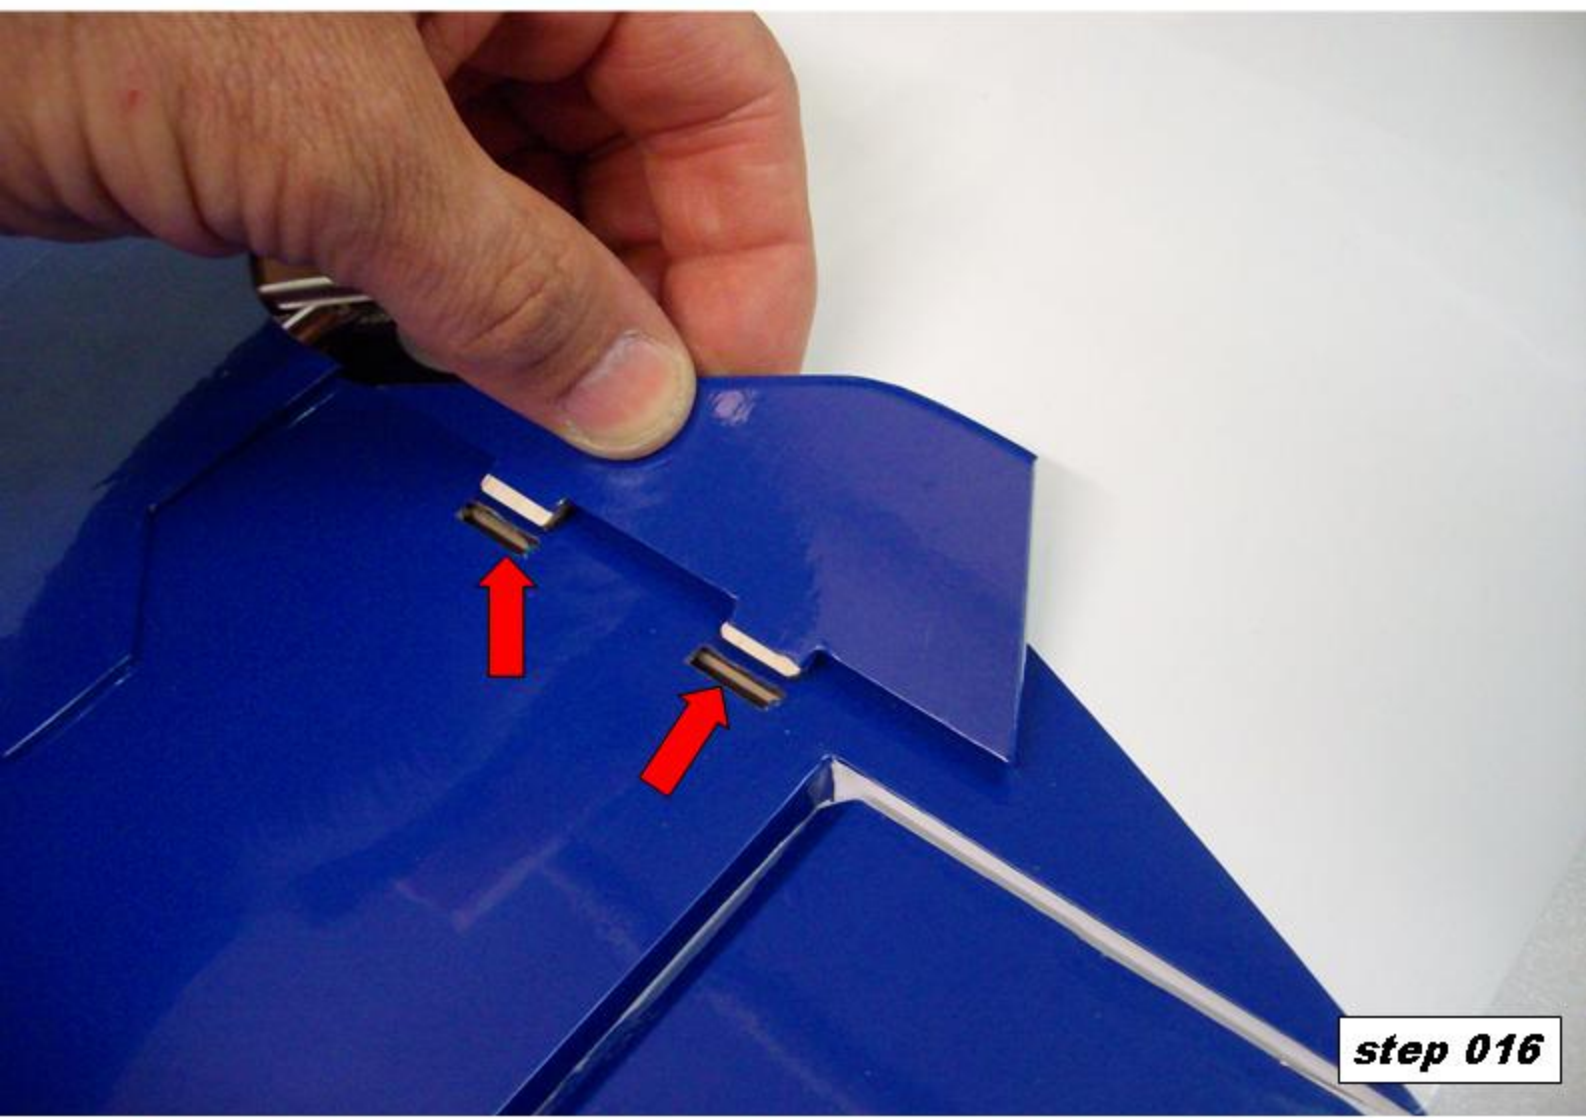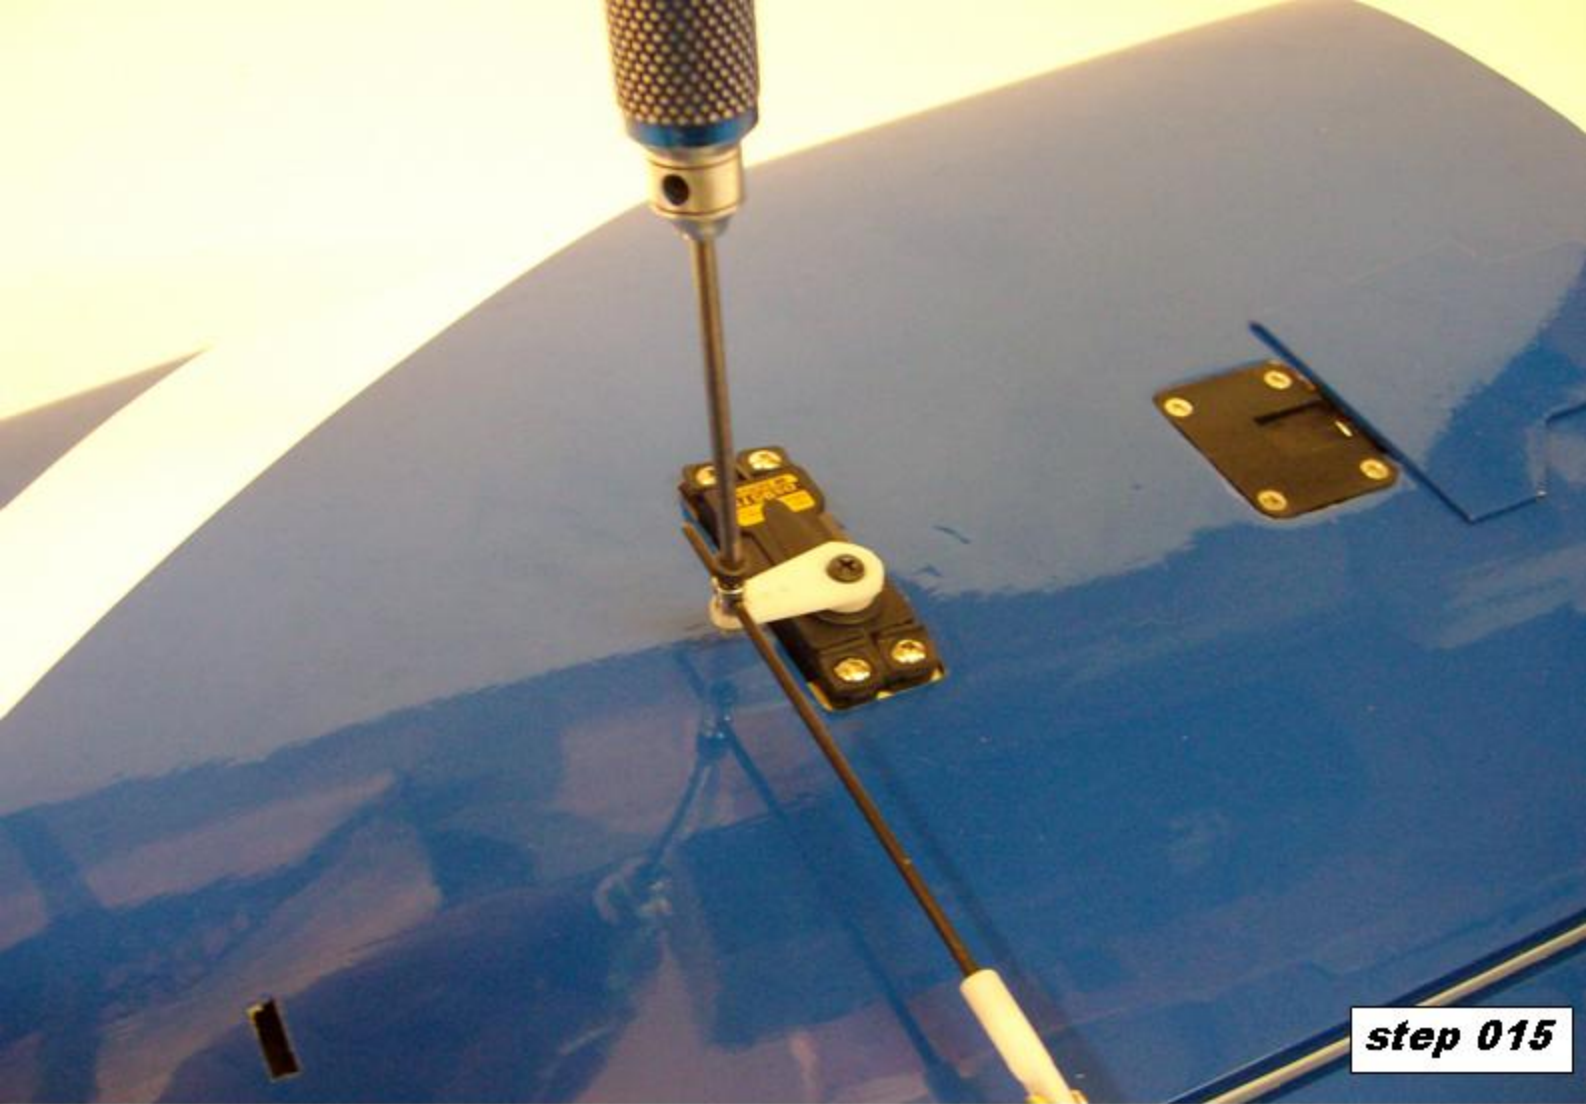

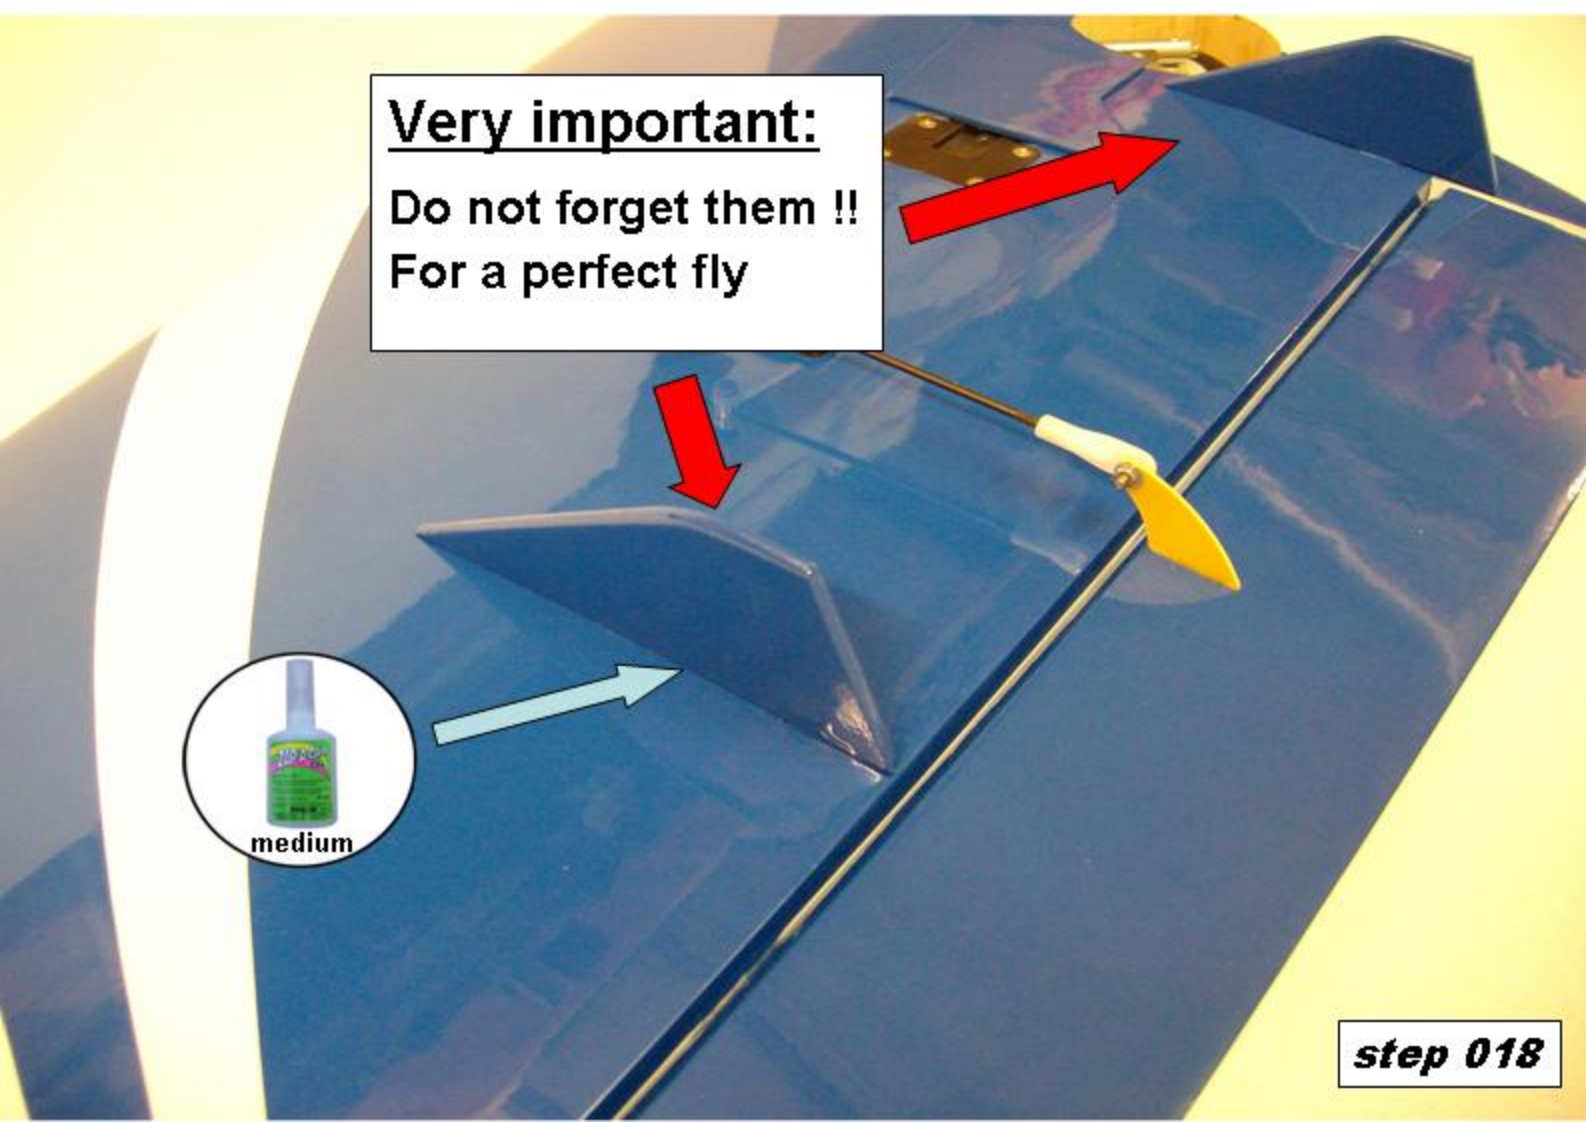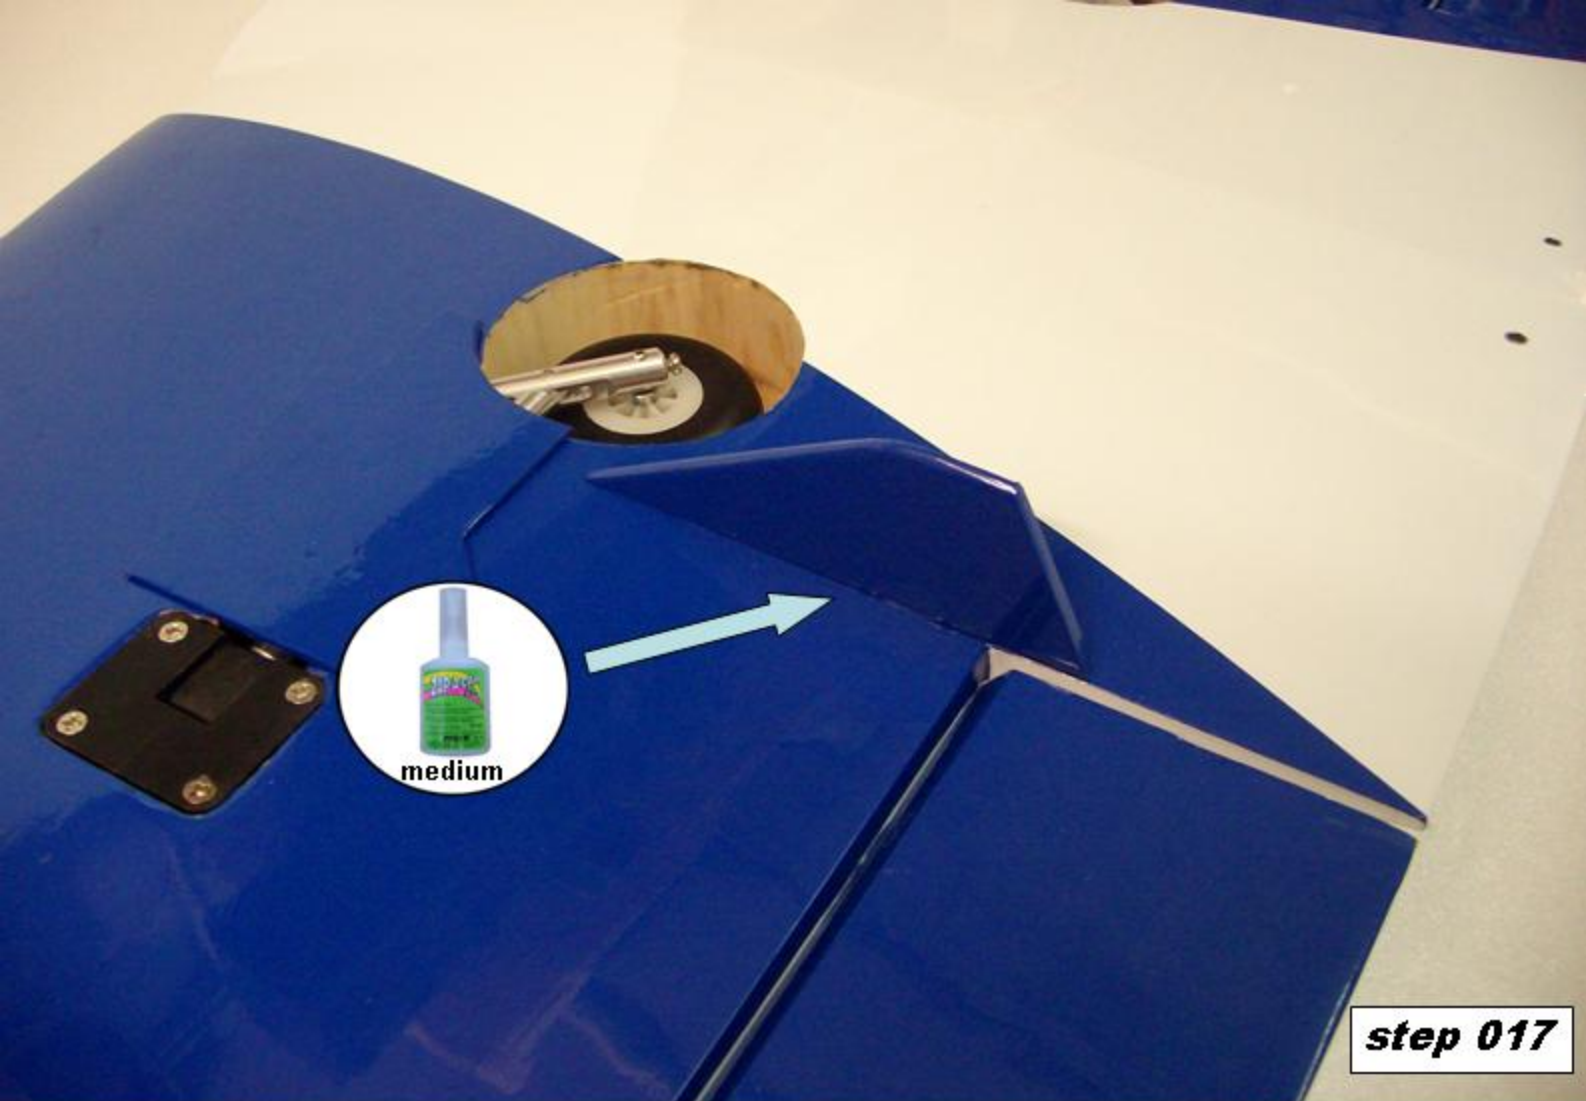


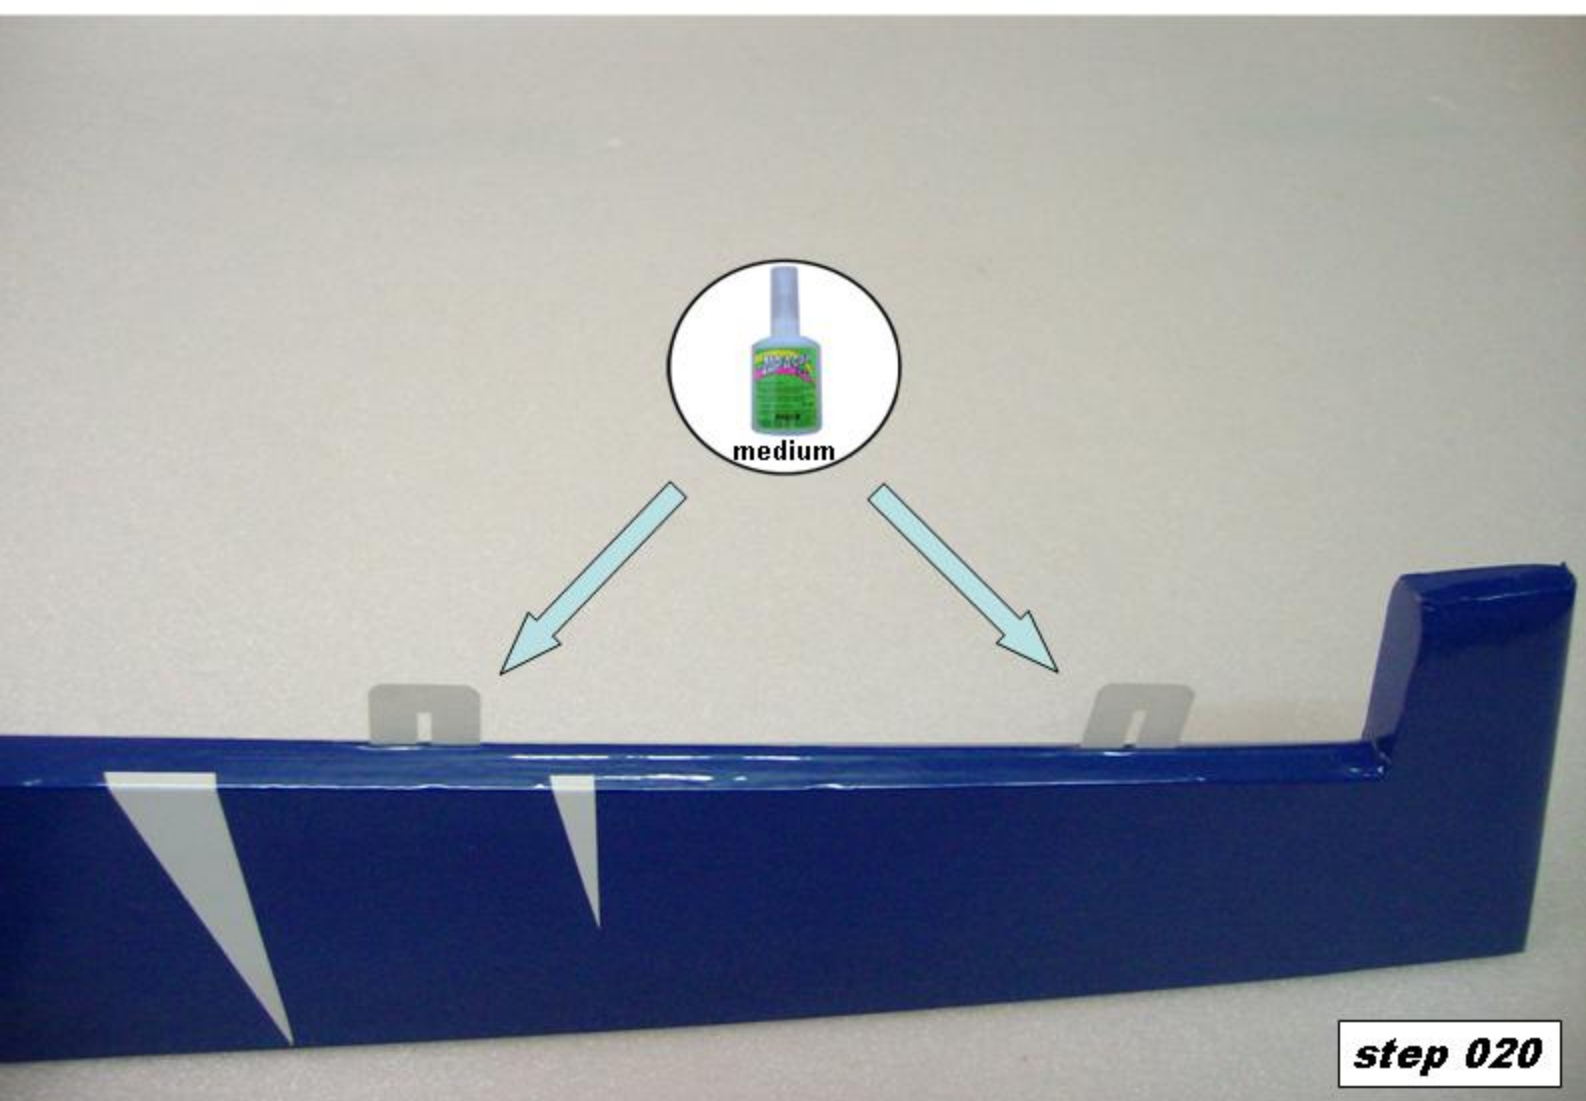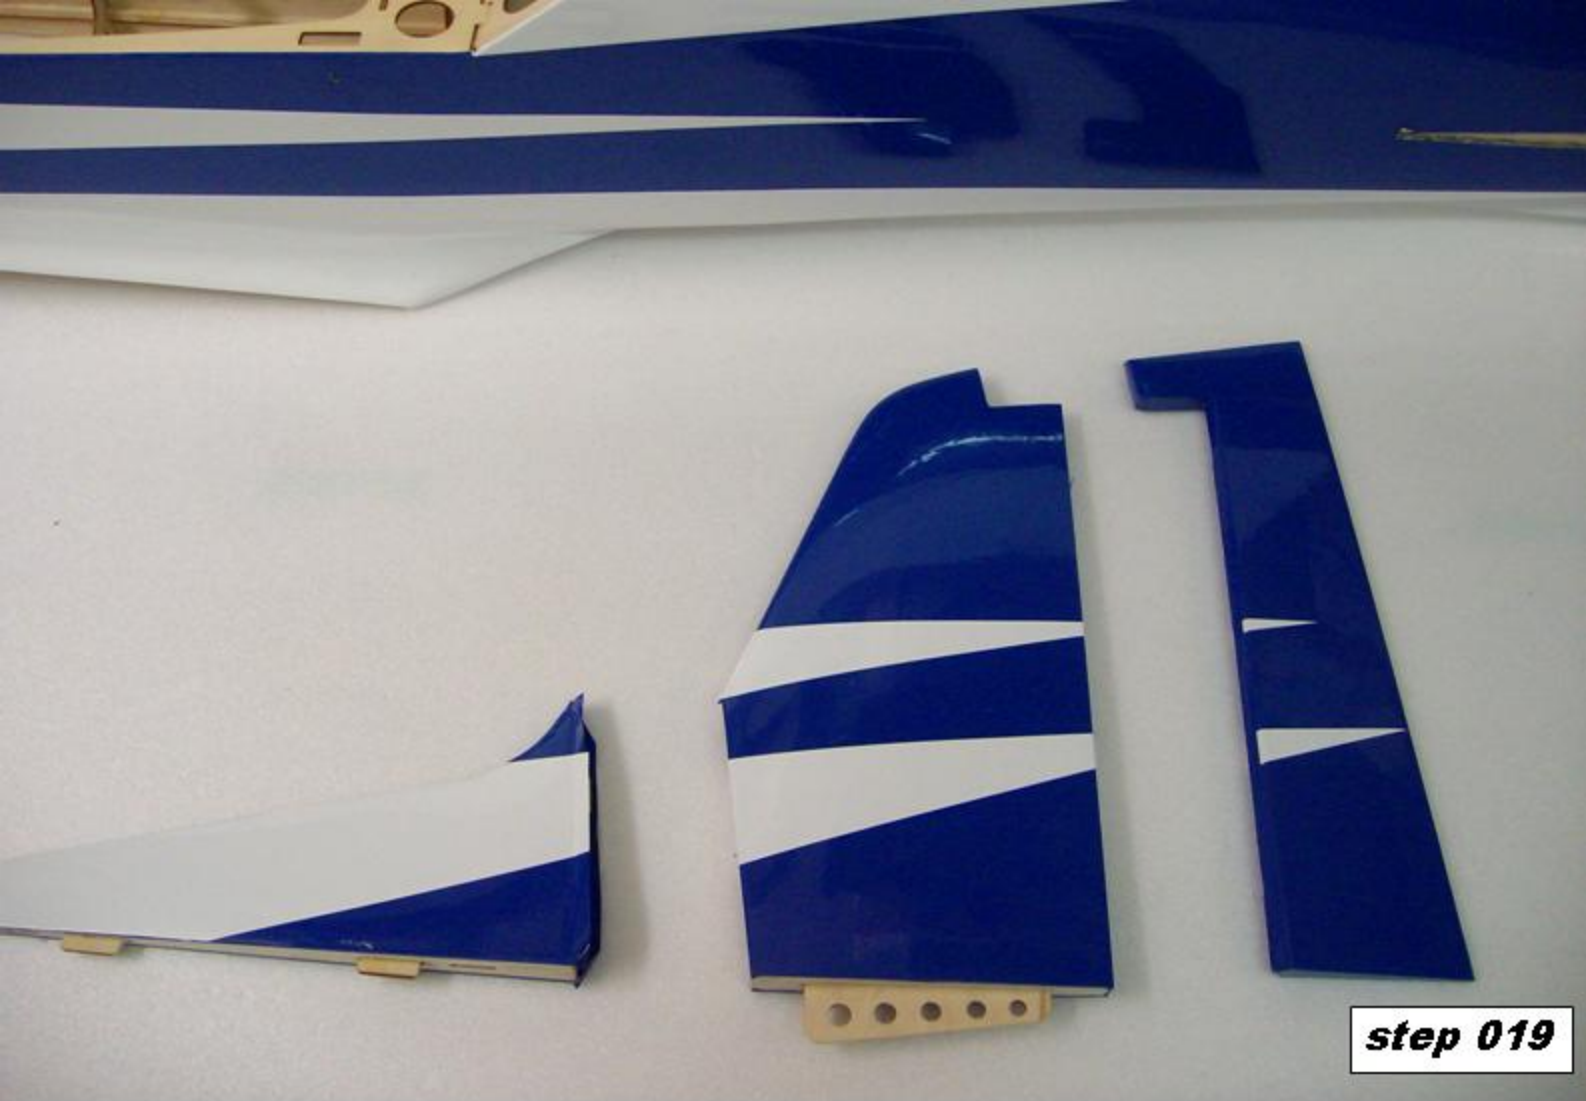

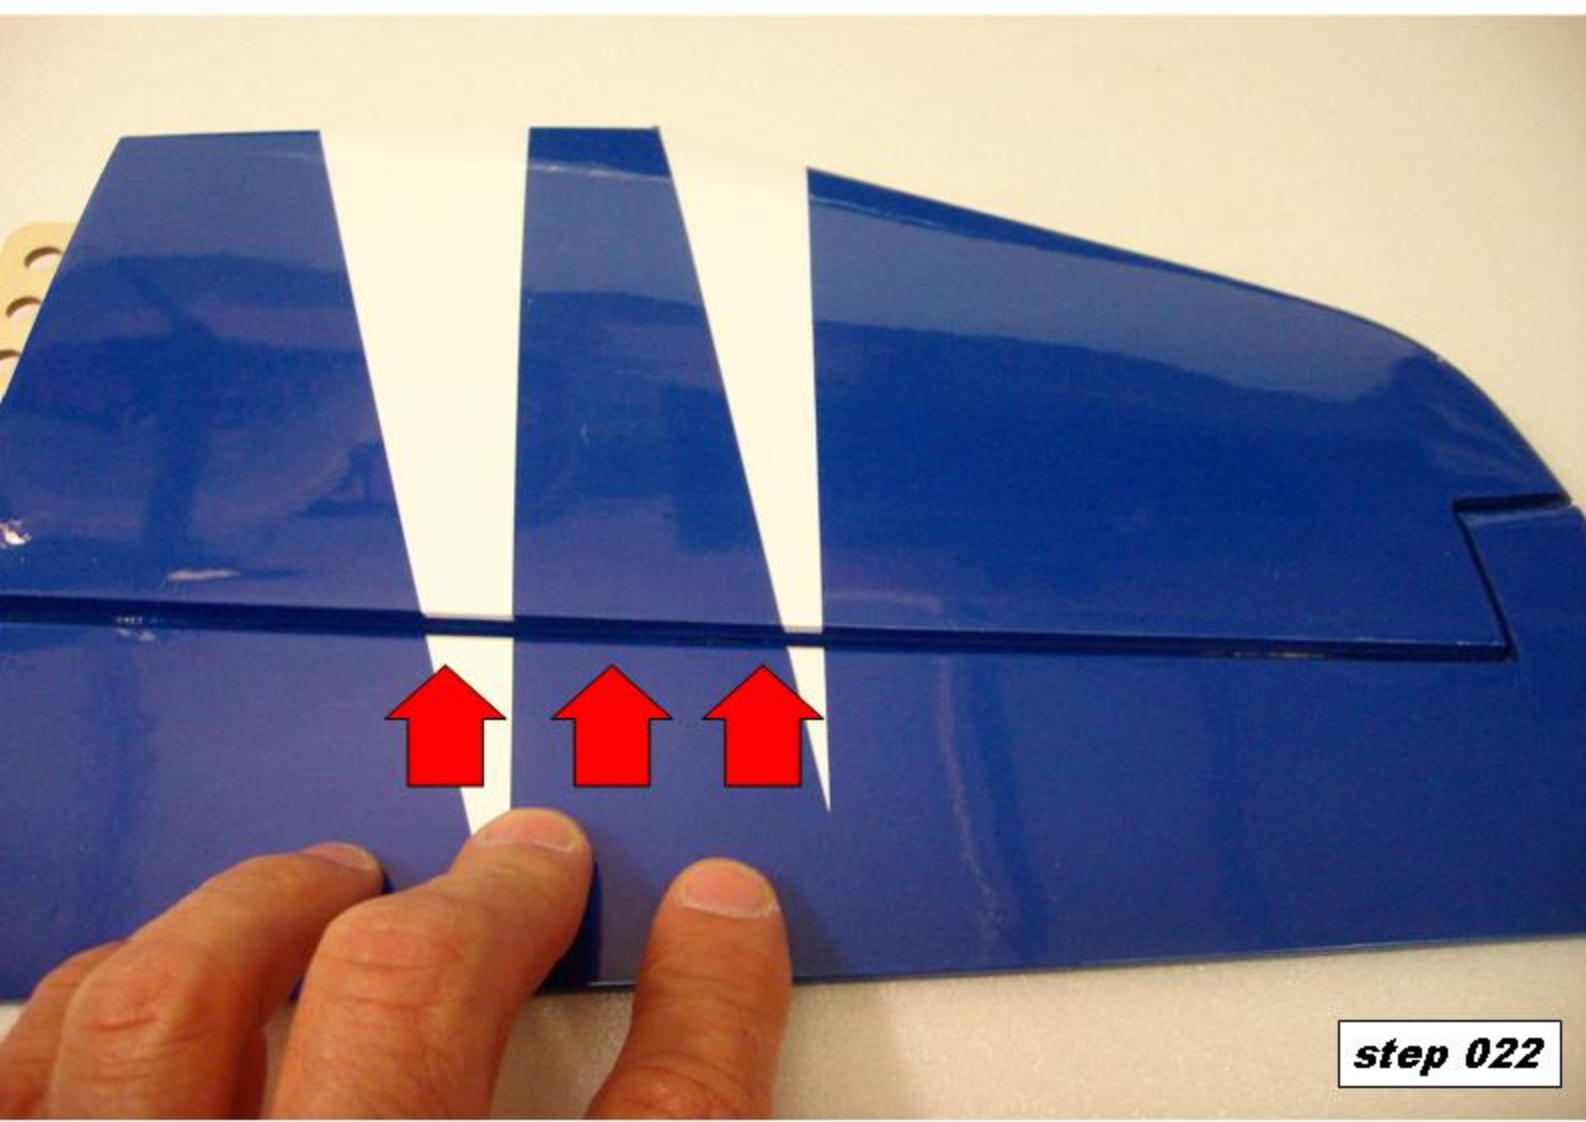

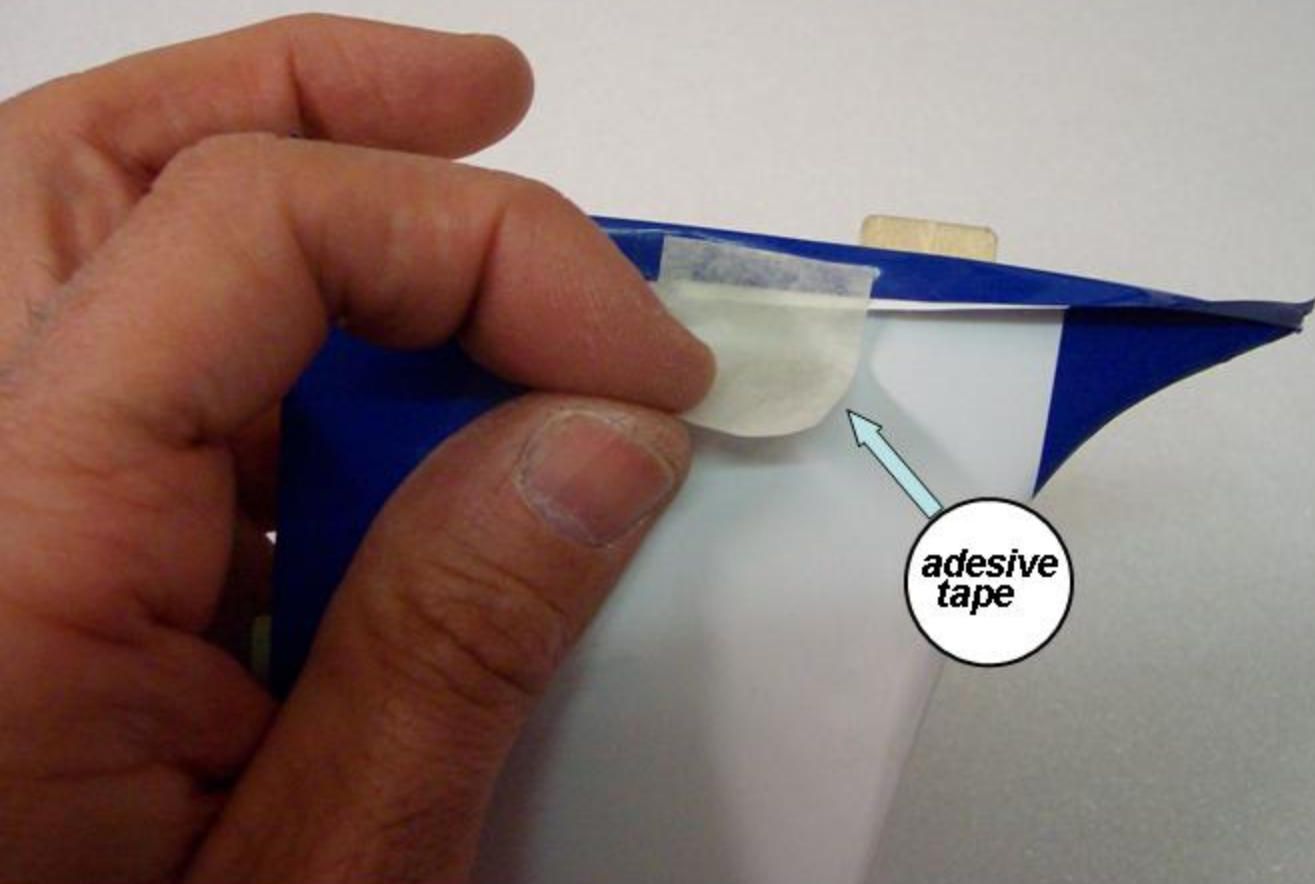


step 023

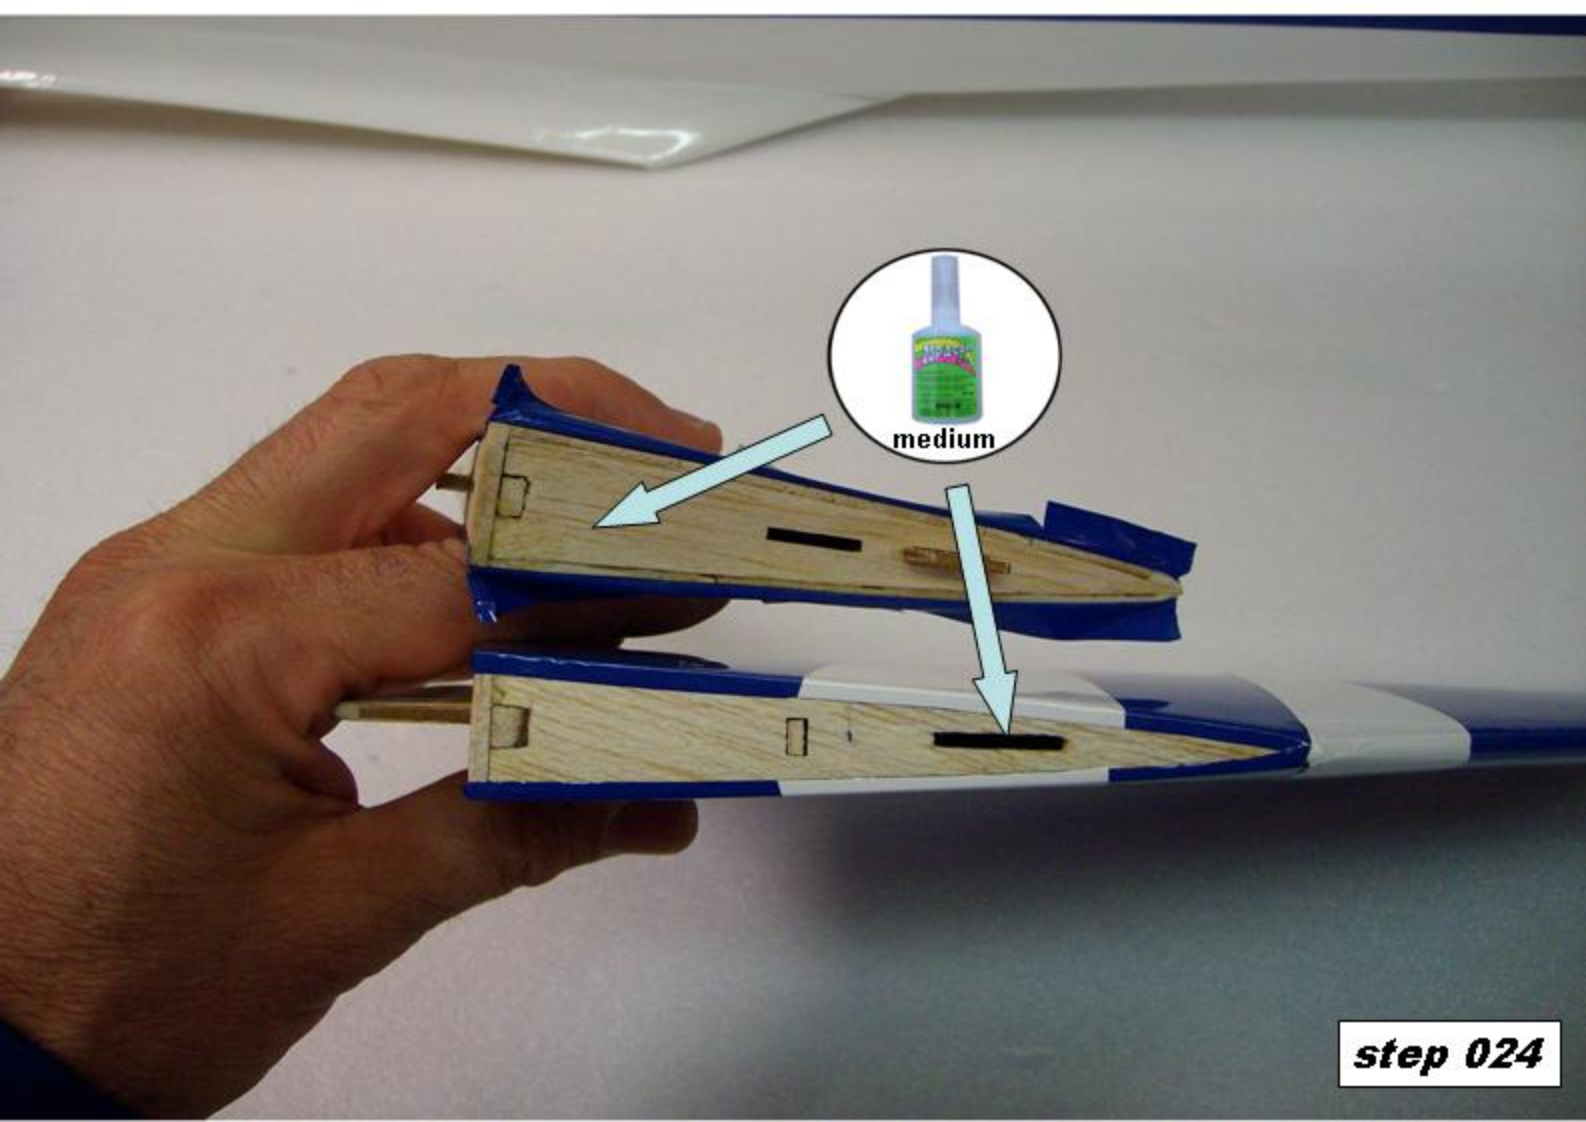



step 024






step 025

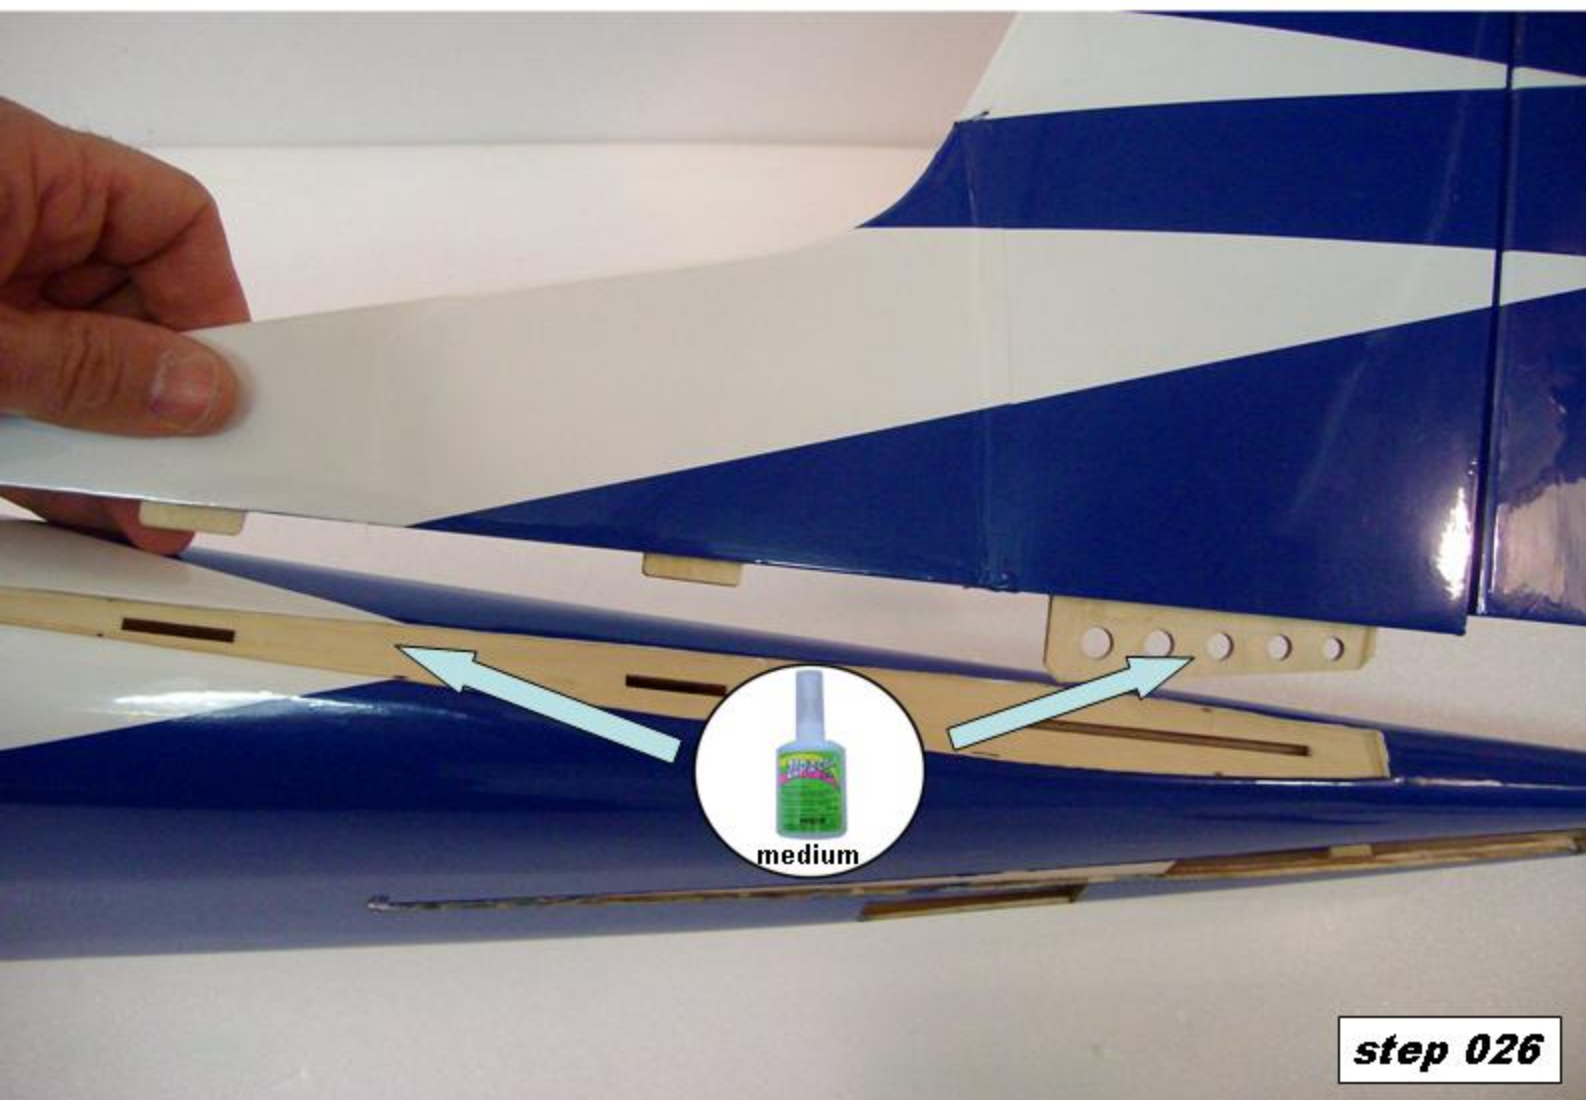




step 026

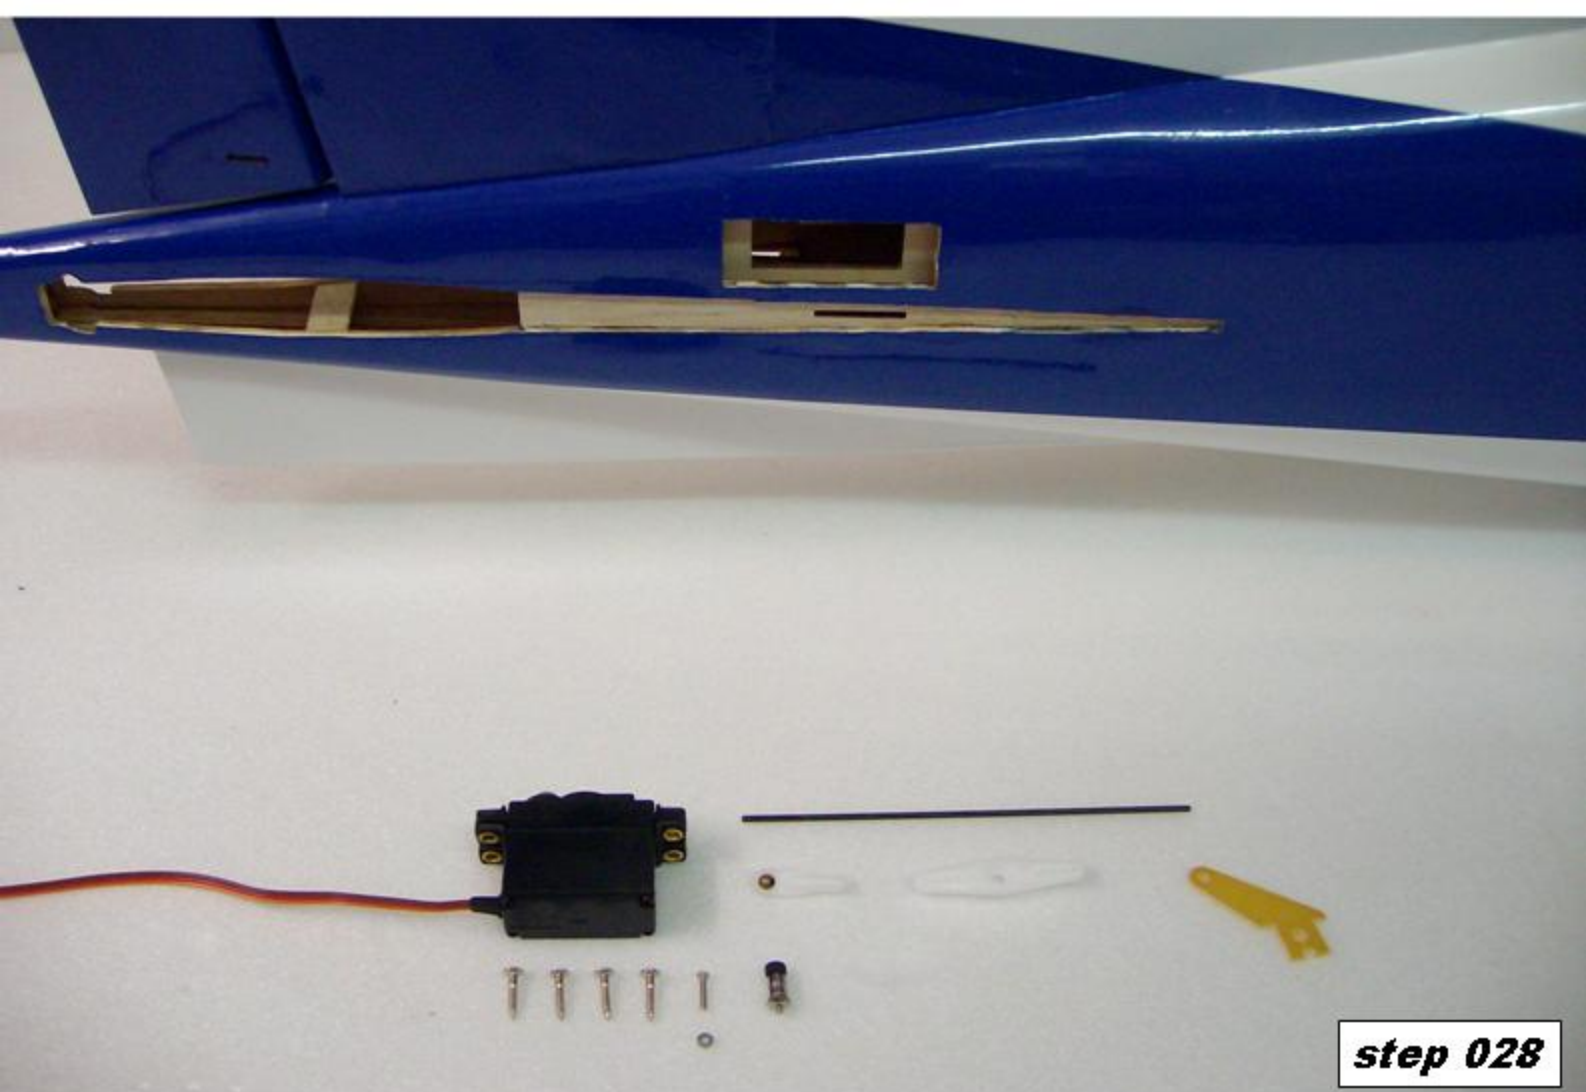
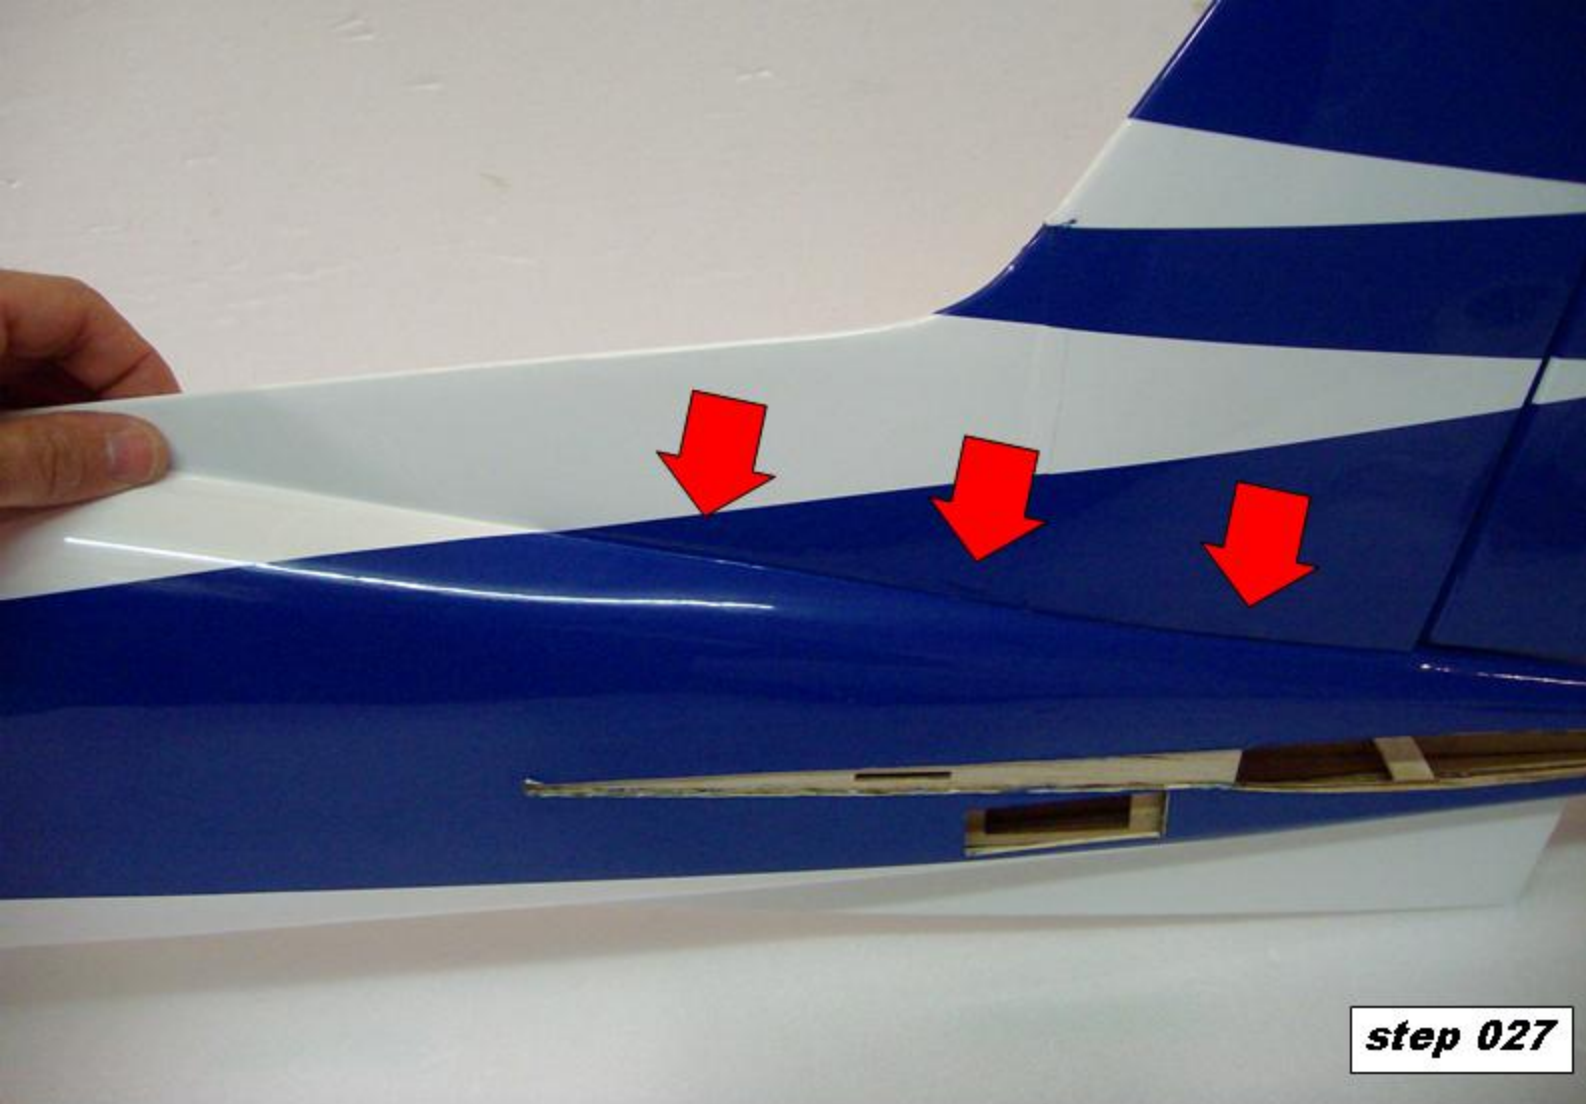


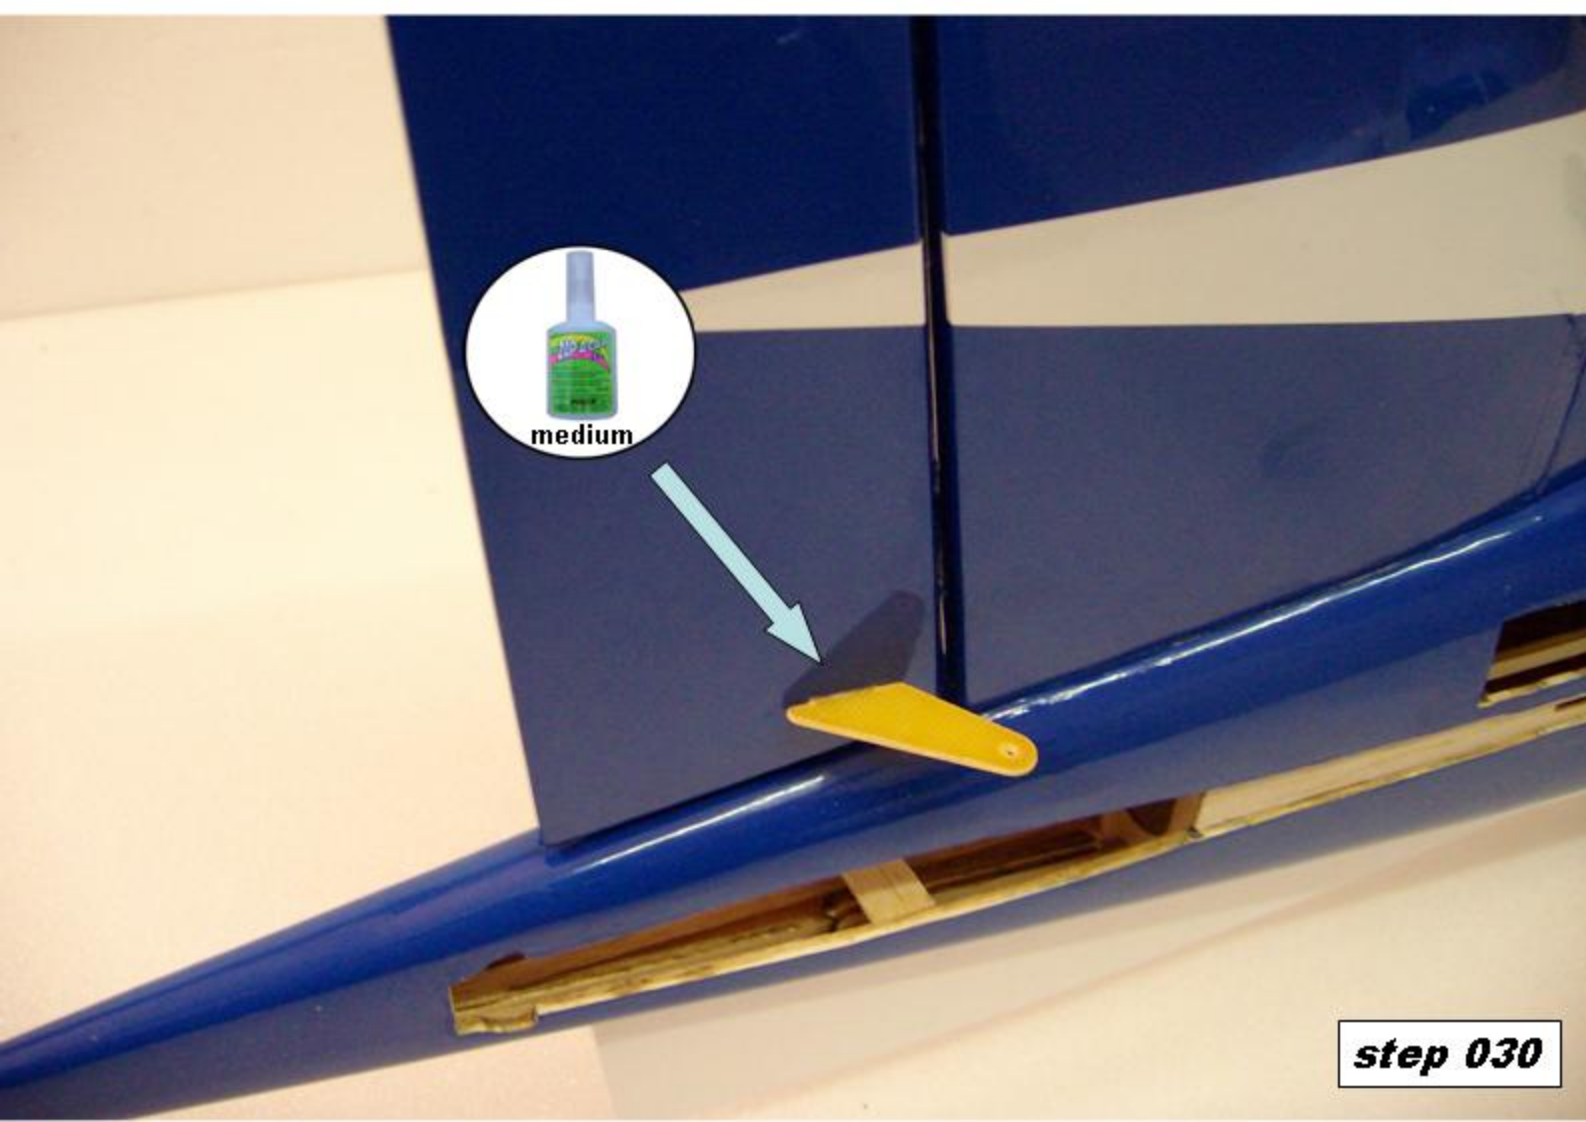
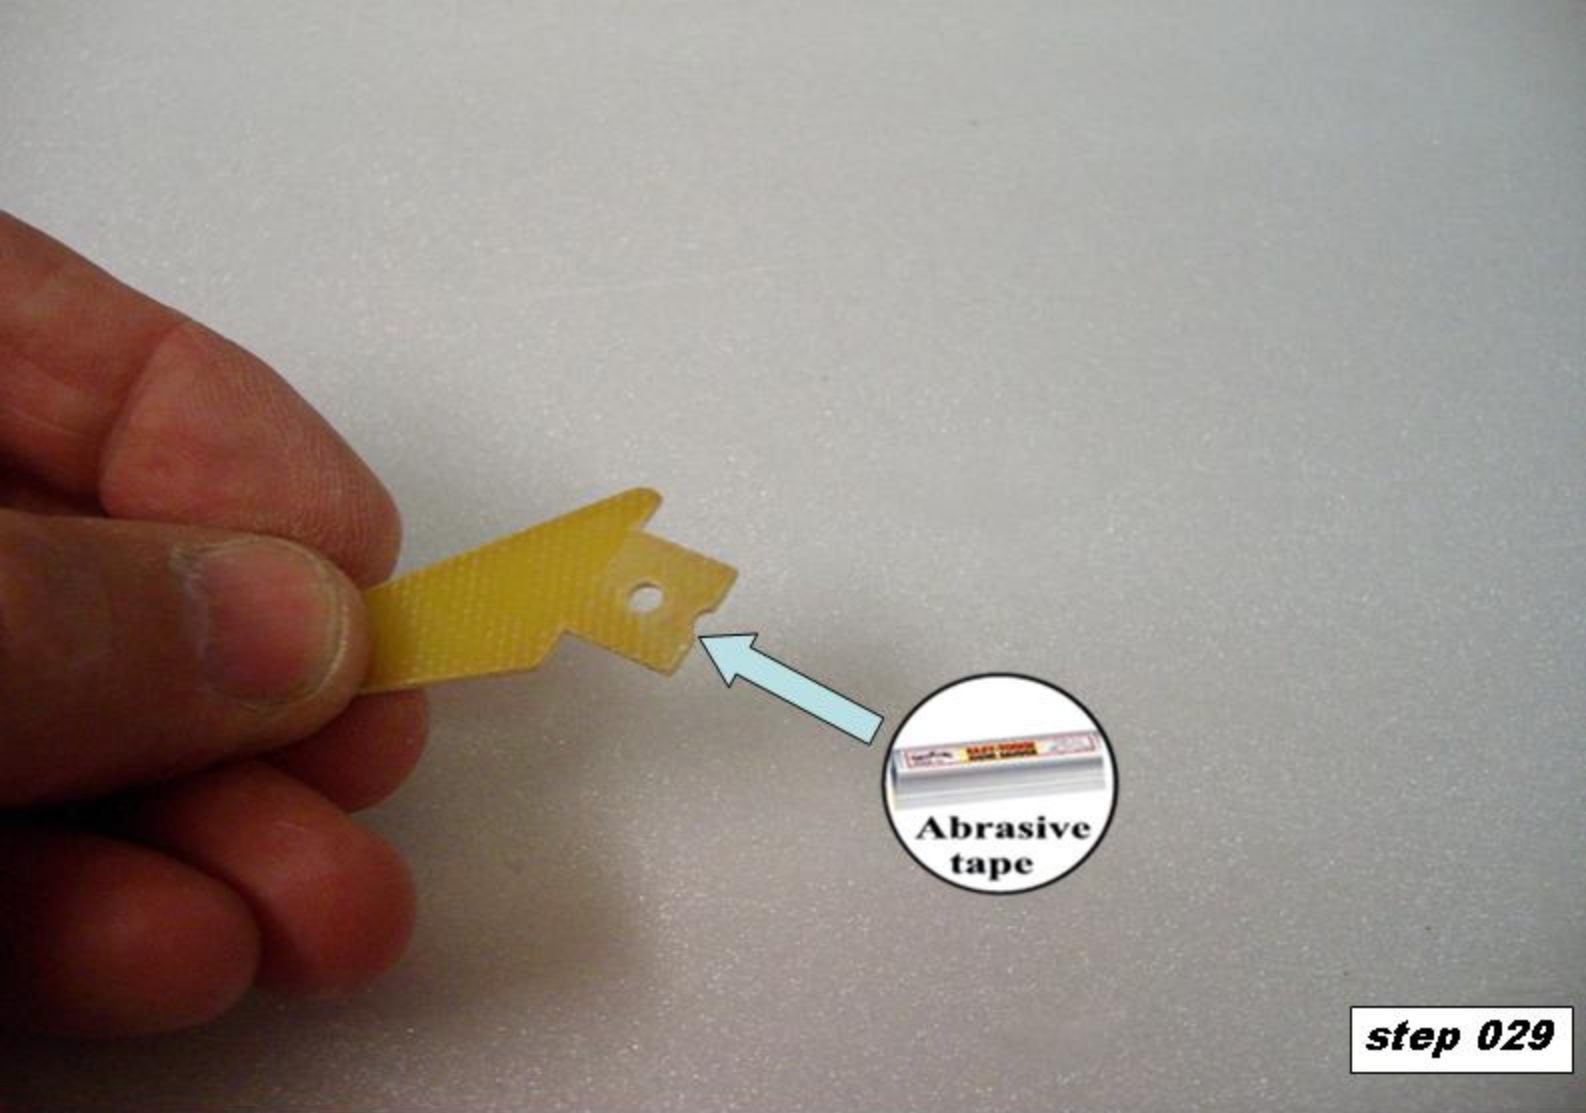


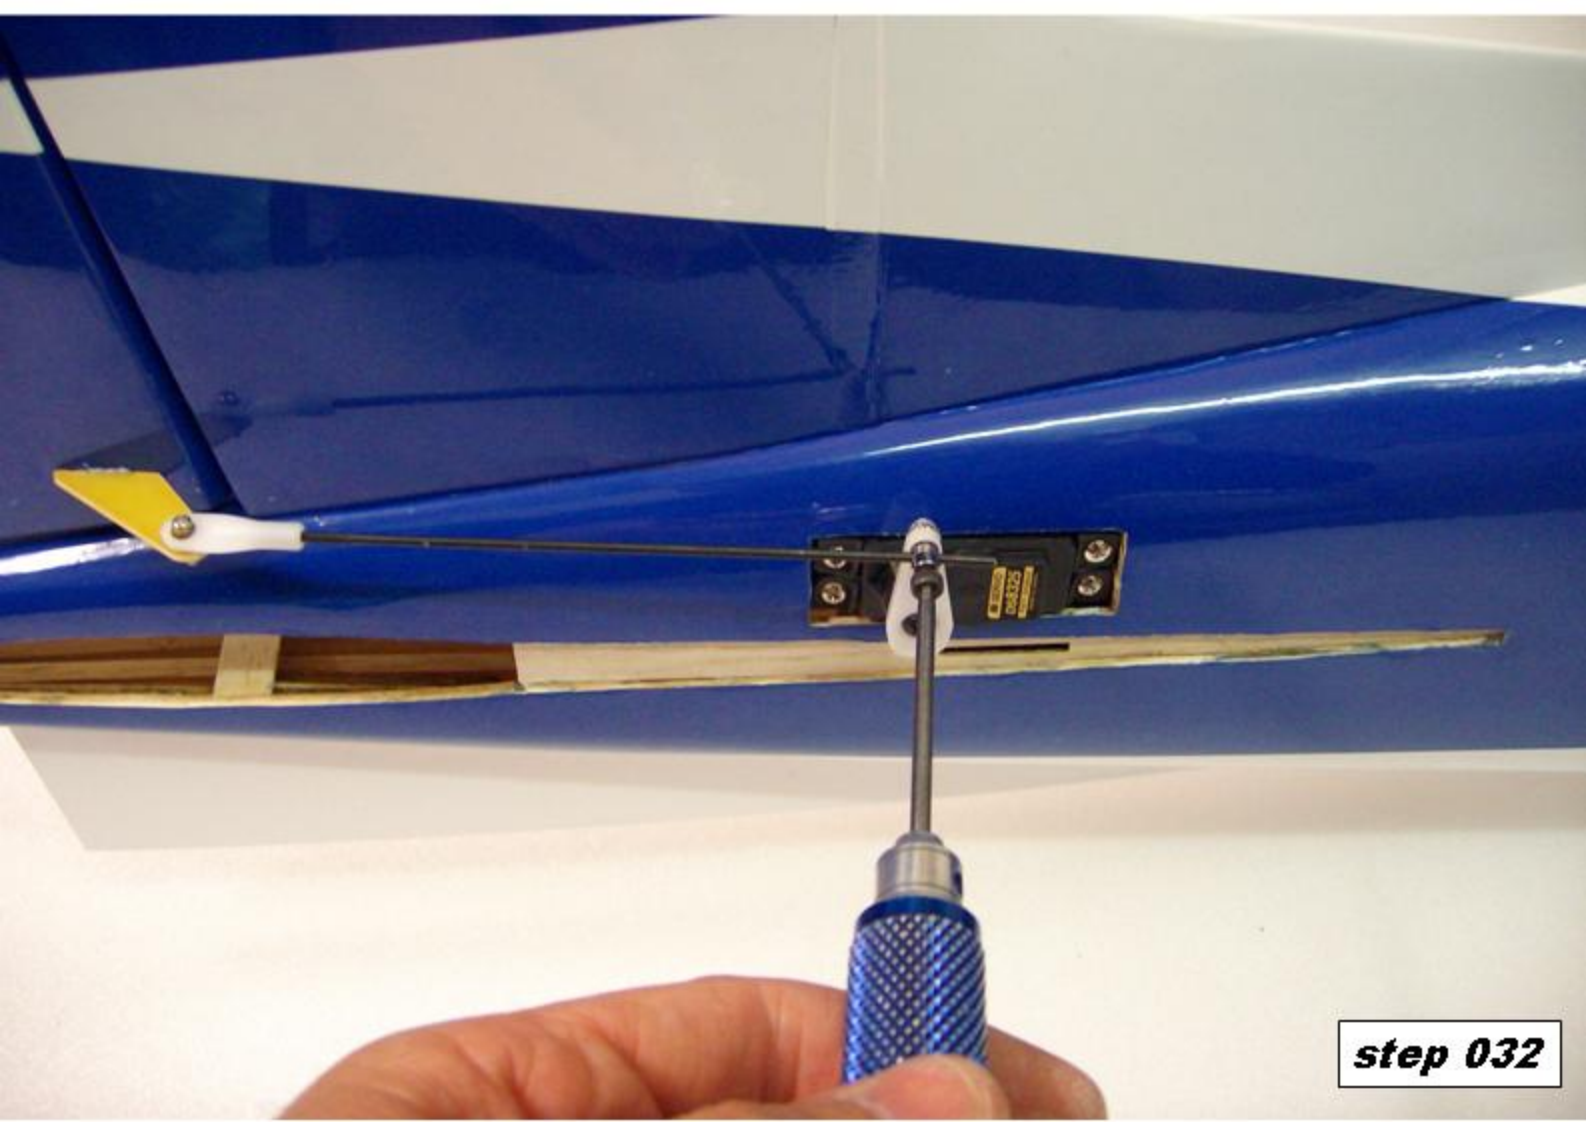


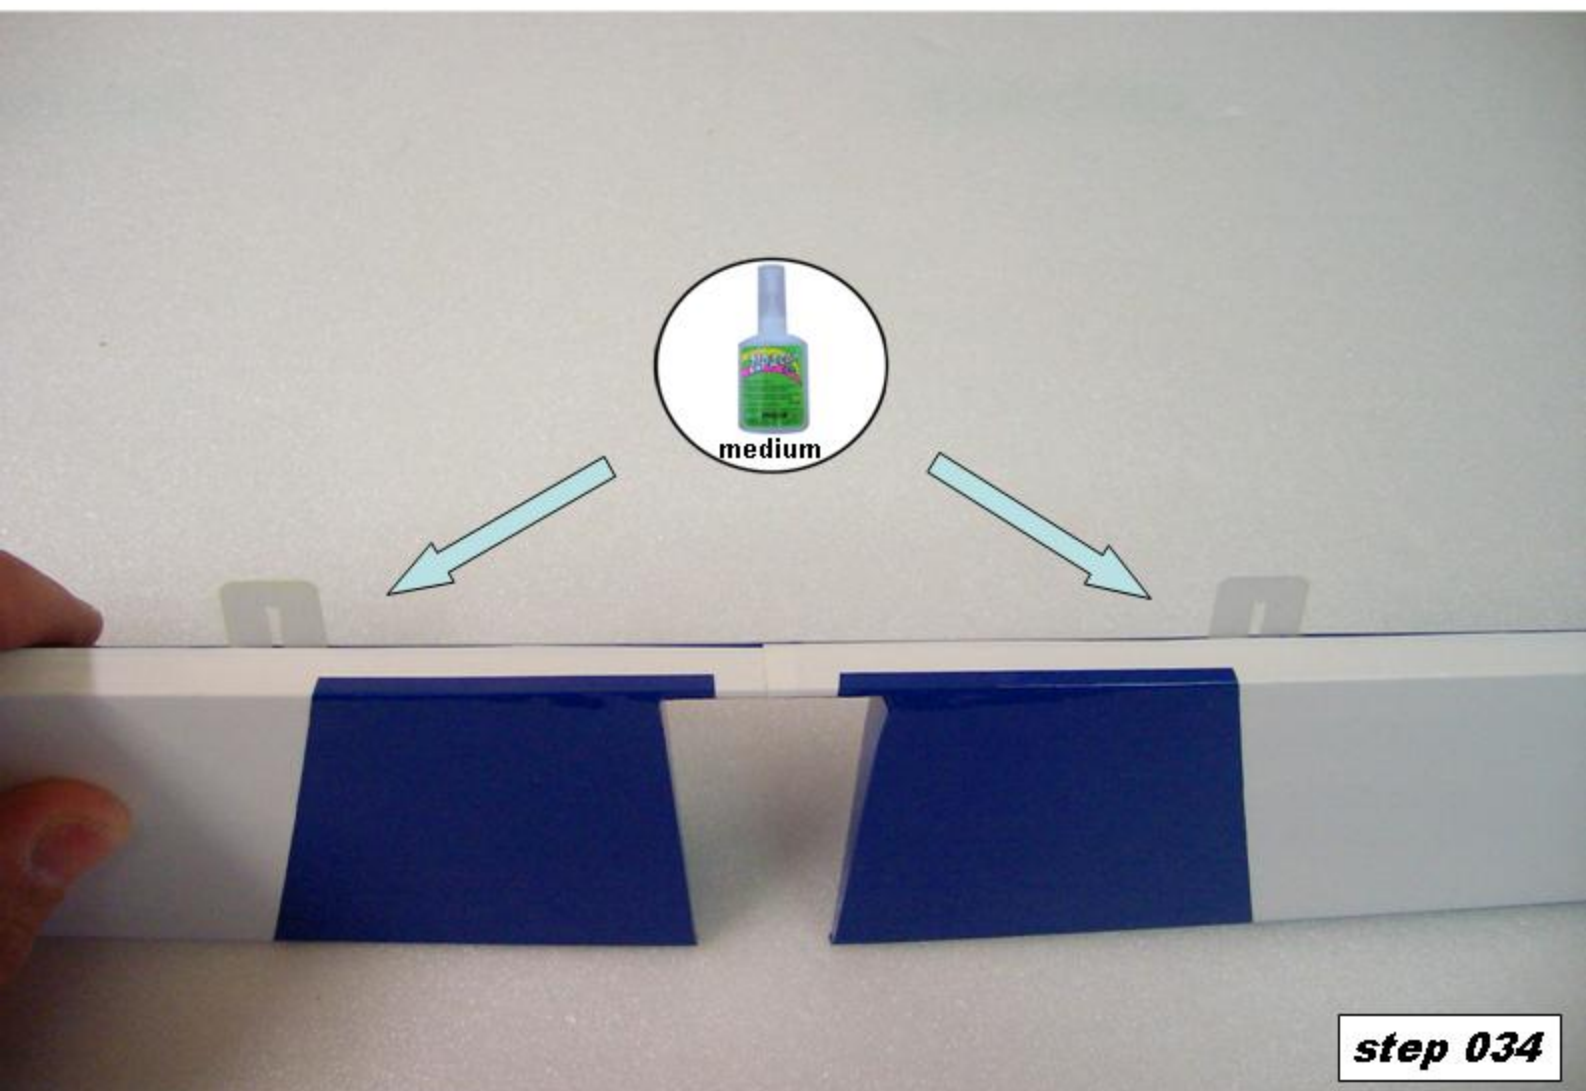


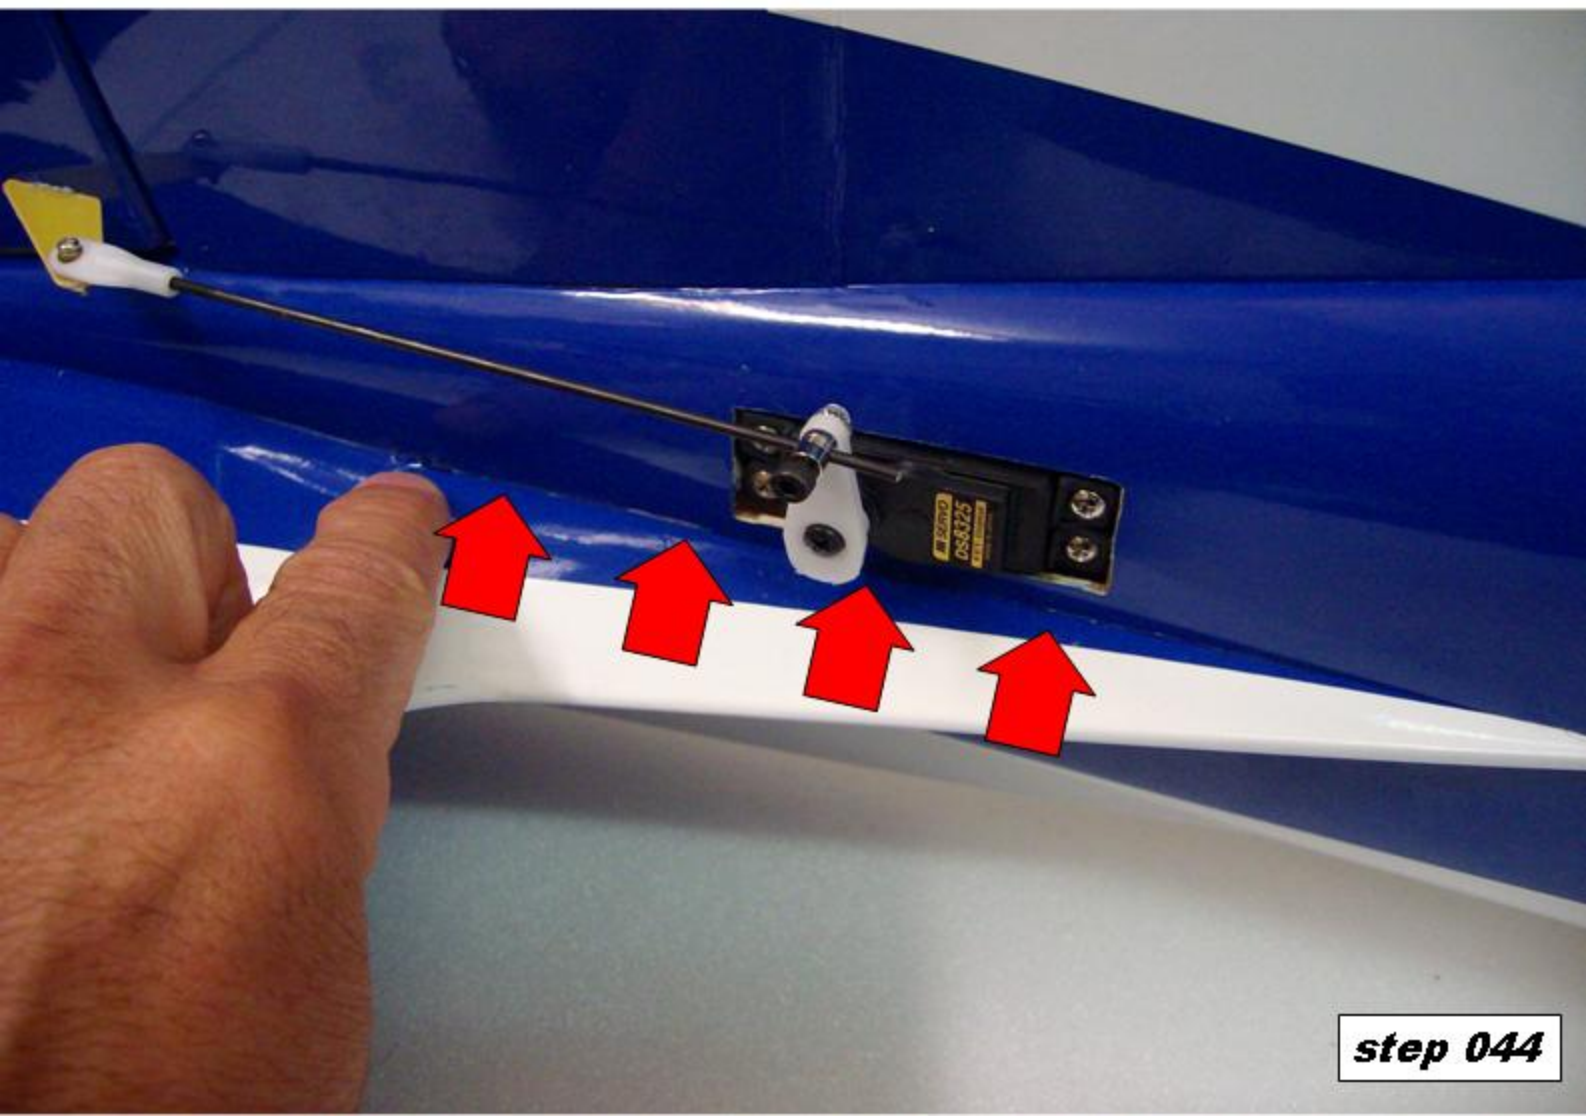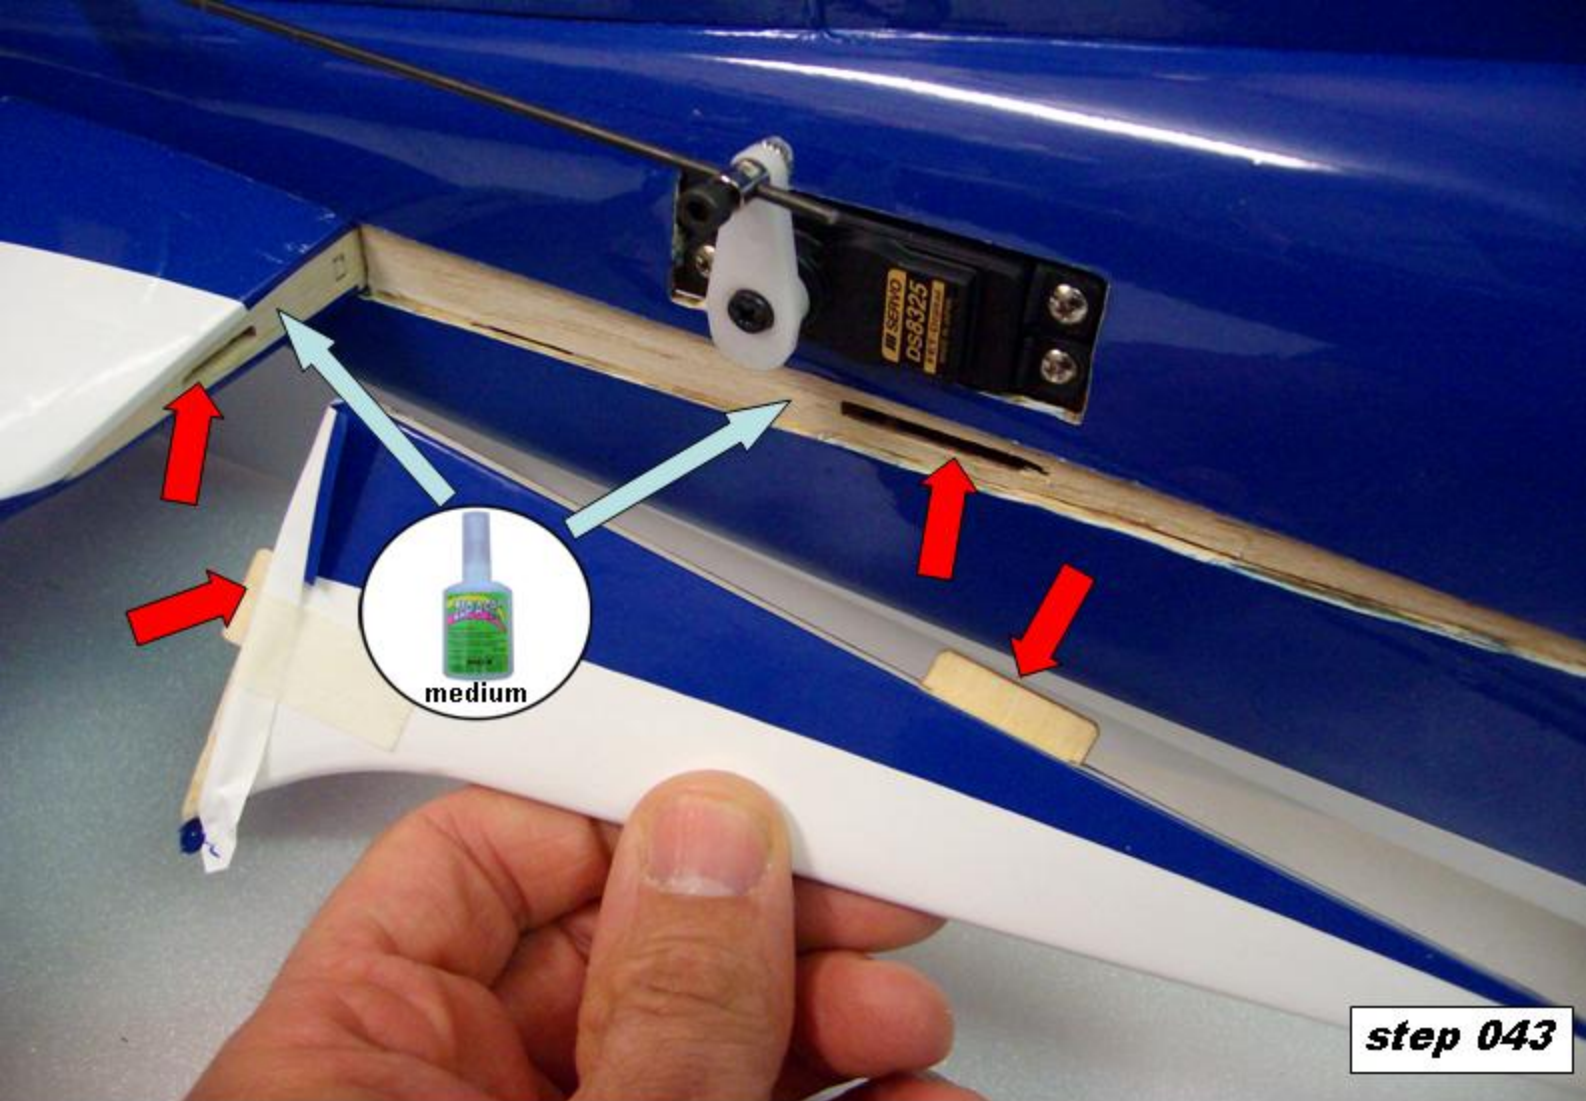


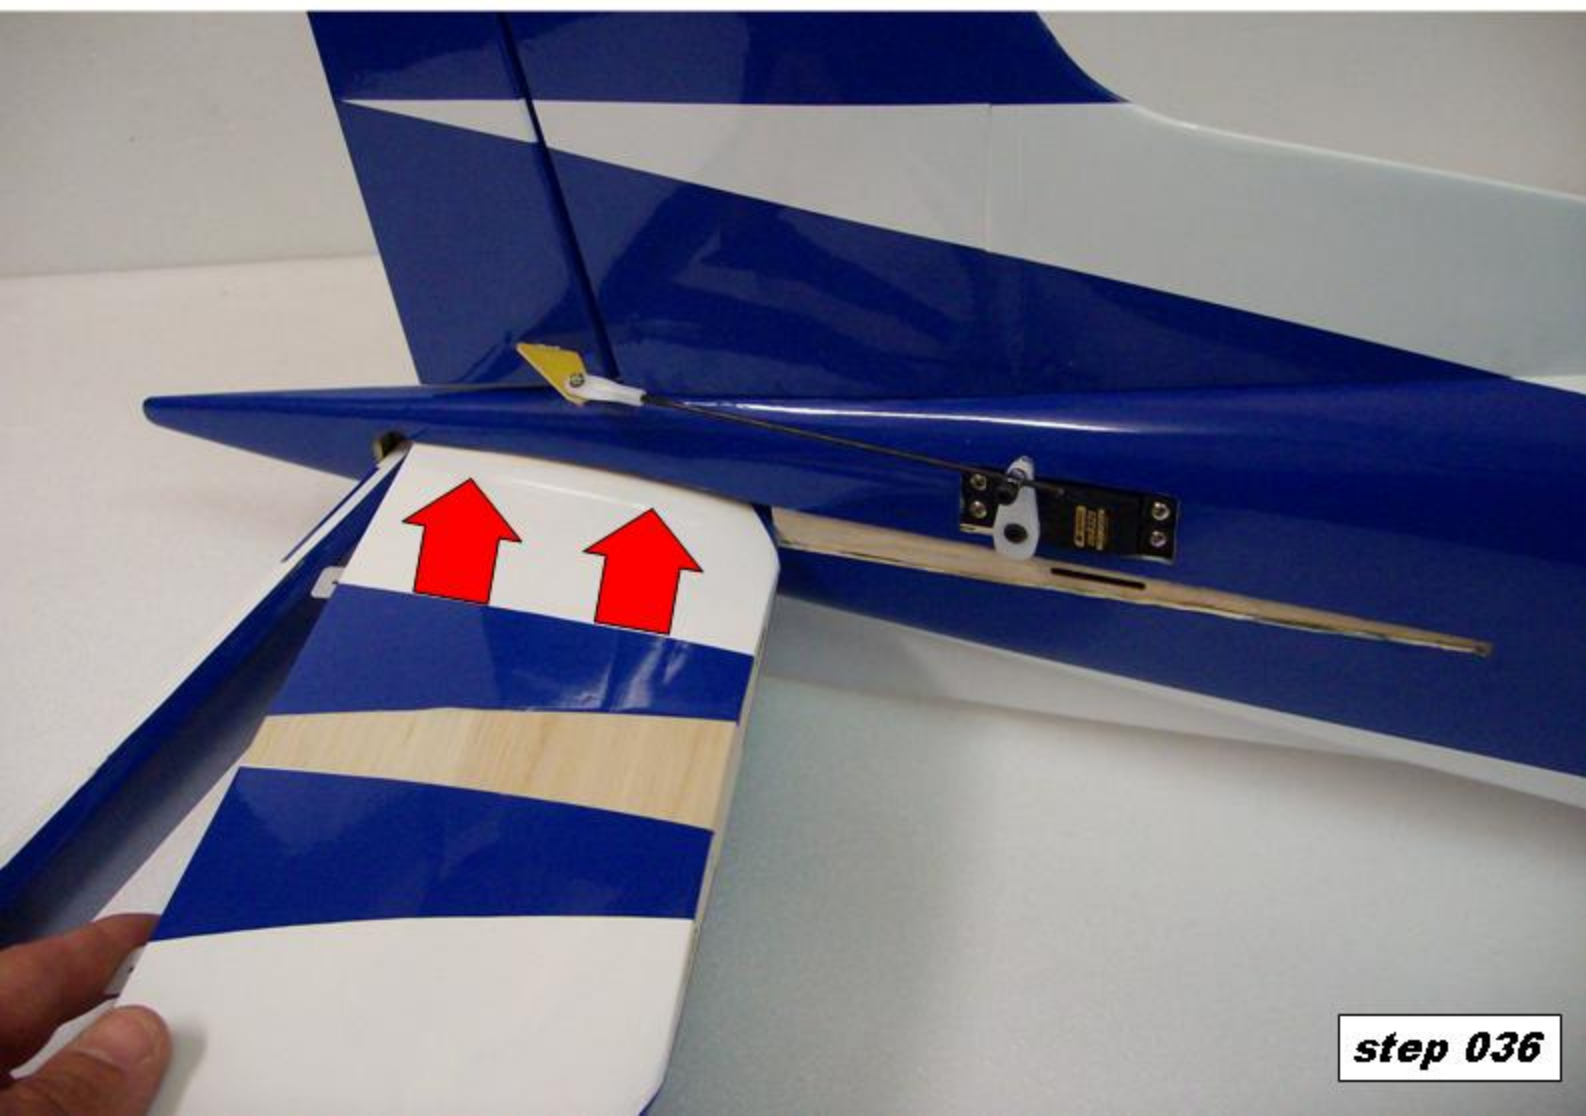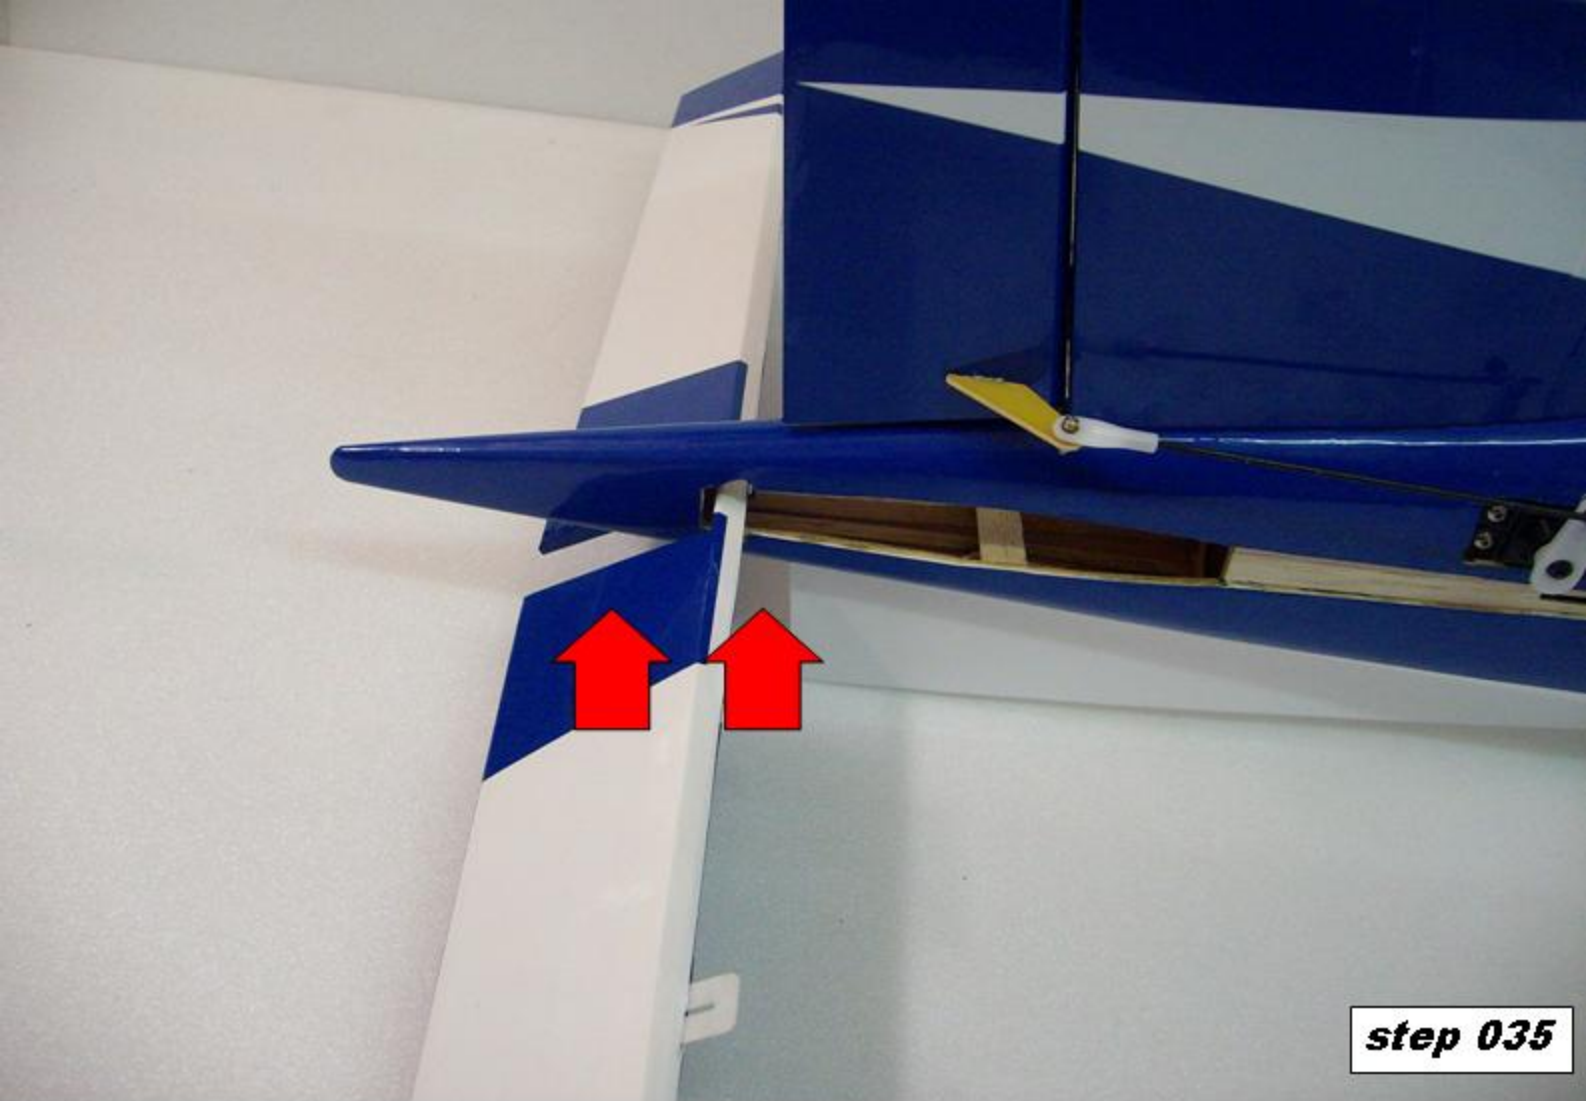

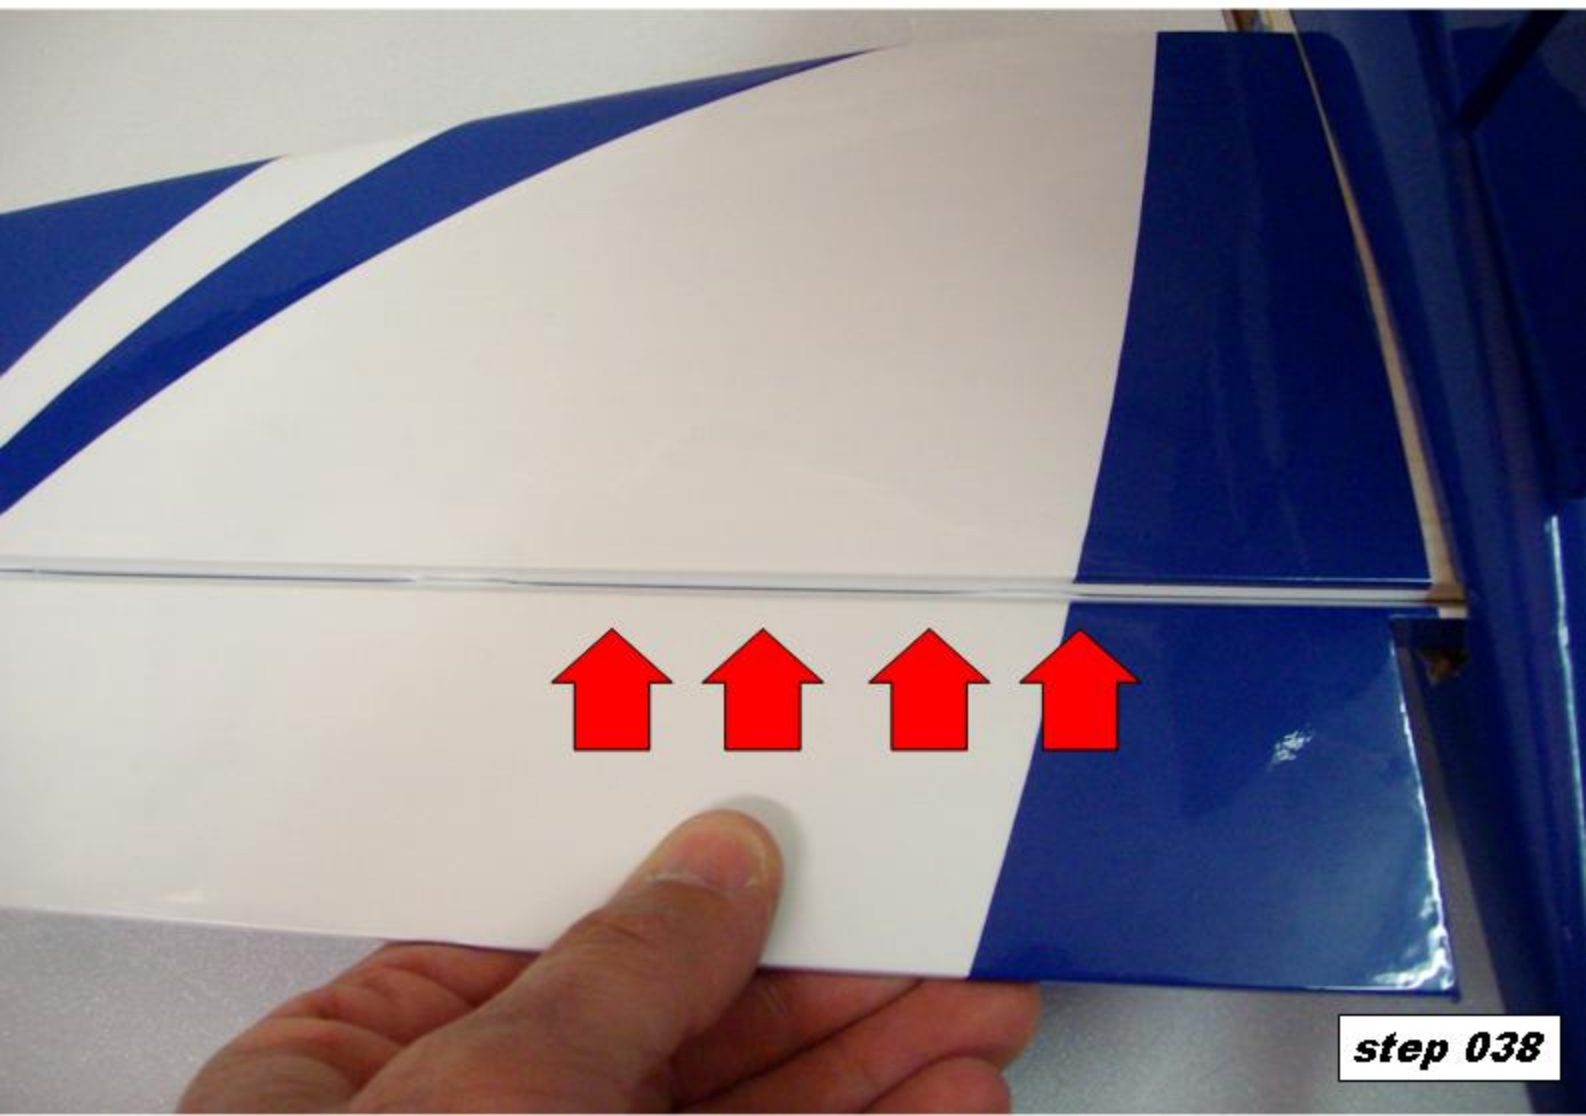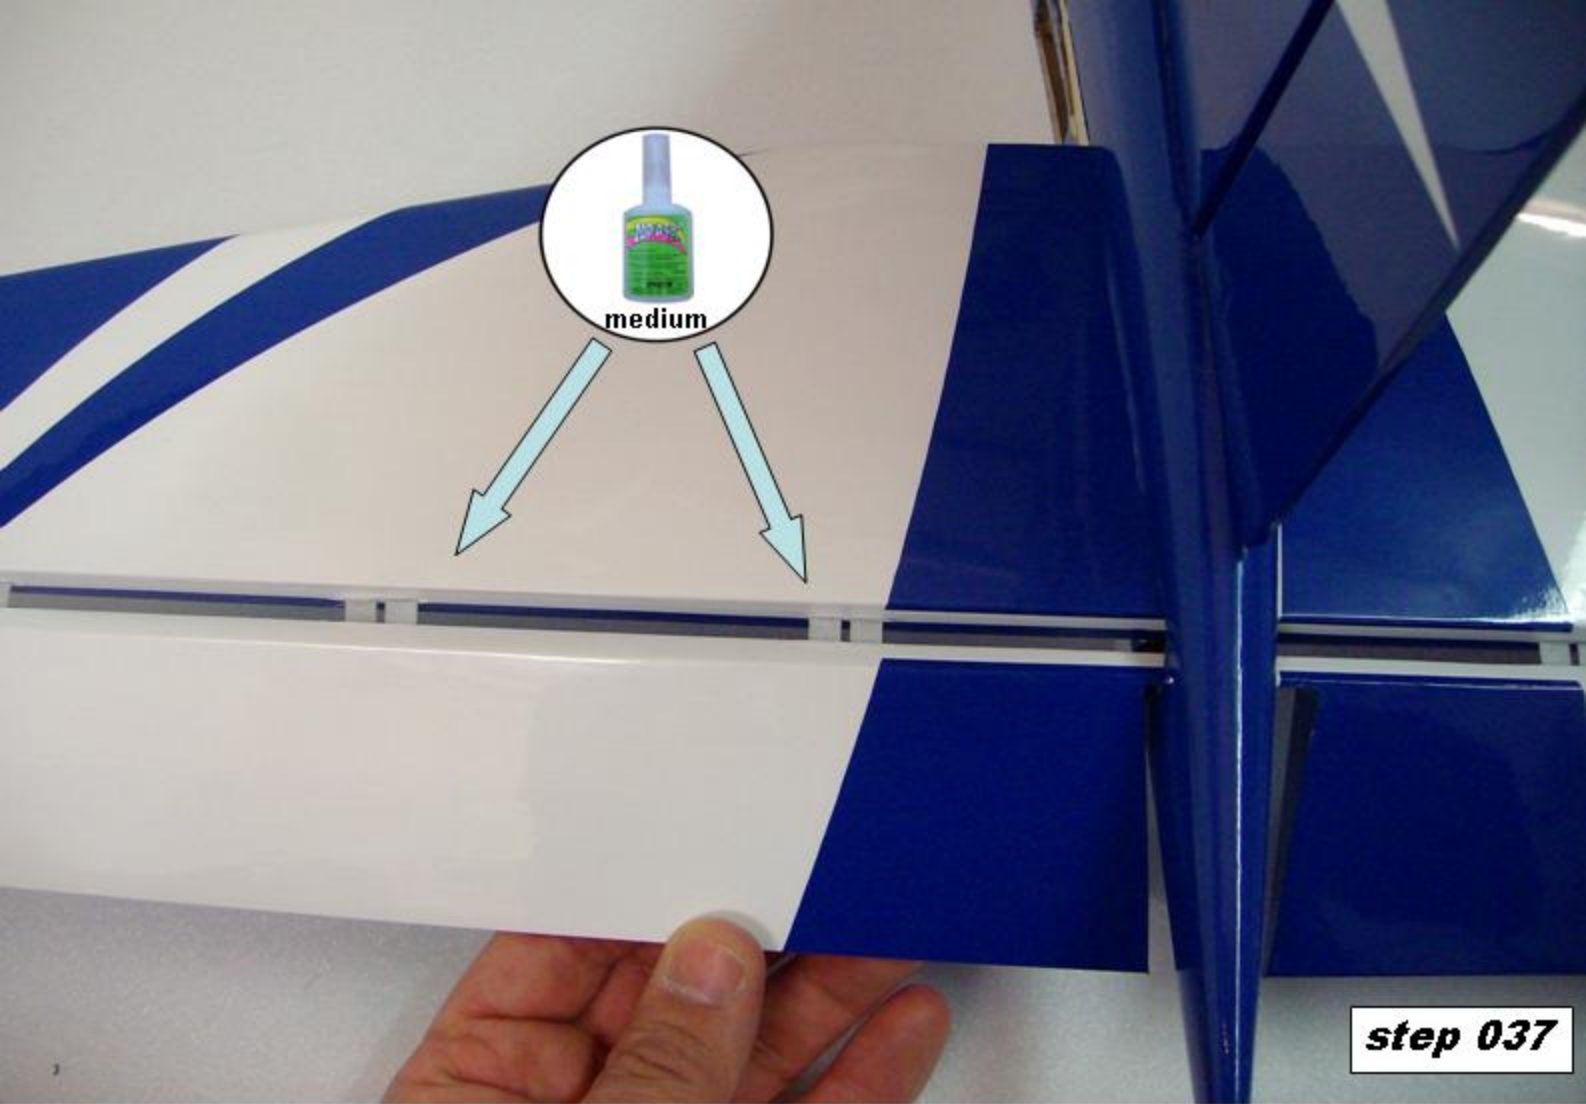

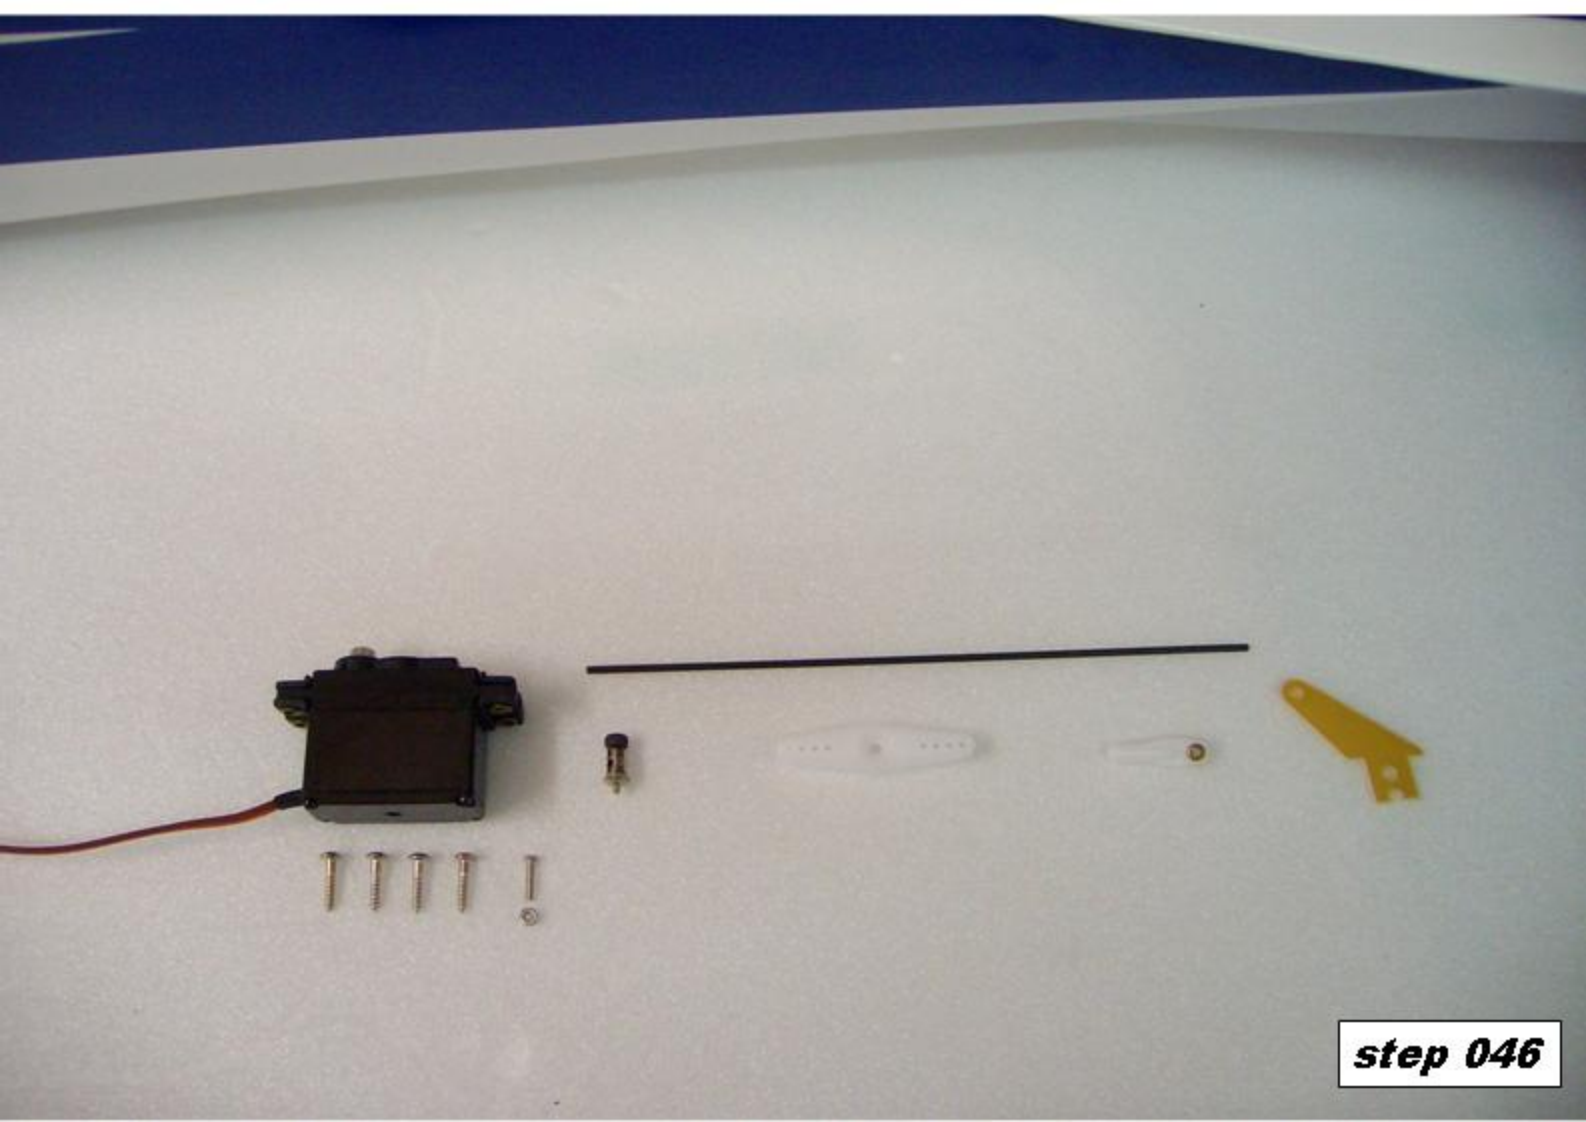


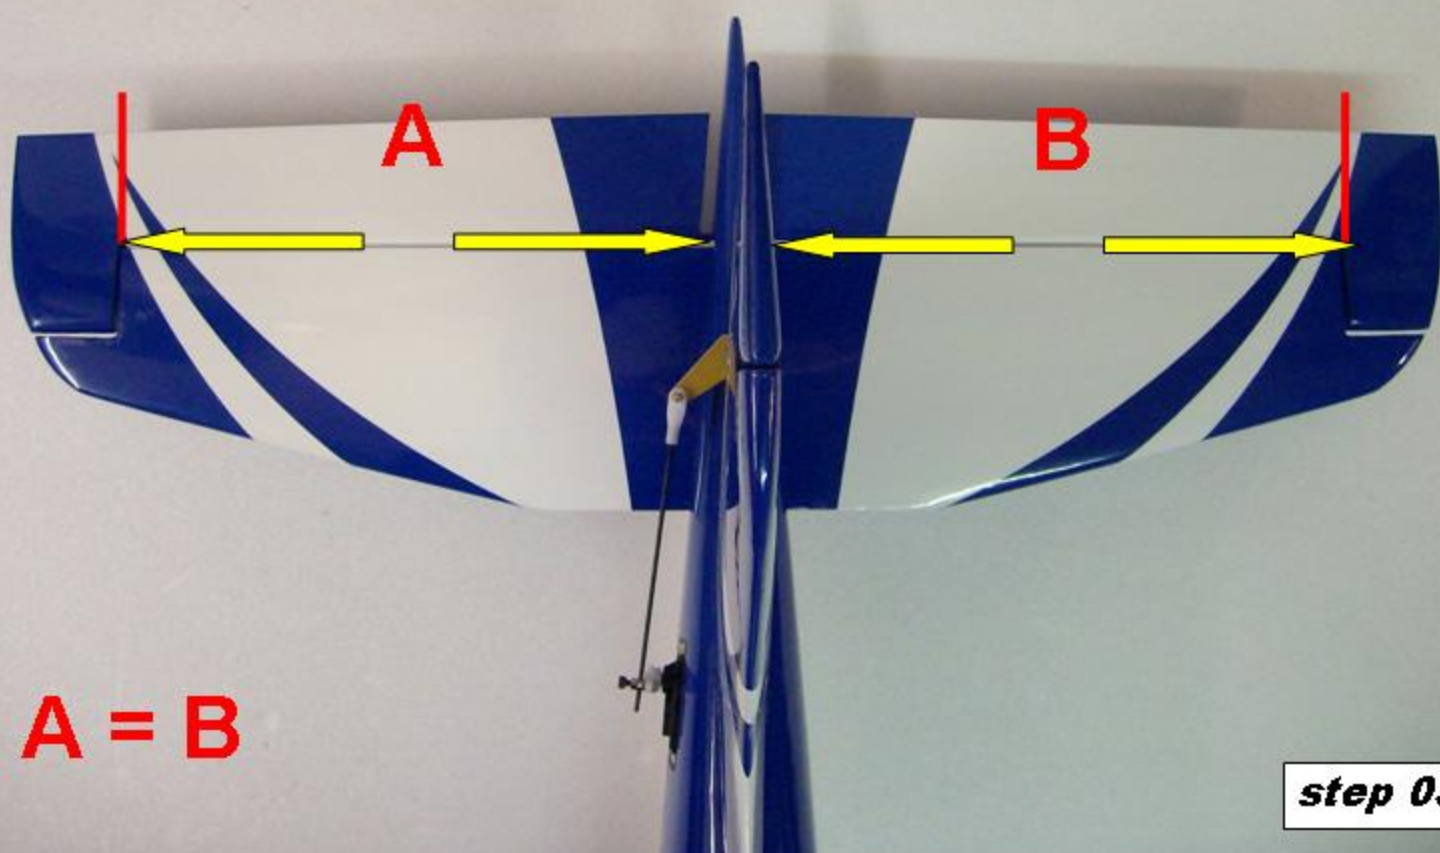


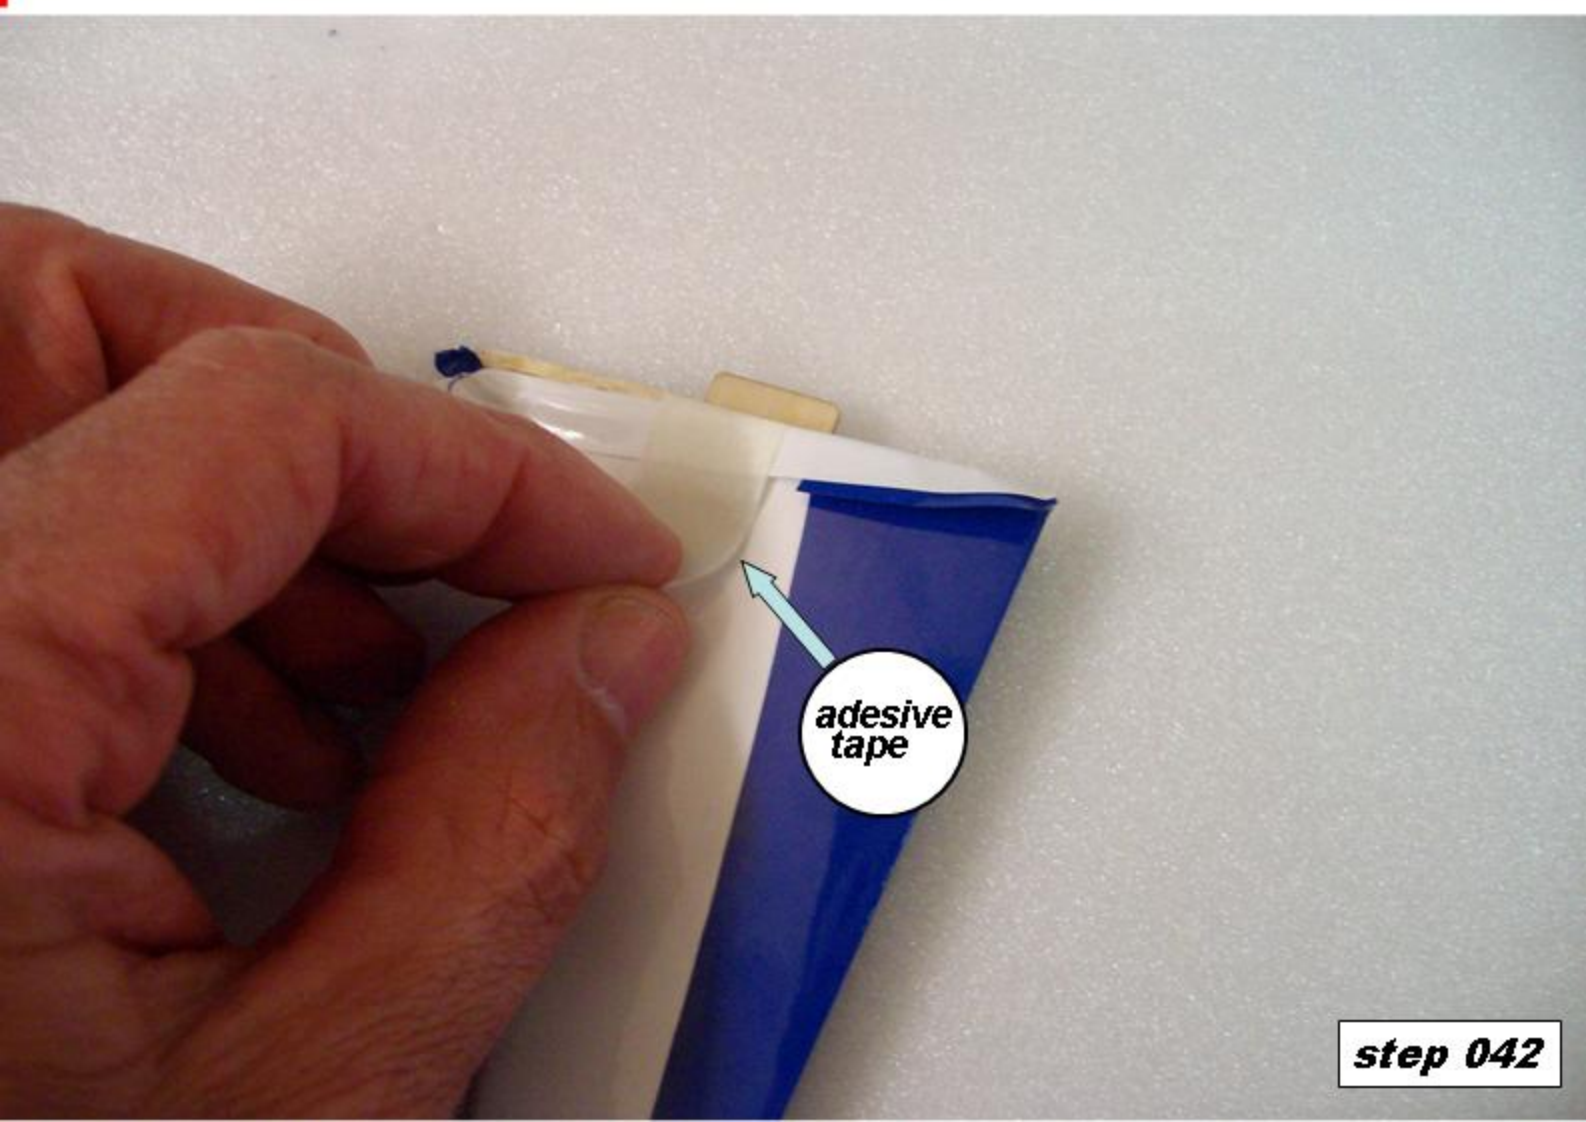





step 047

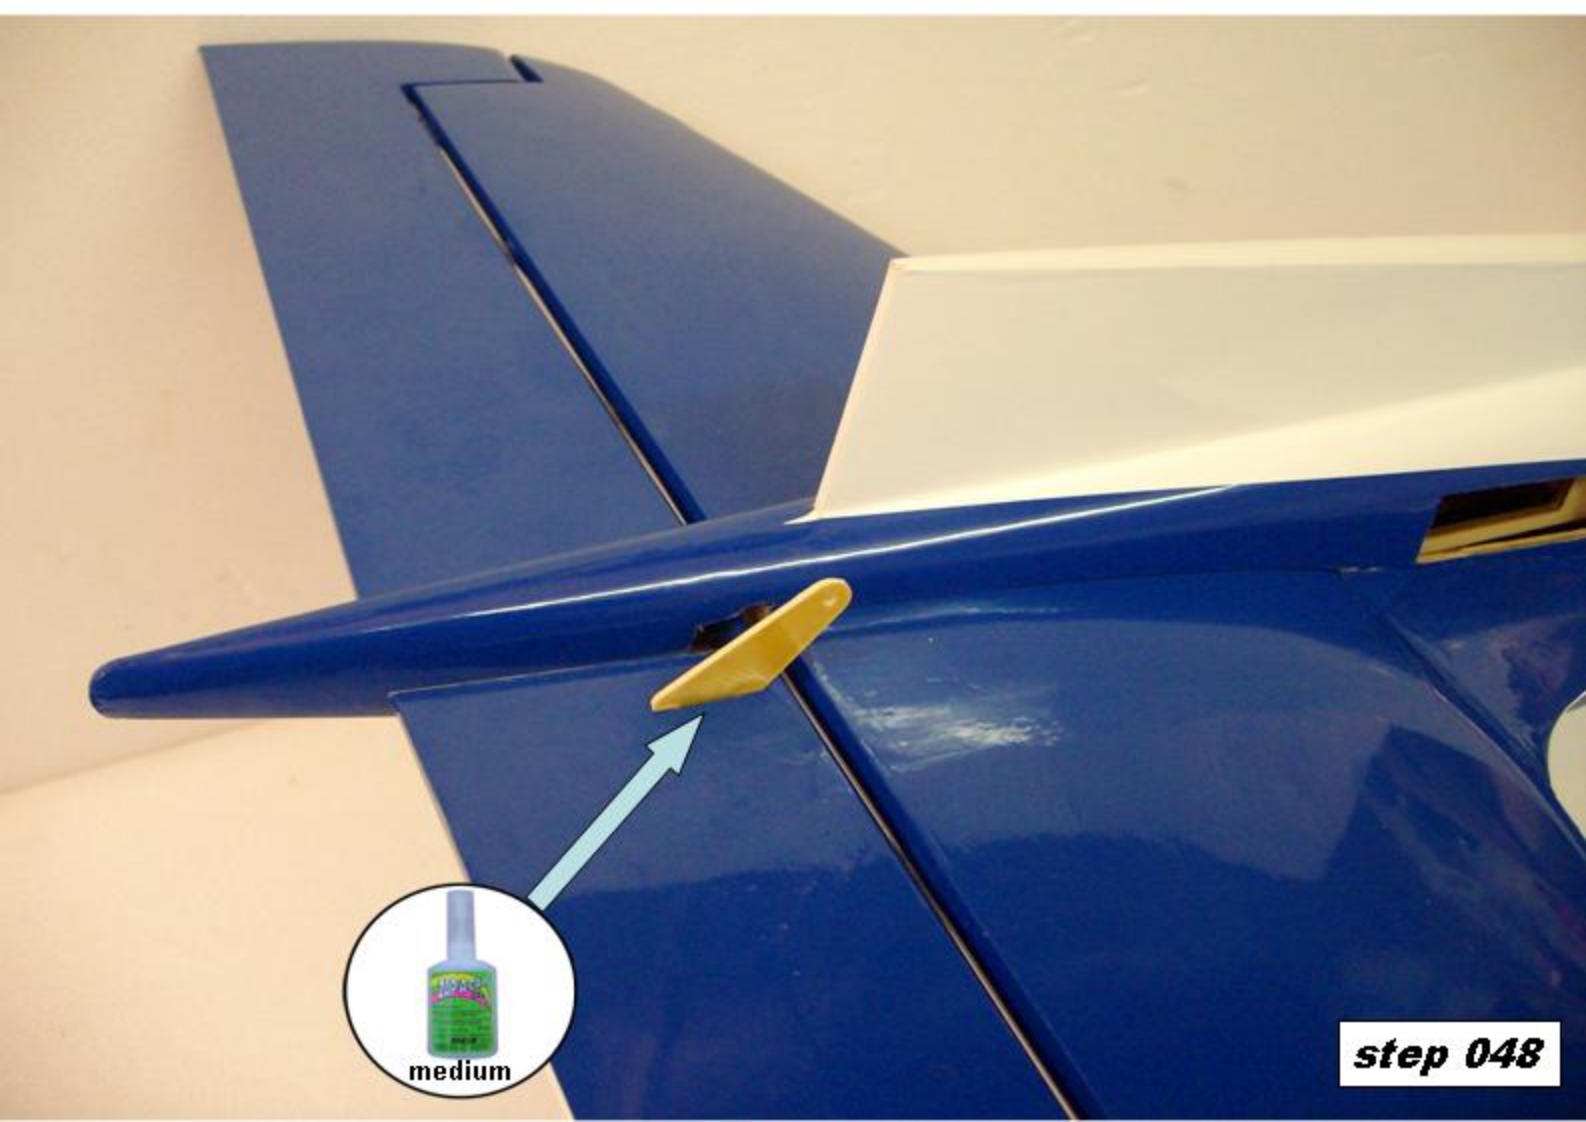

step 048

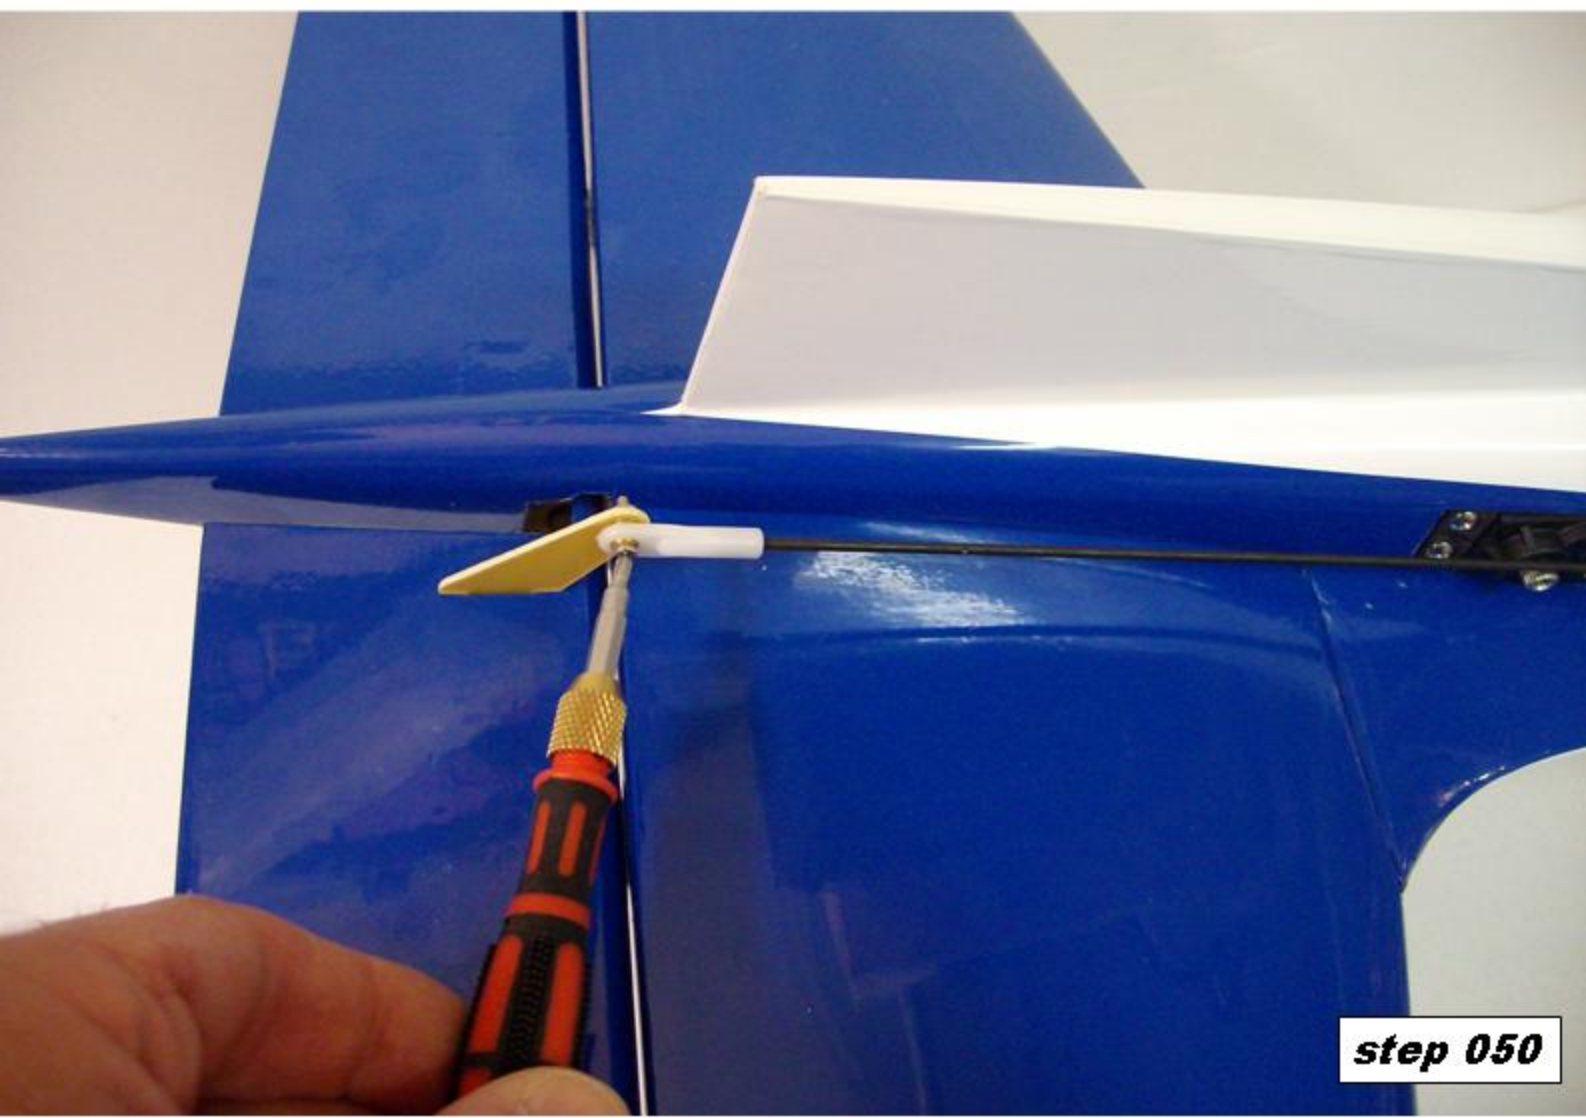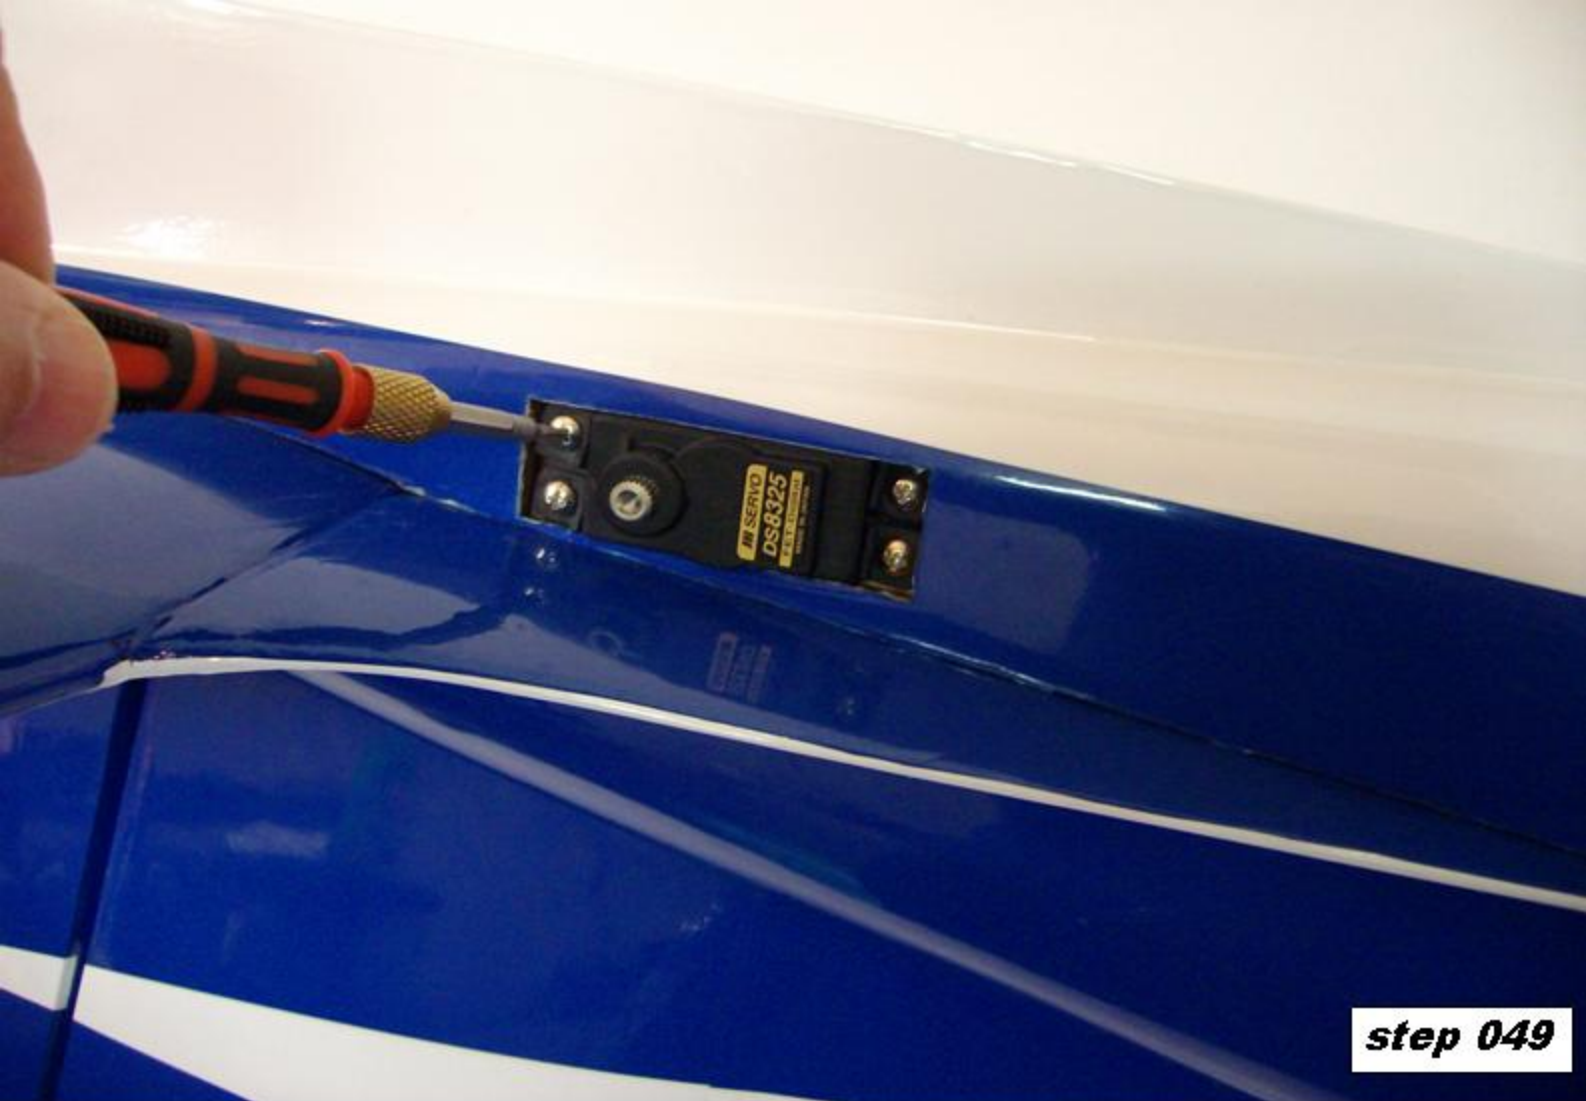


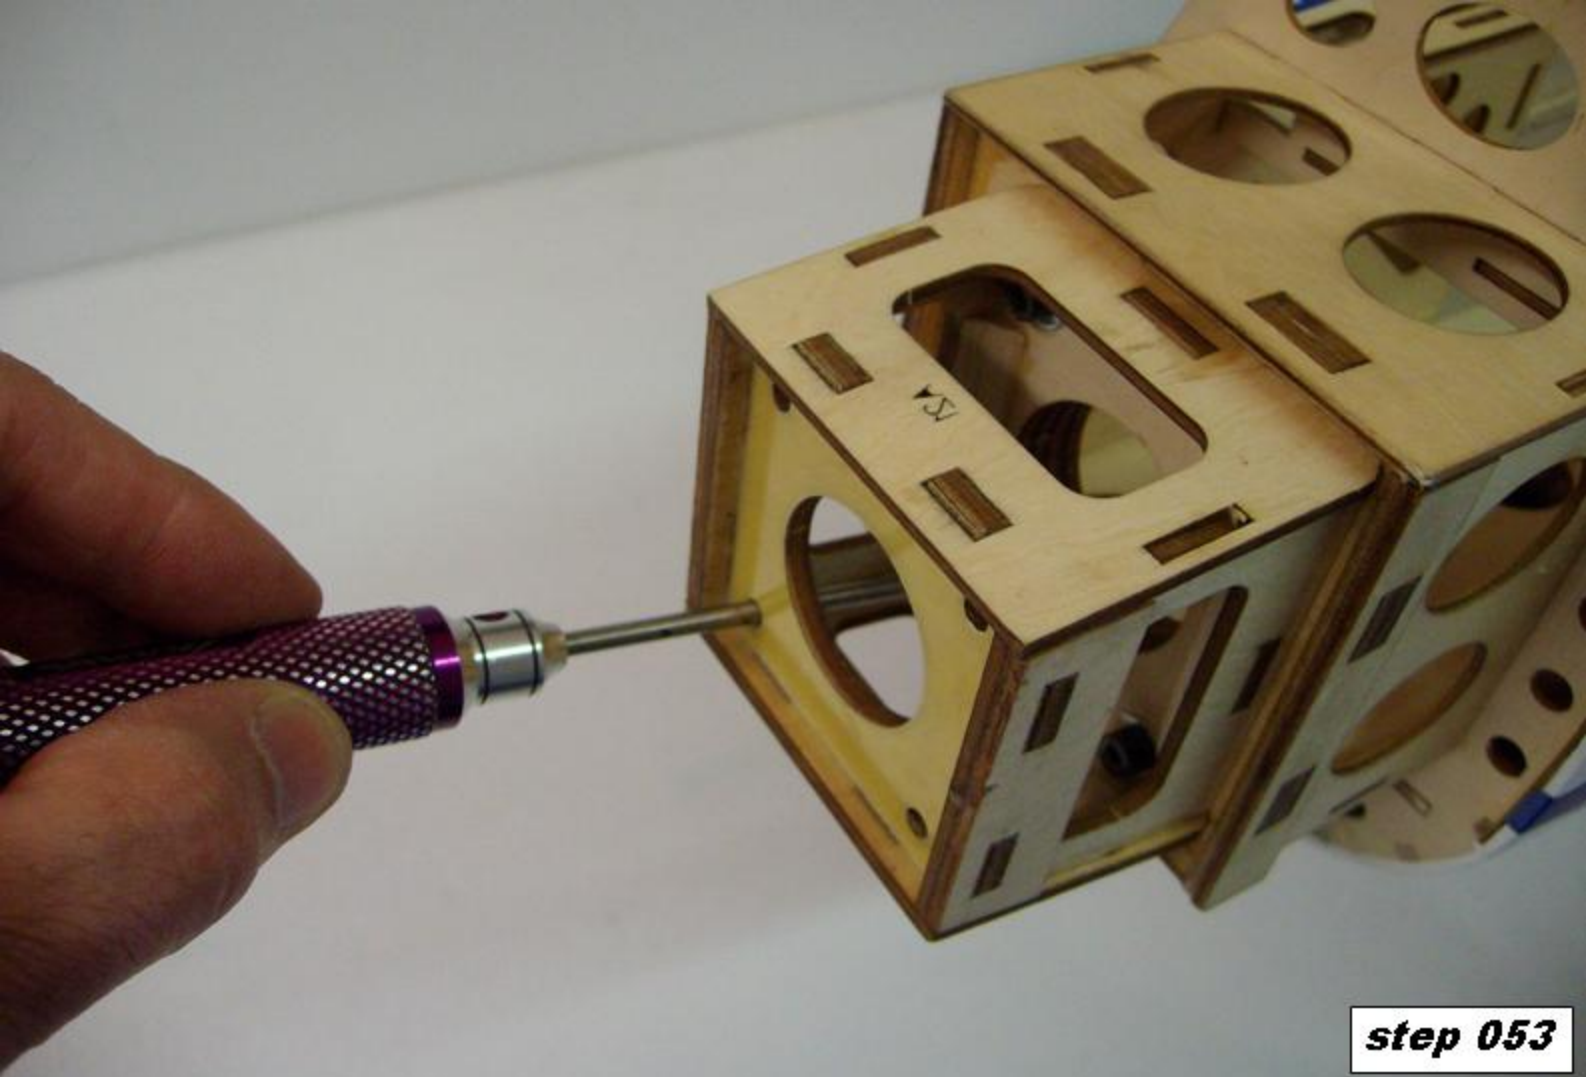


step 053

Very important:


Check the correct distance
with motor and cowl. Use
appropriate thickness

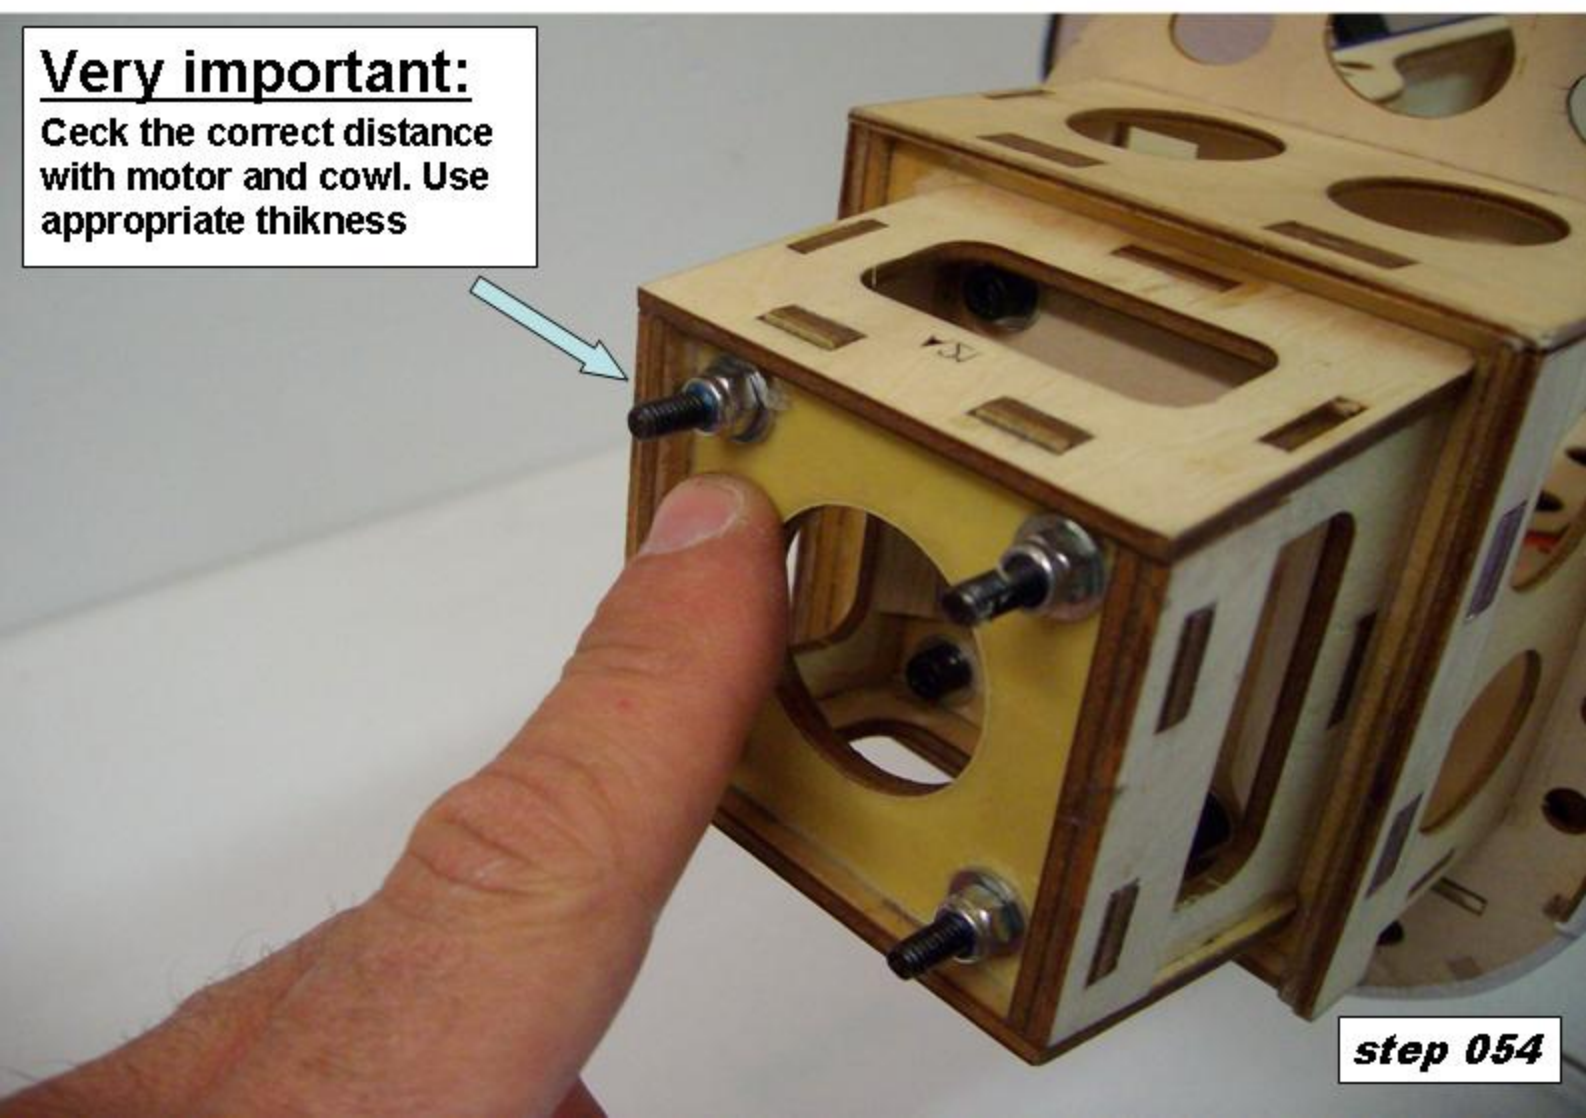

step 054

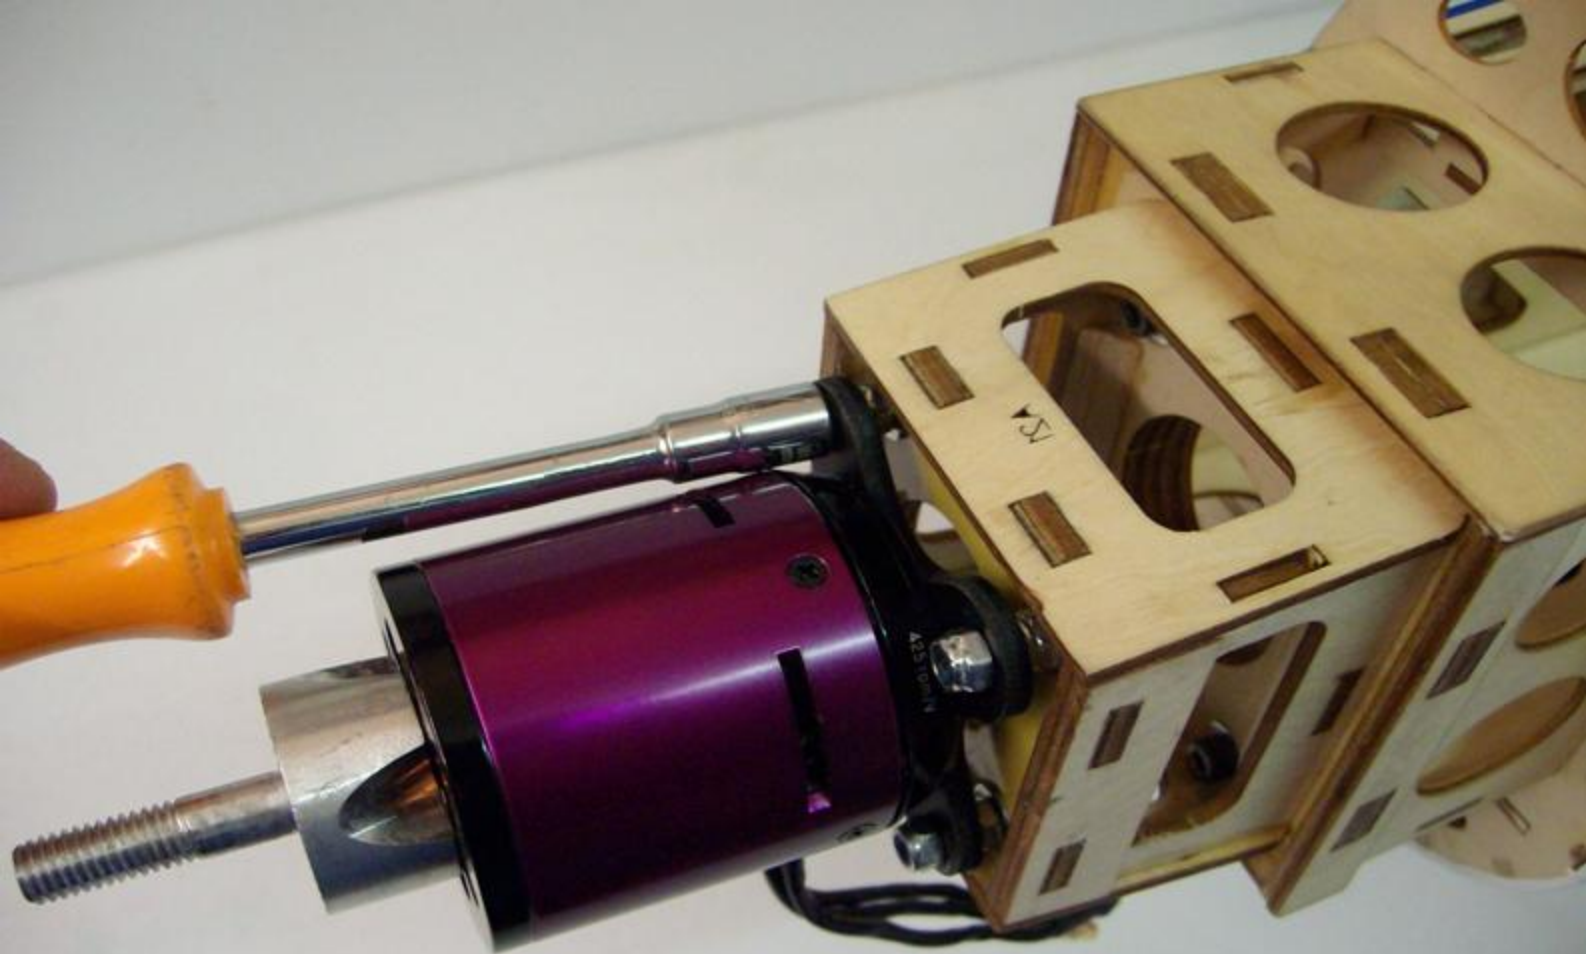



step 055

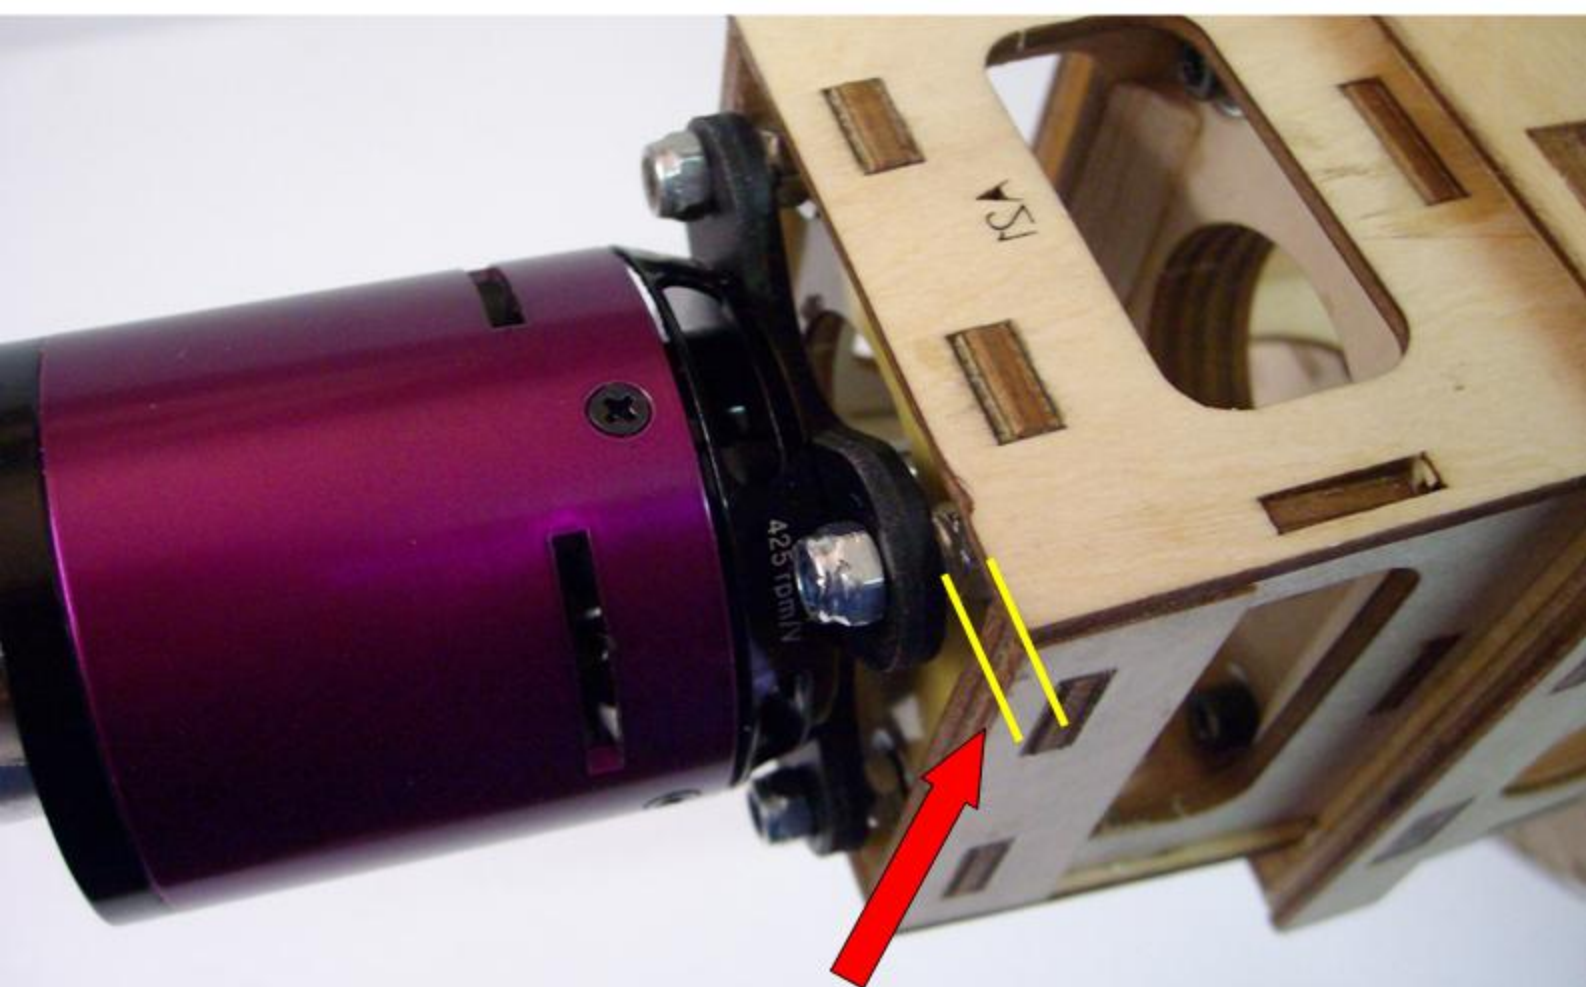

step 056

Very important:

Prepare three adequate cables for connecting the motor to the ESC

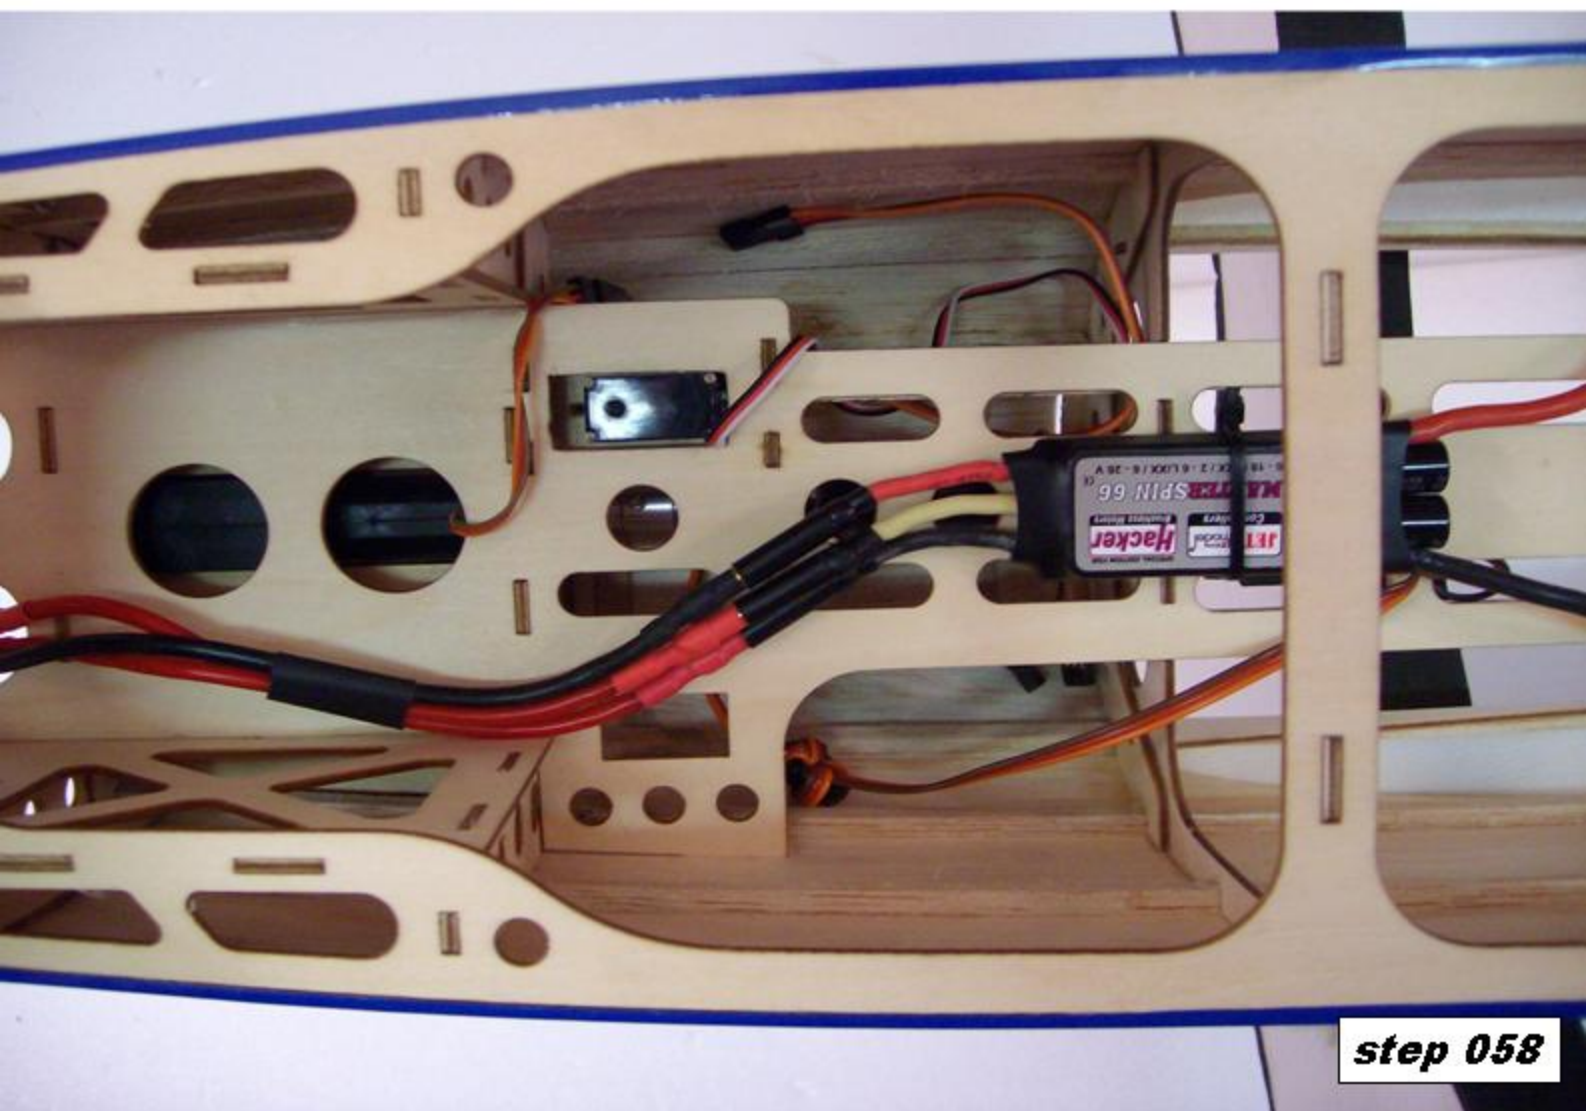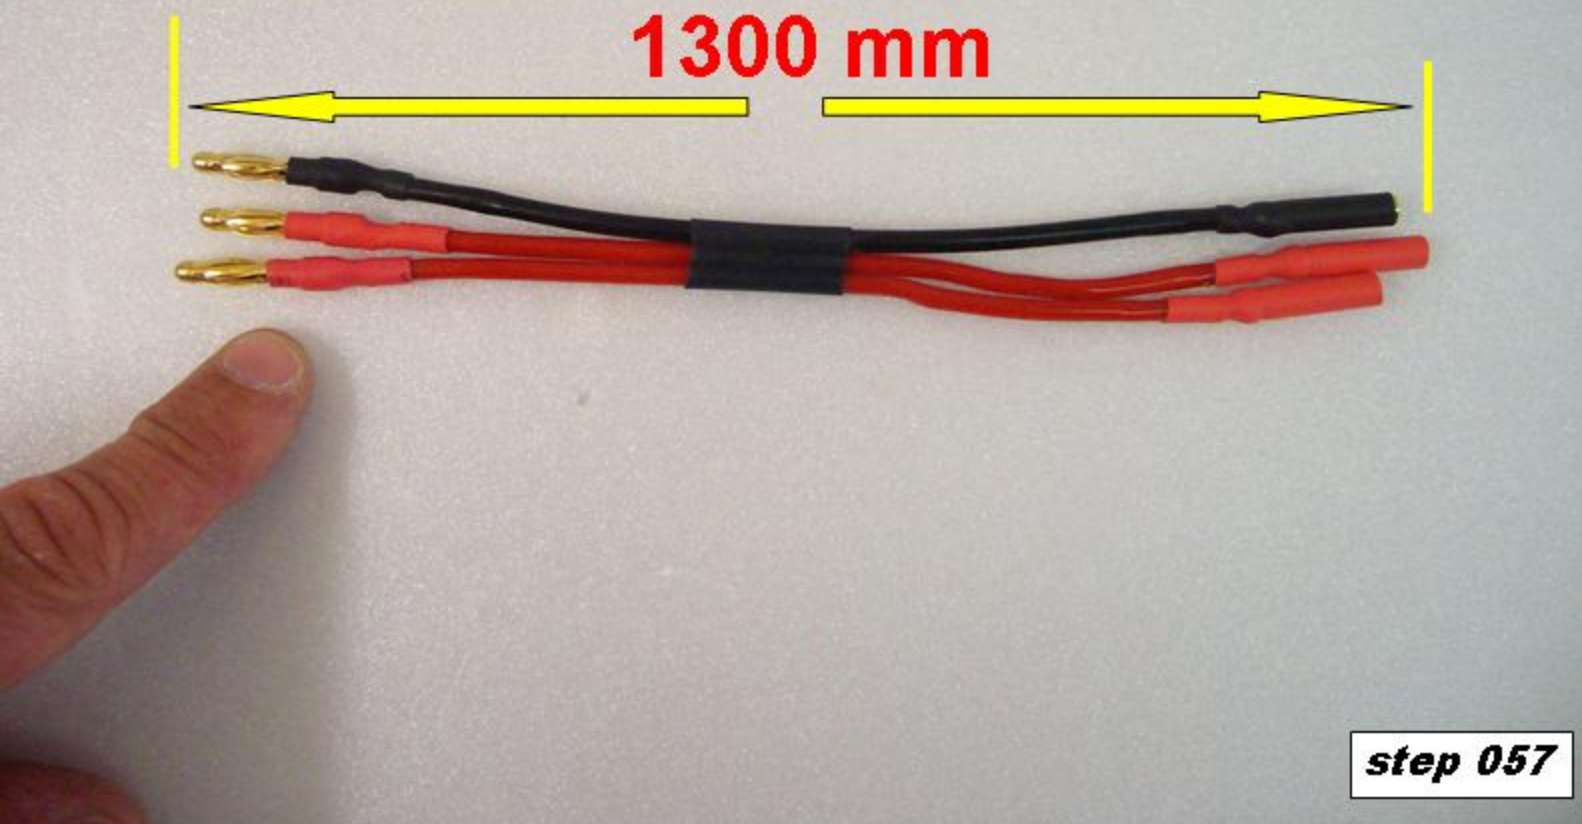





step 059

Very important:
Verify that the distance
of the thickness is ok



step 060

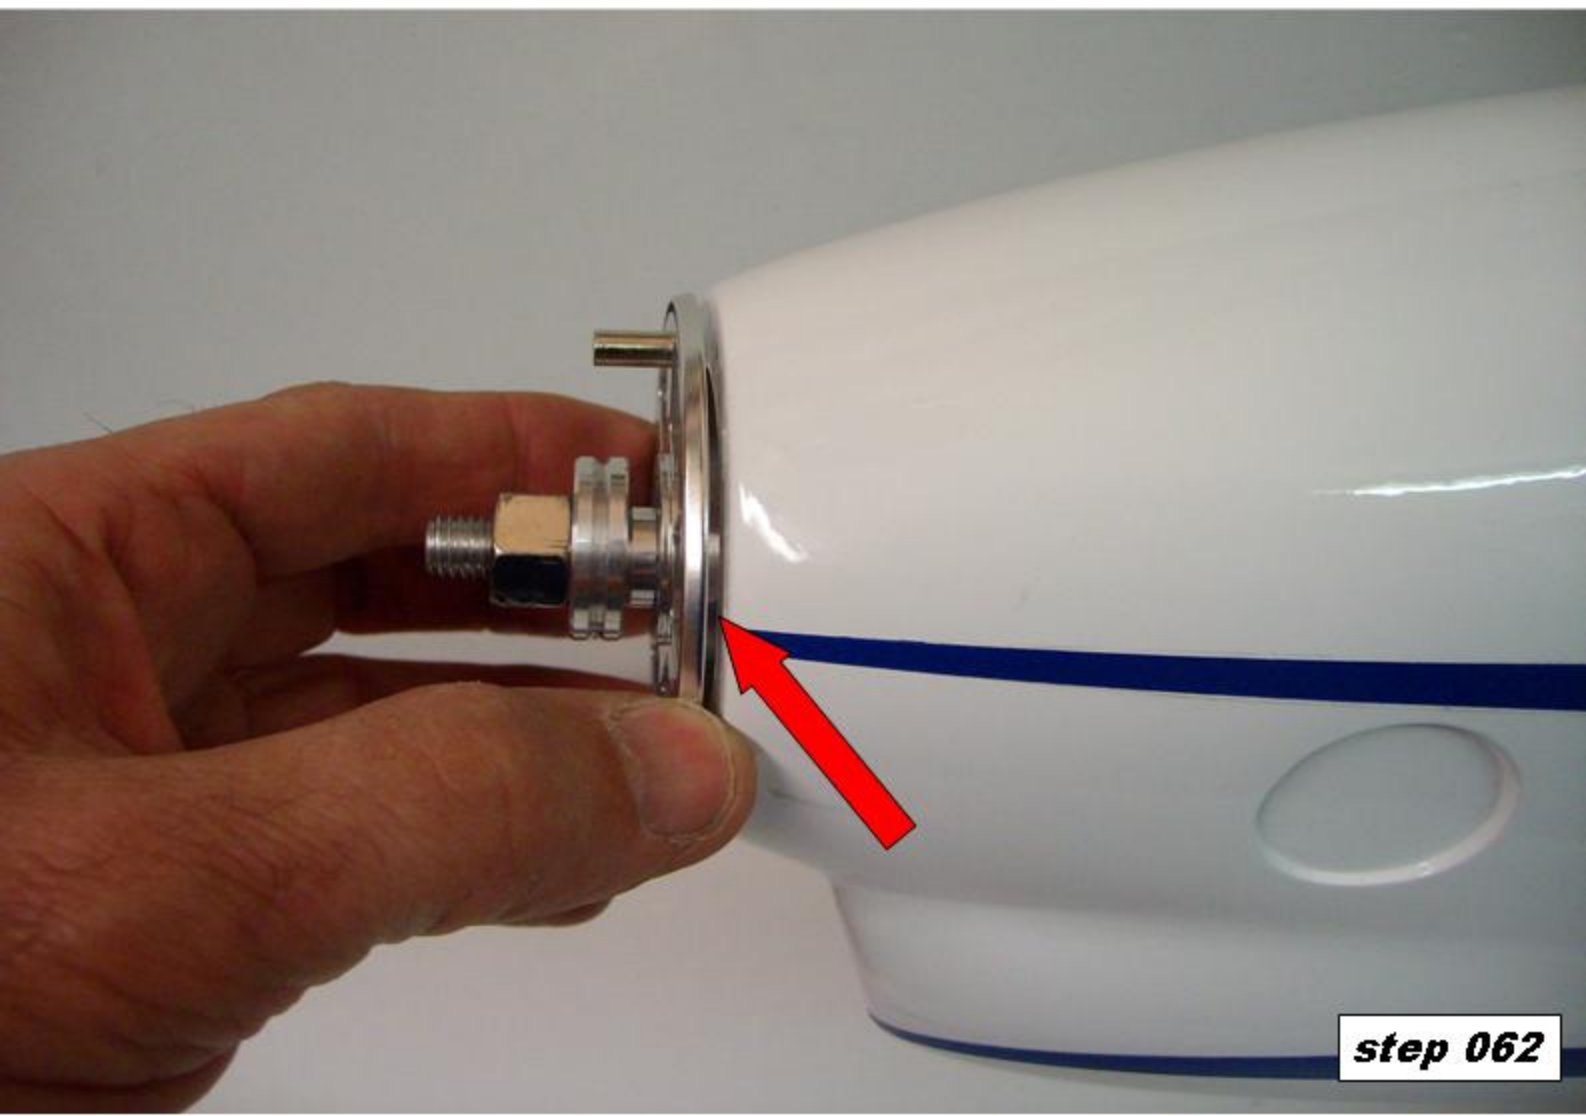


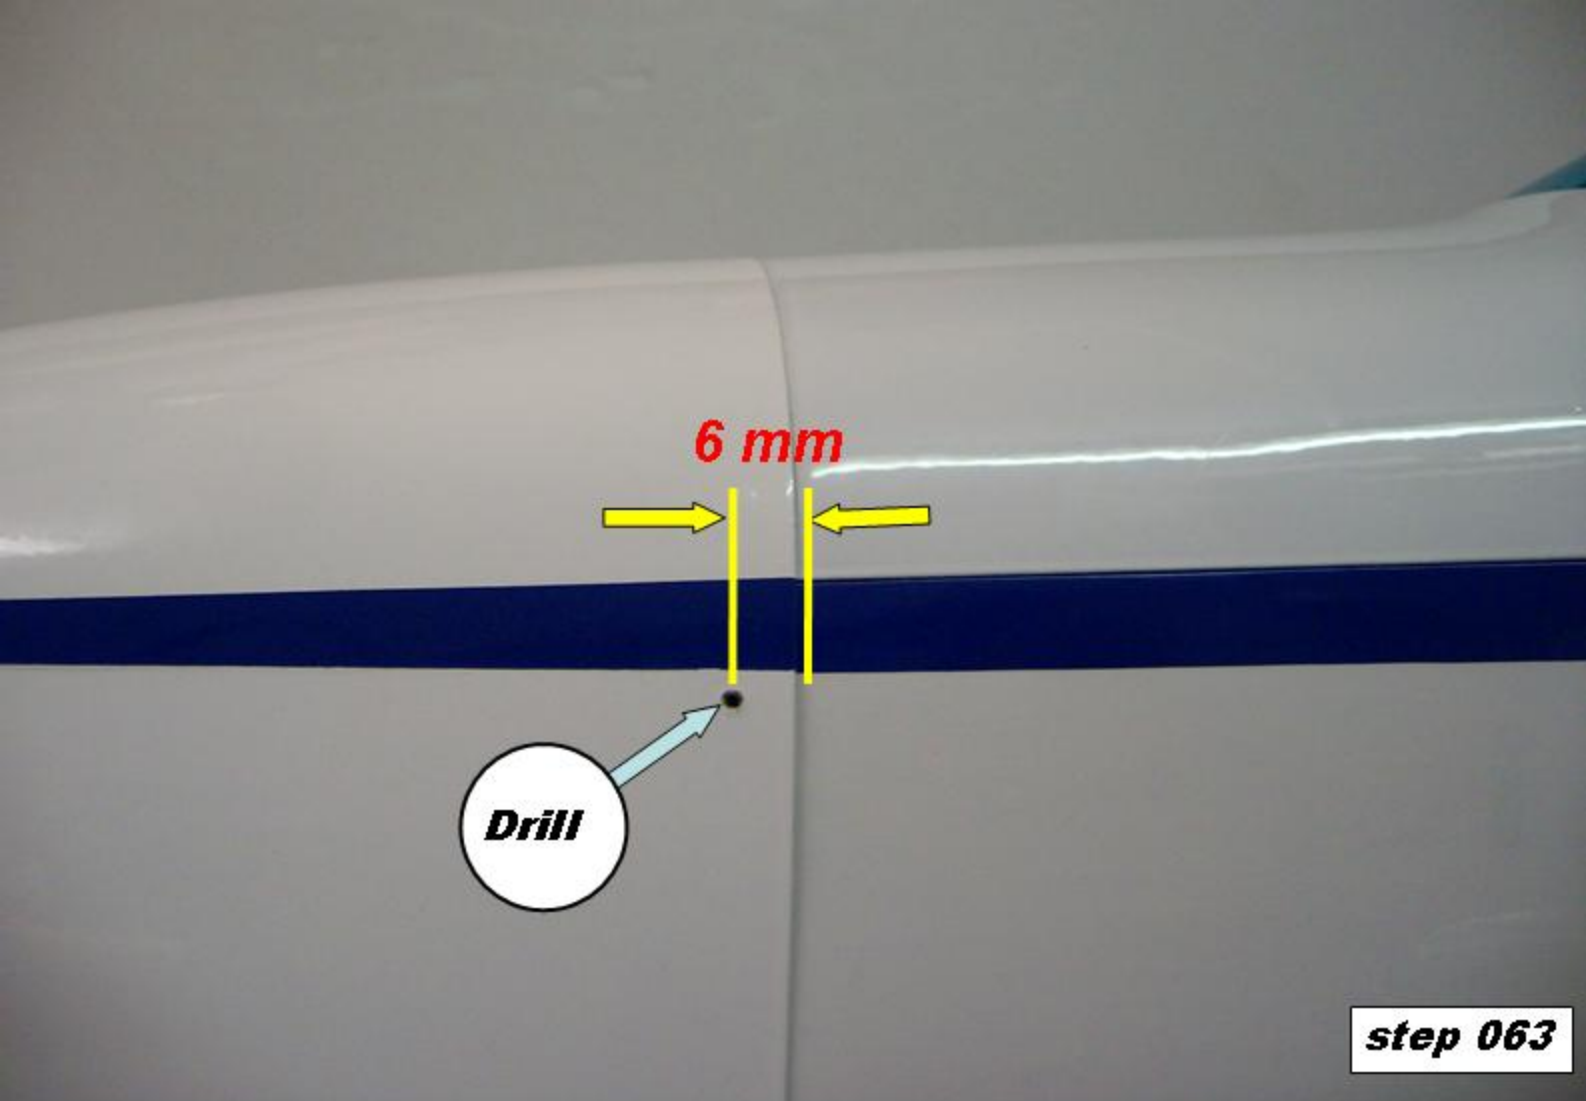








step 065

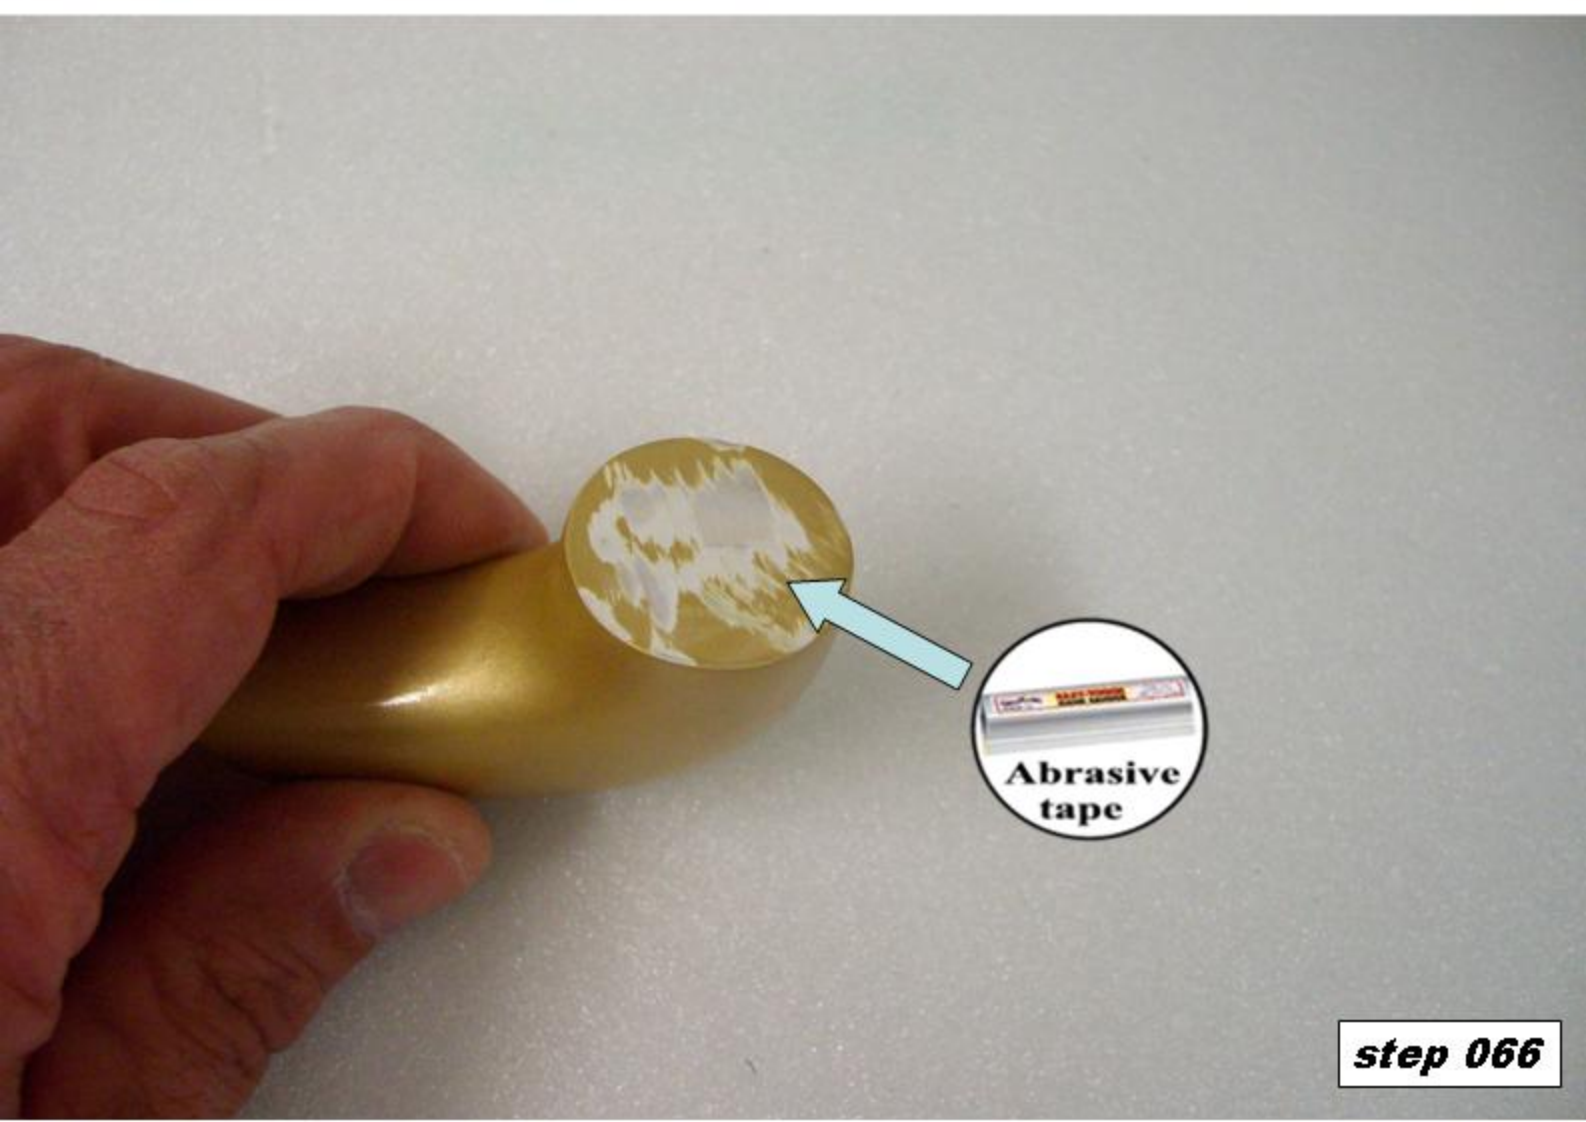


step 066

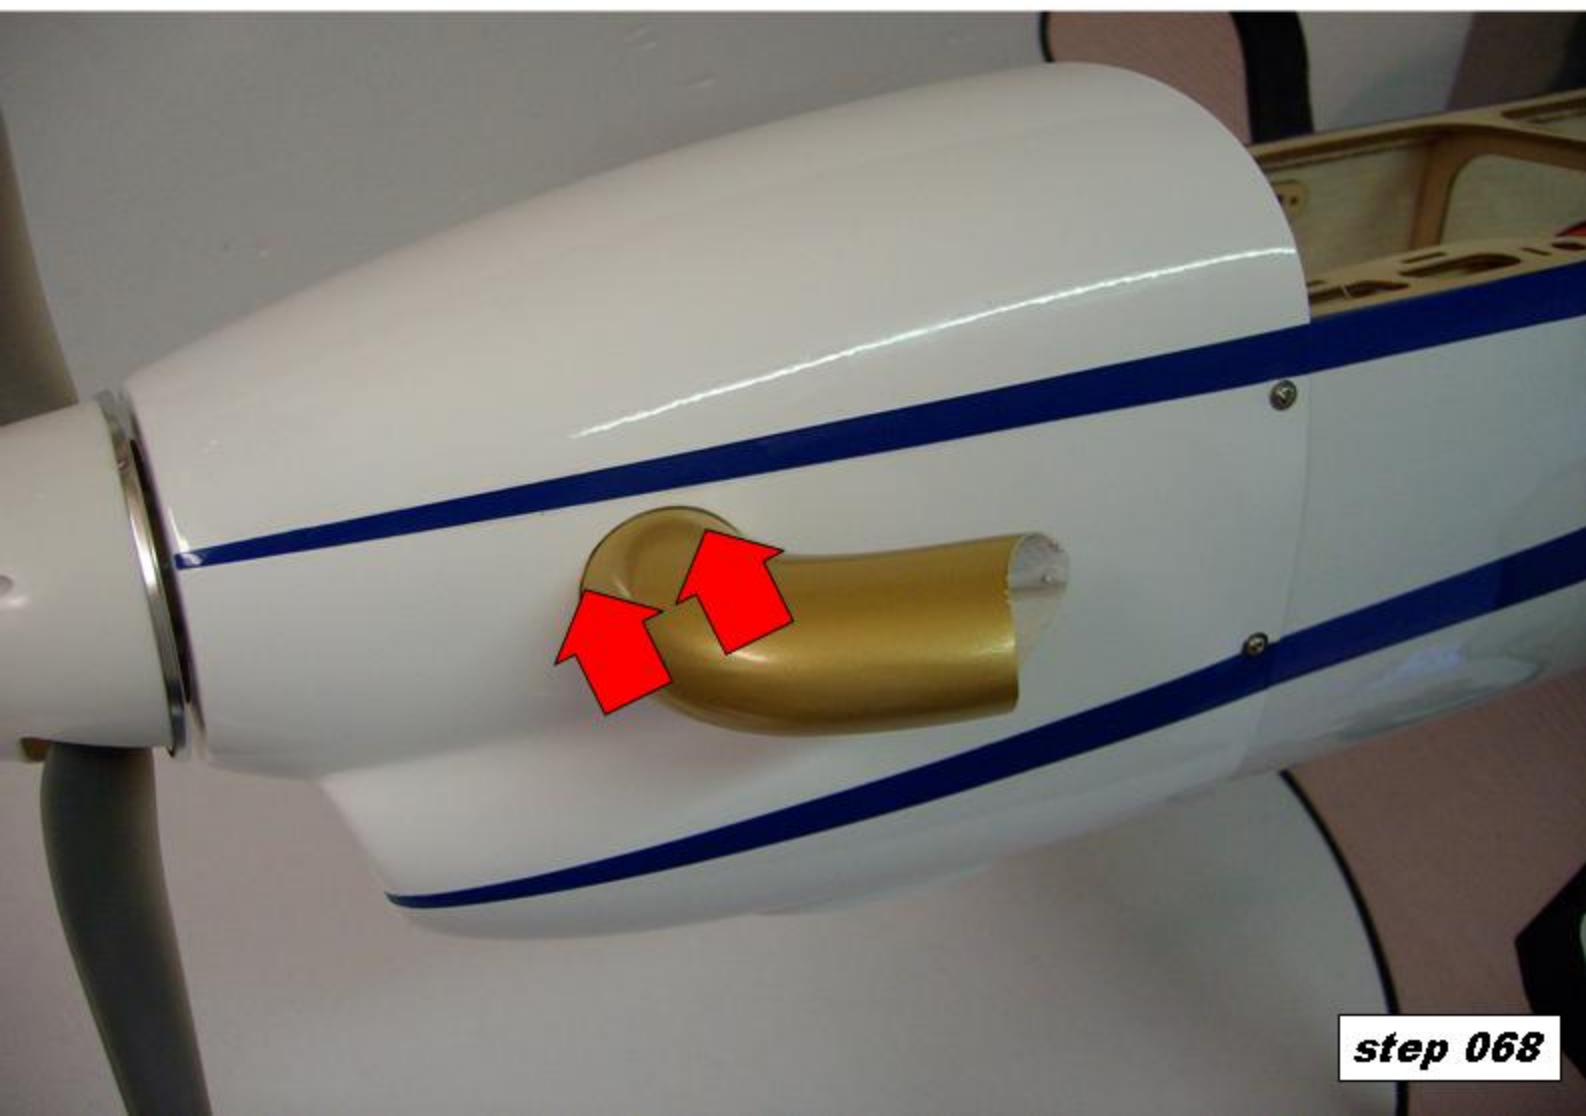
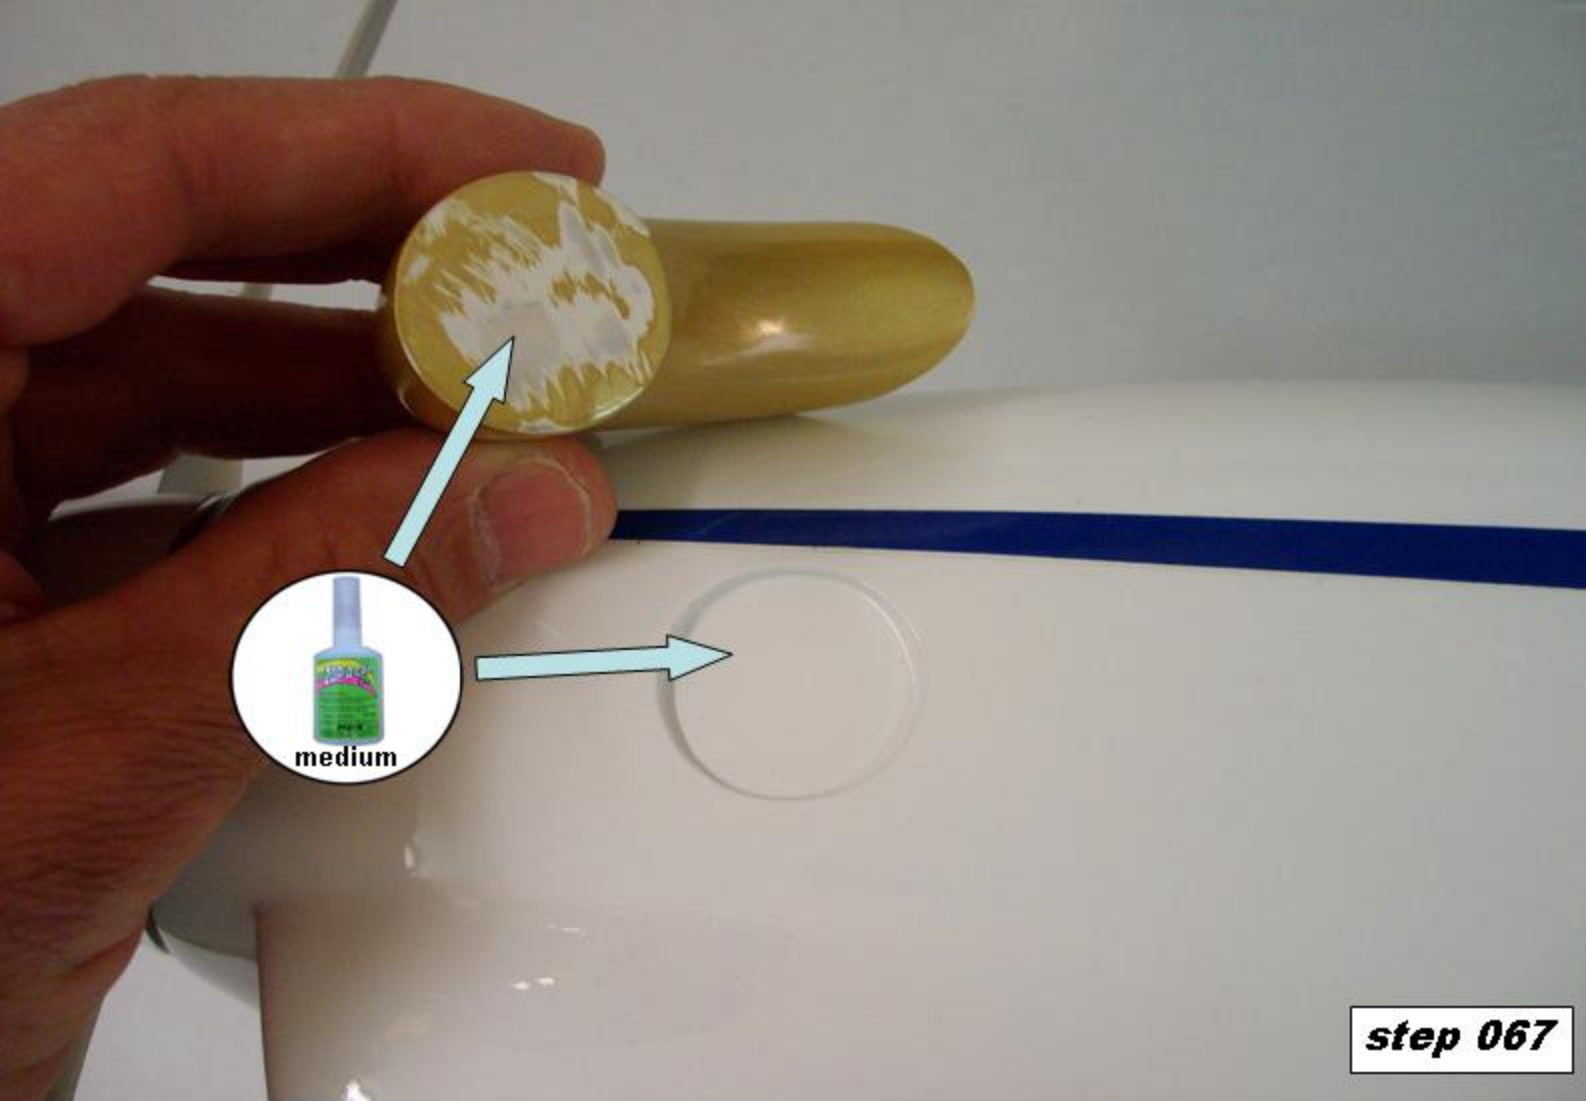



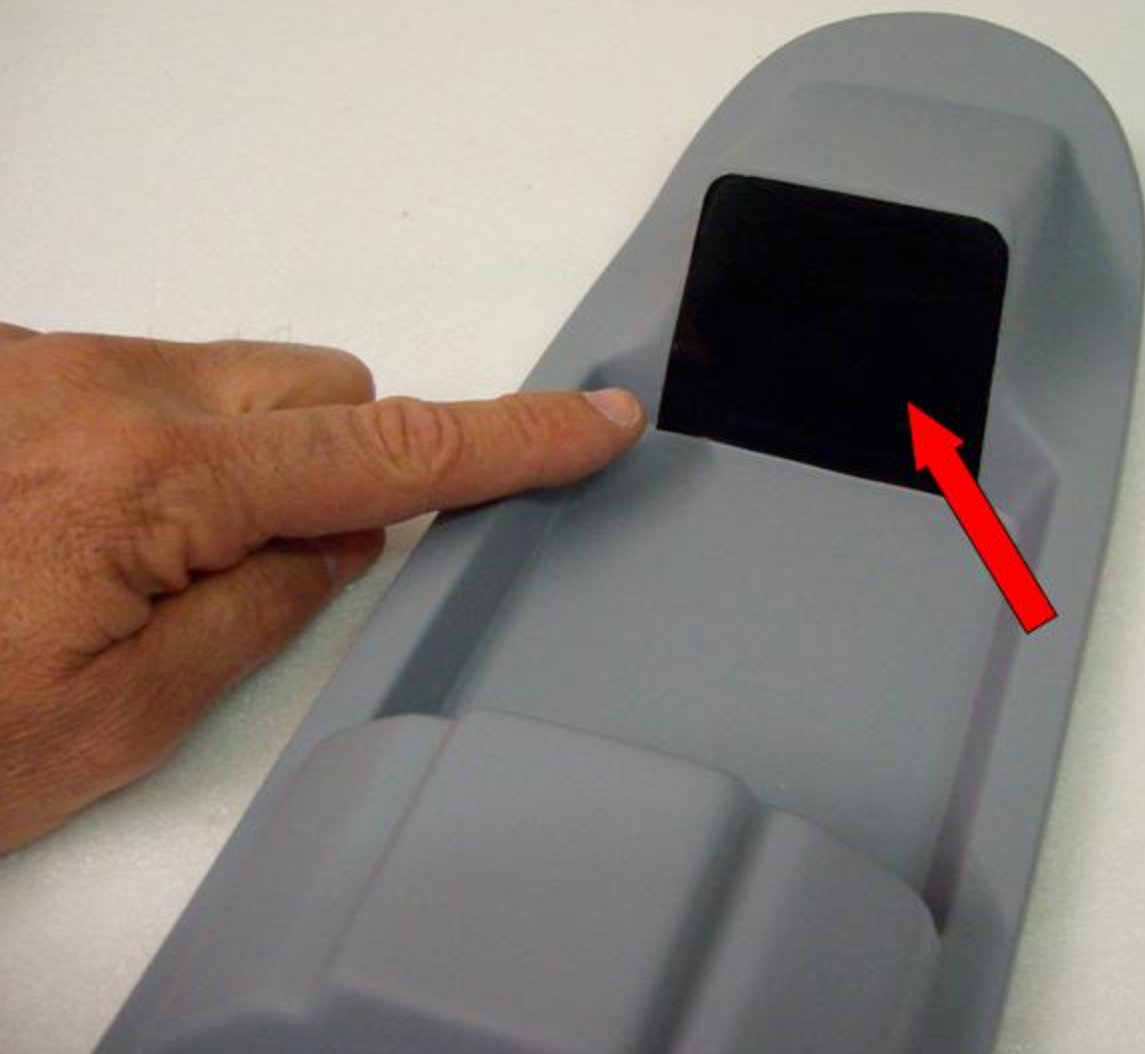




step 075

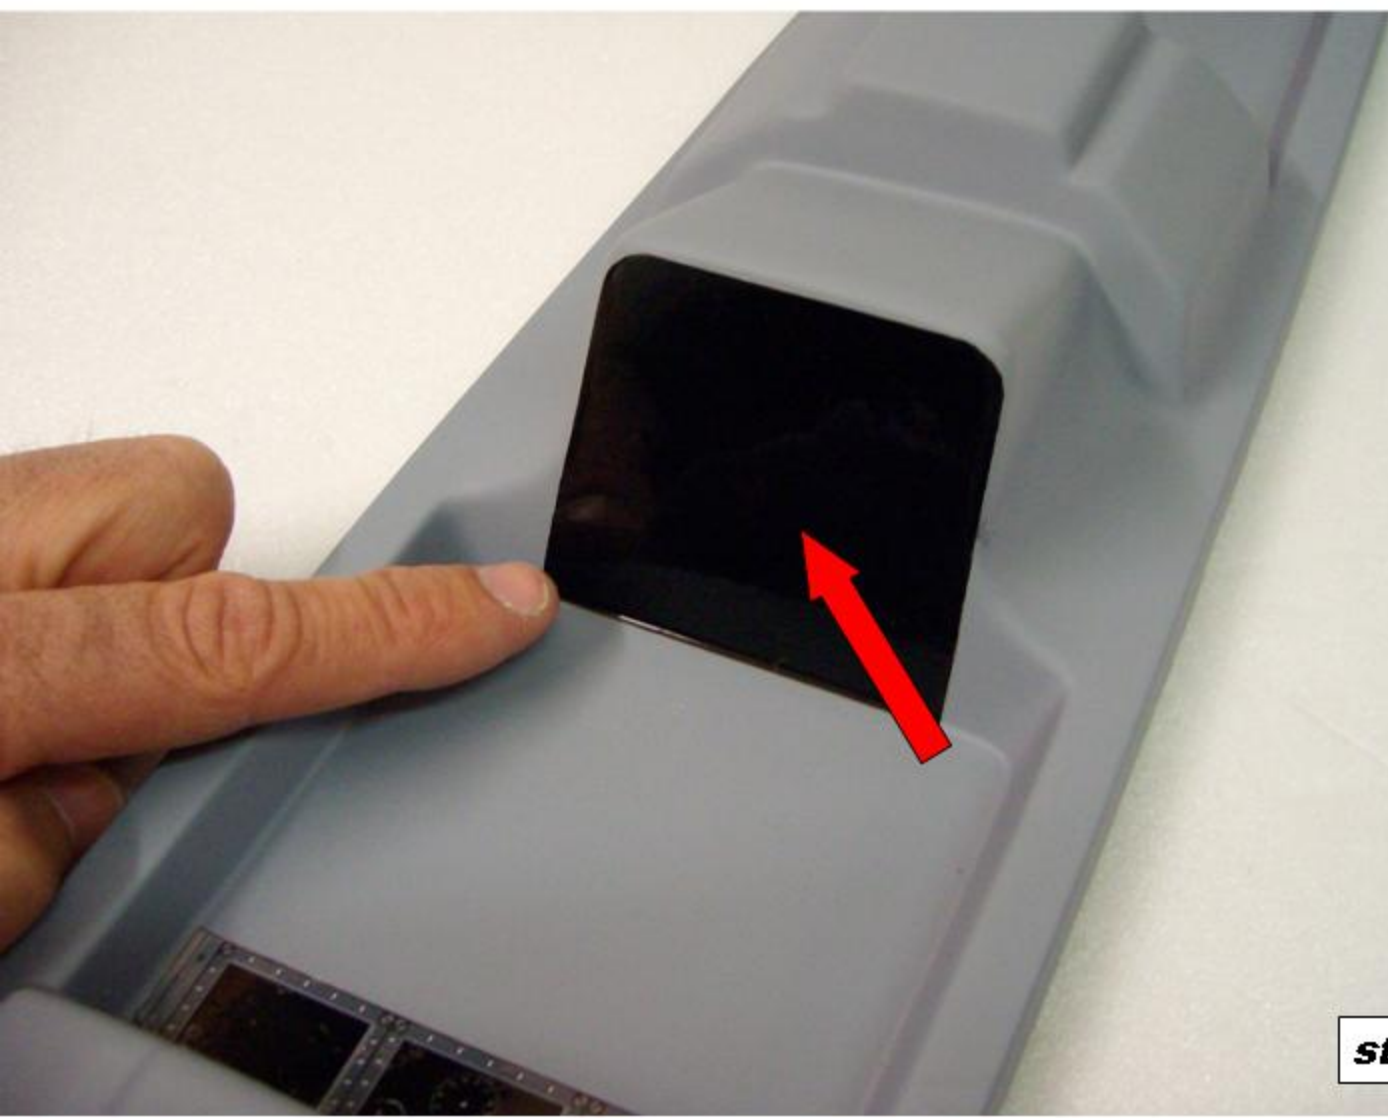

step 076

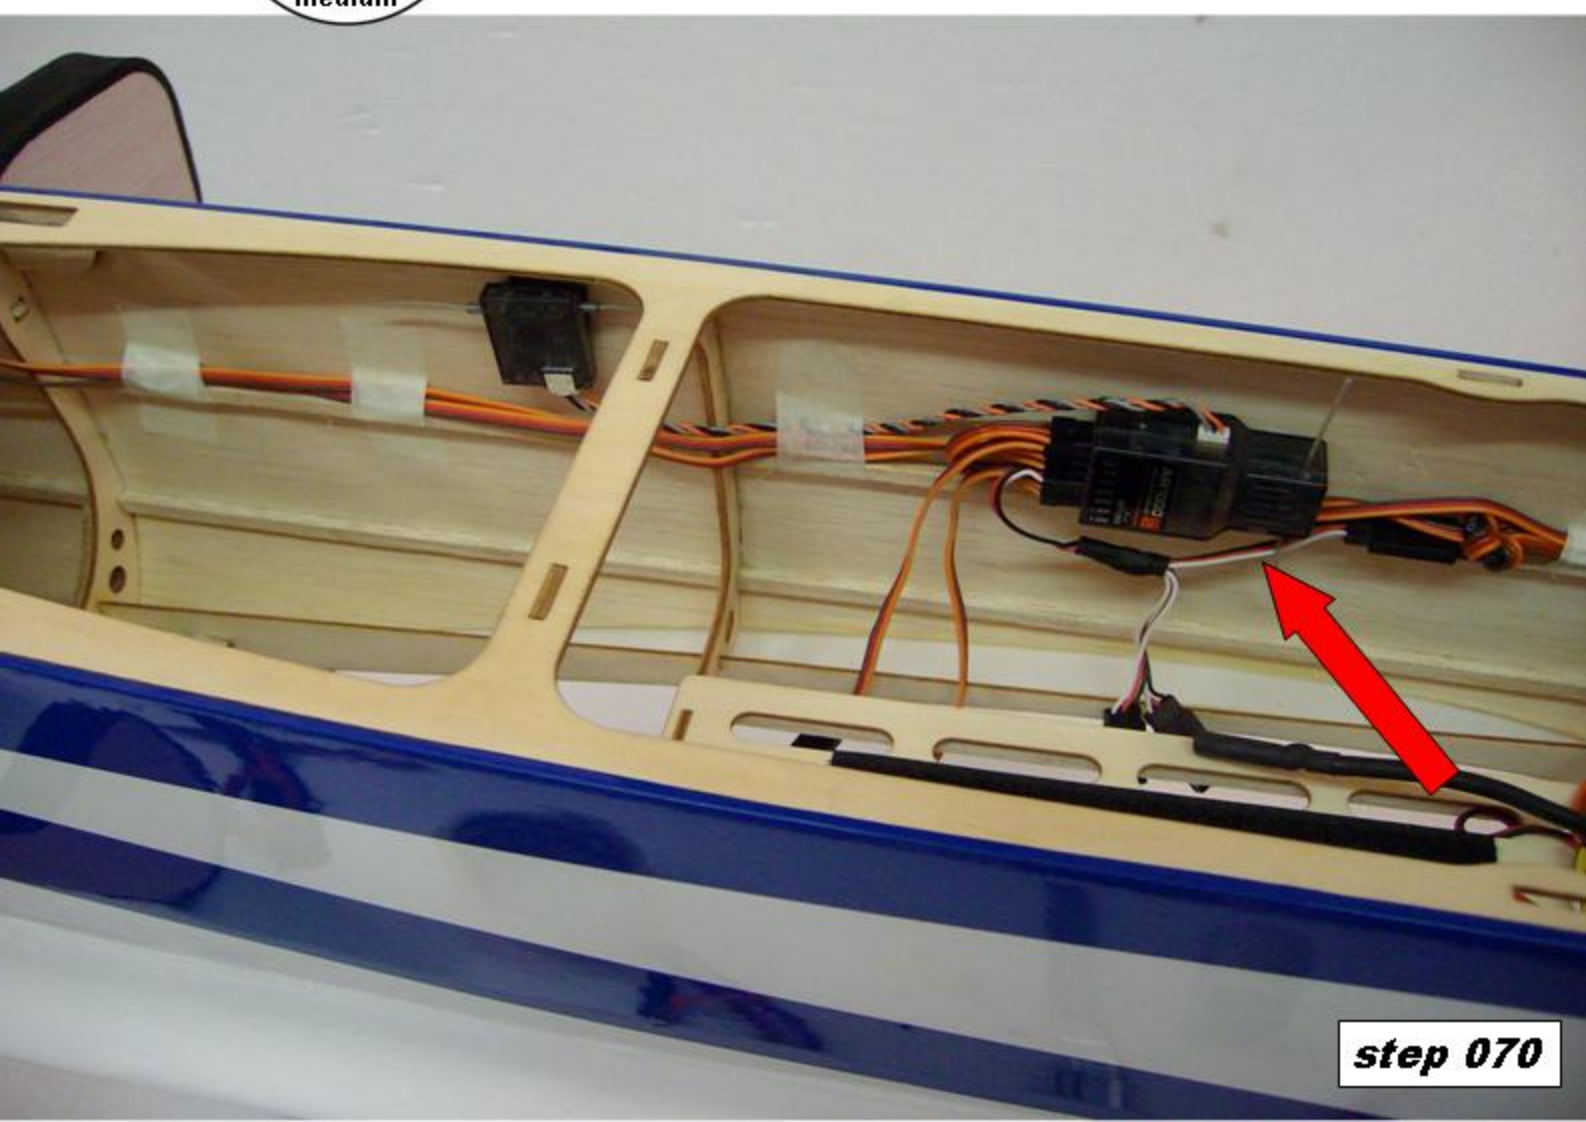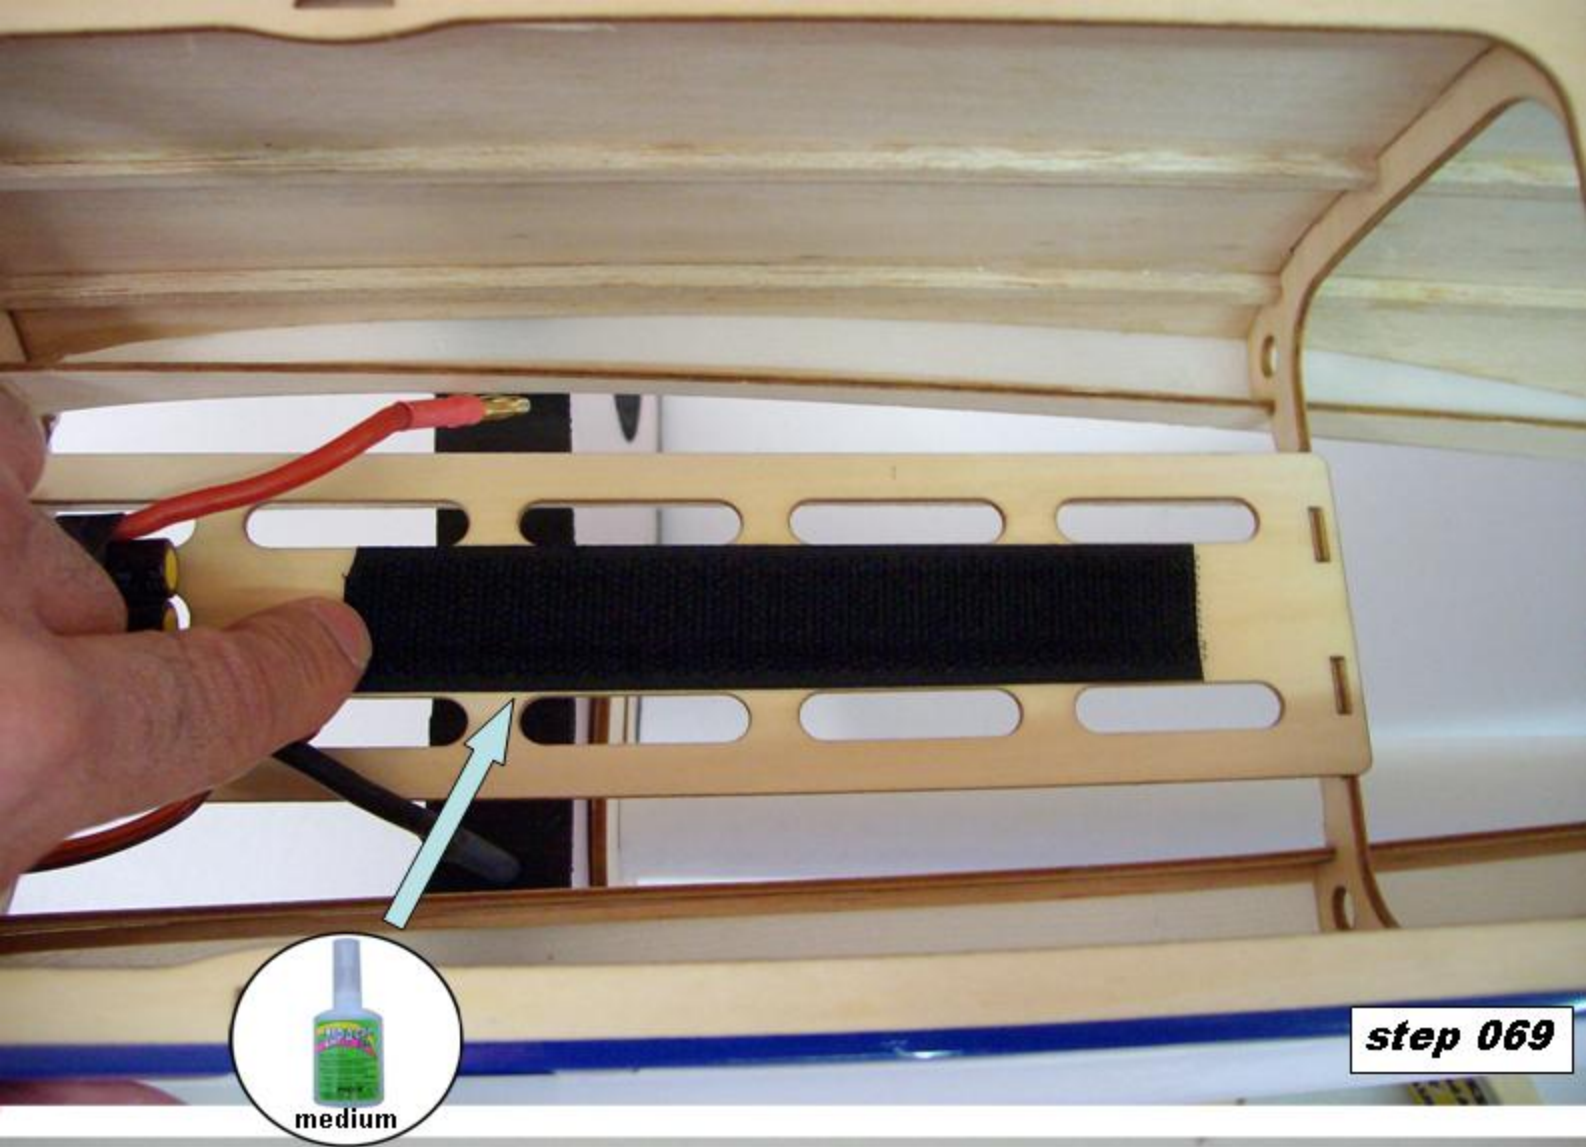


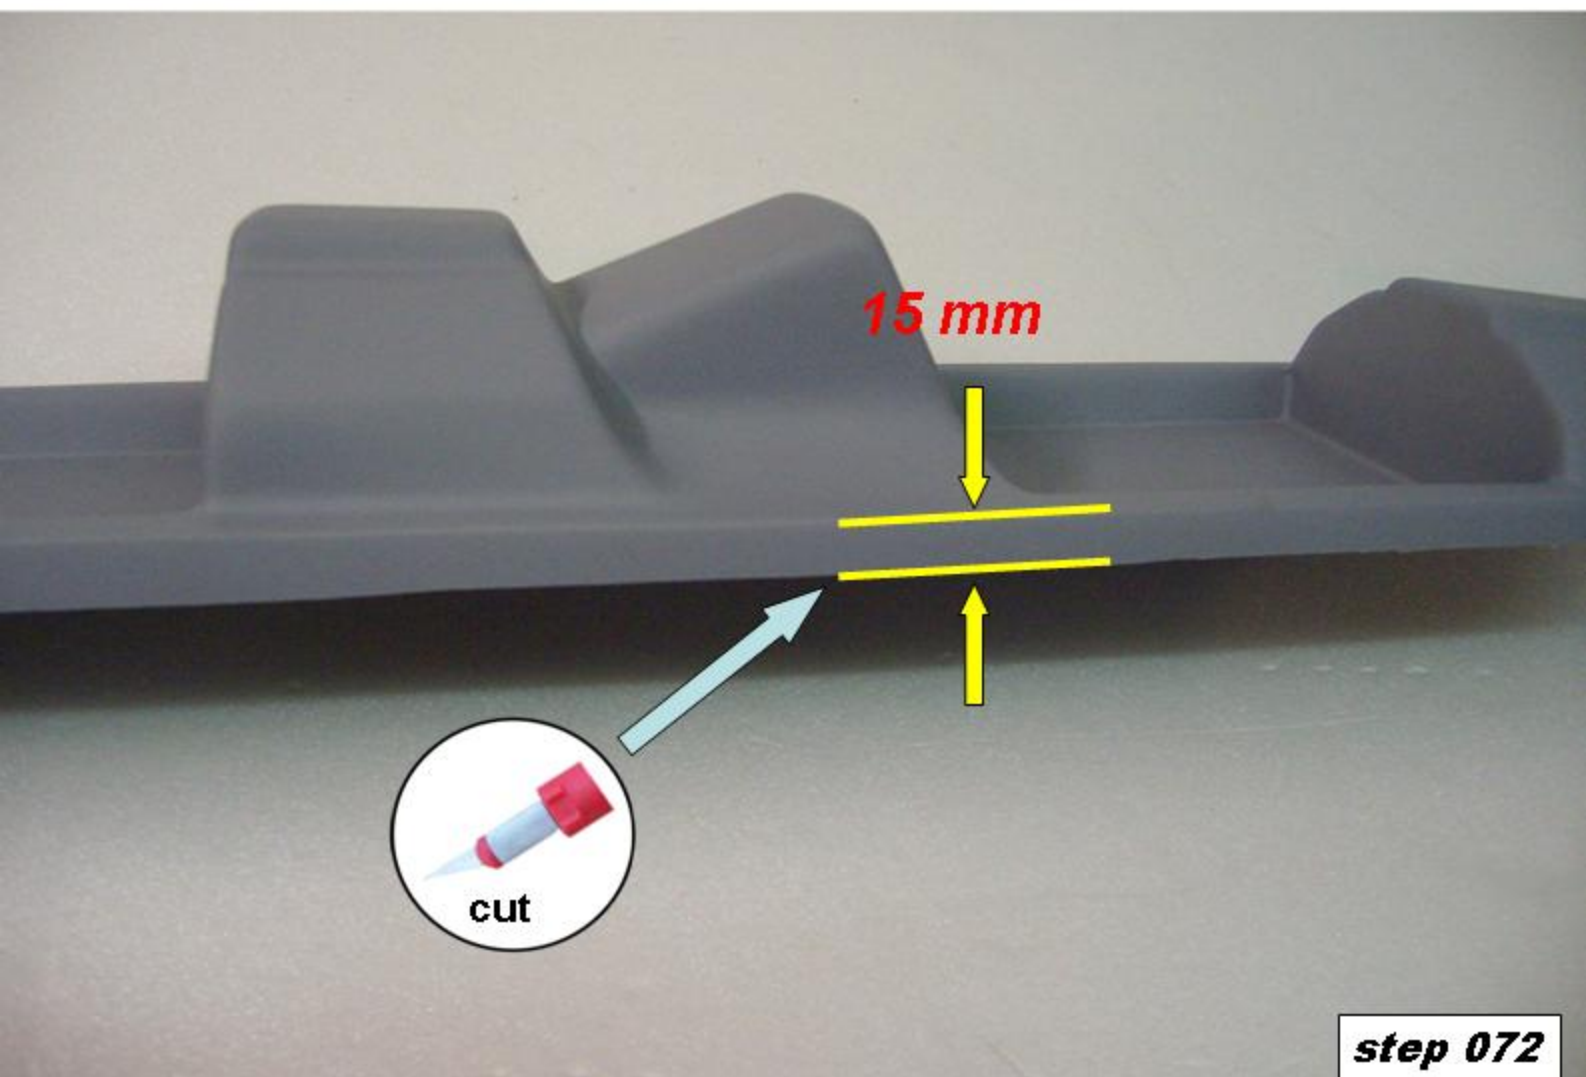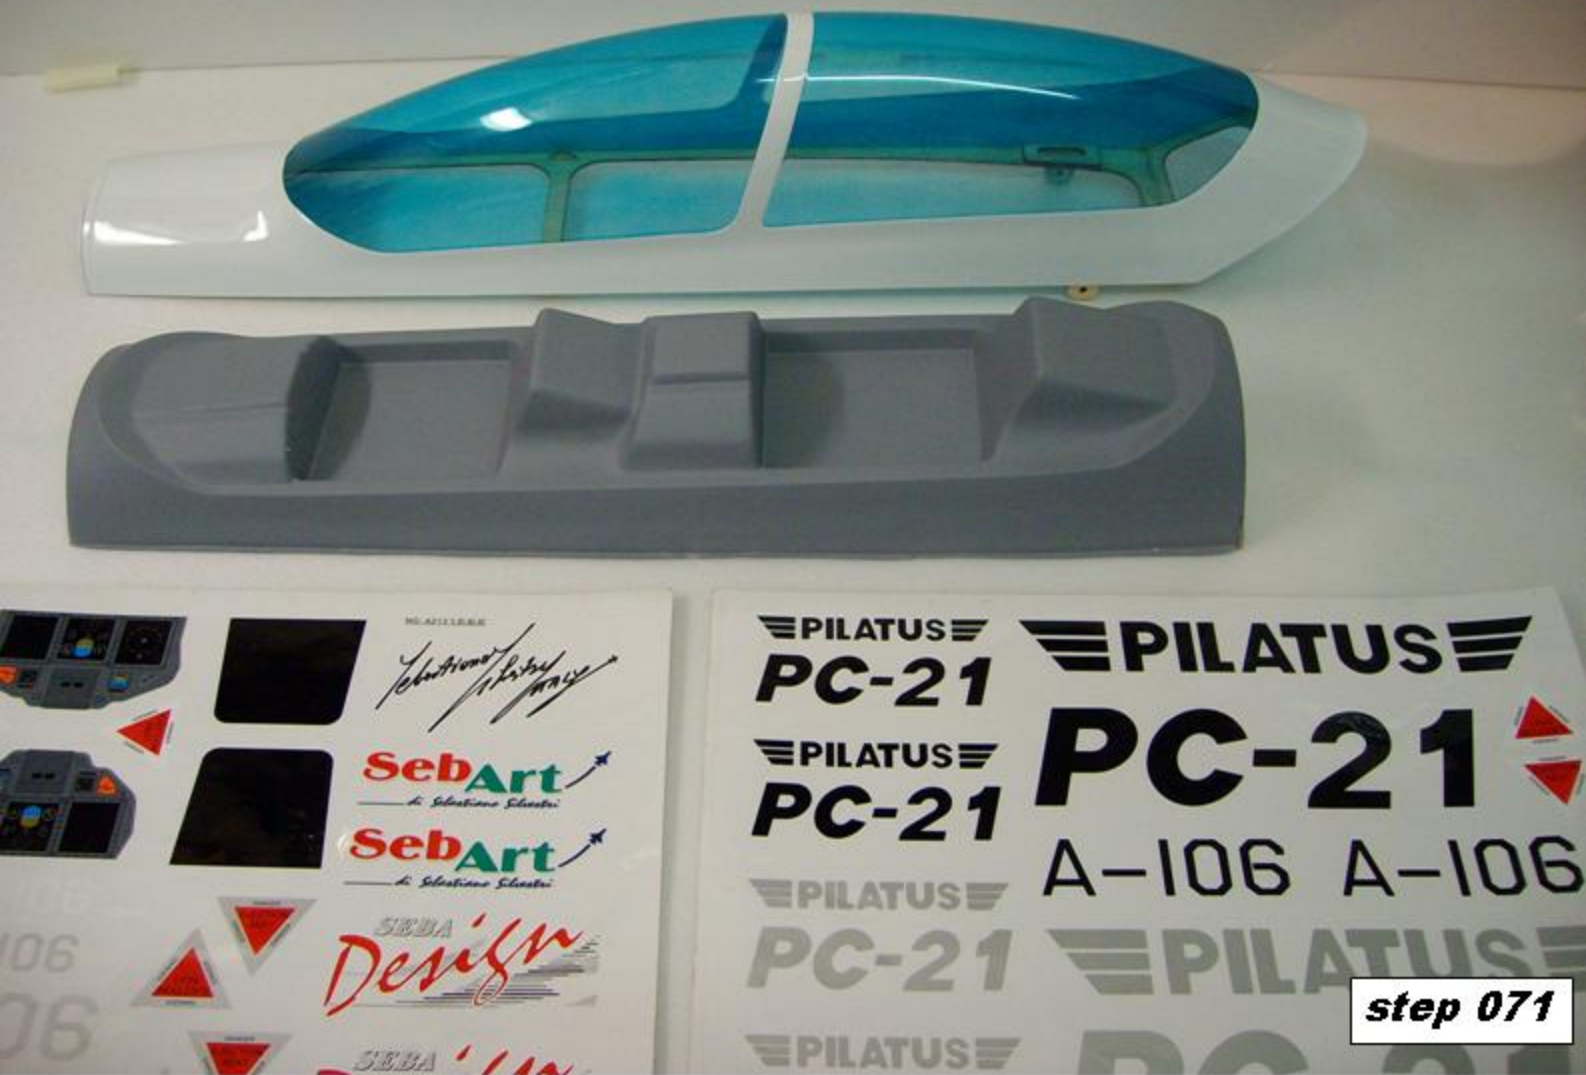

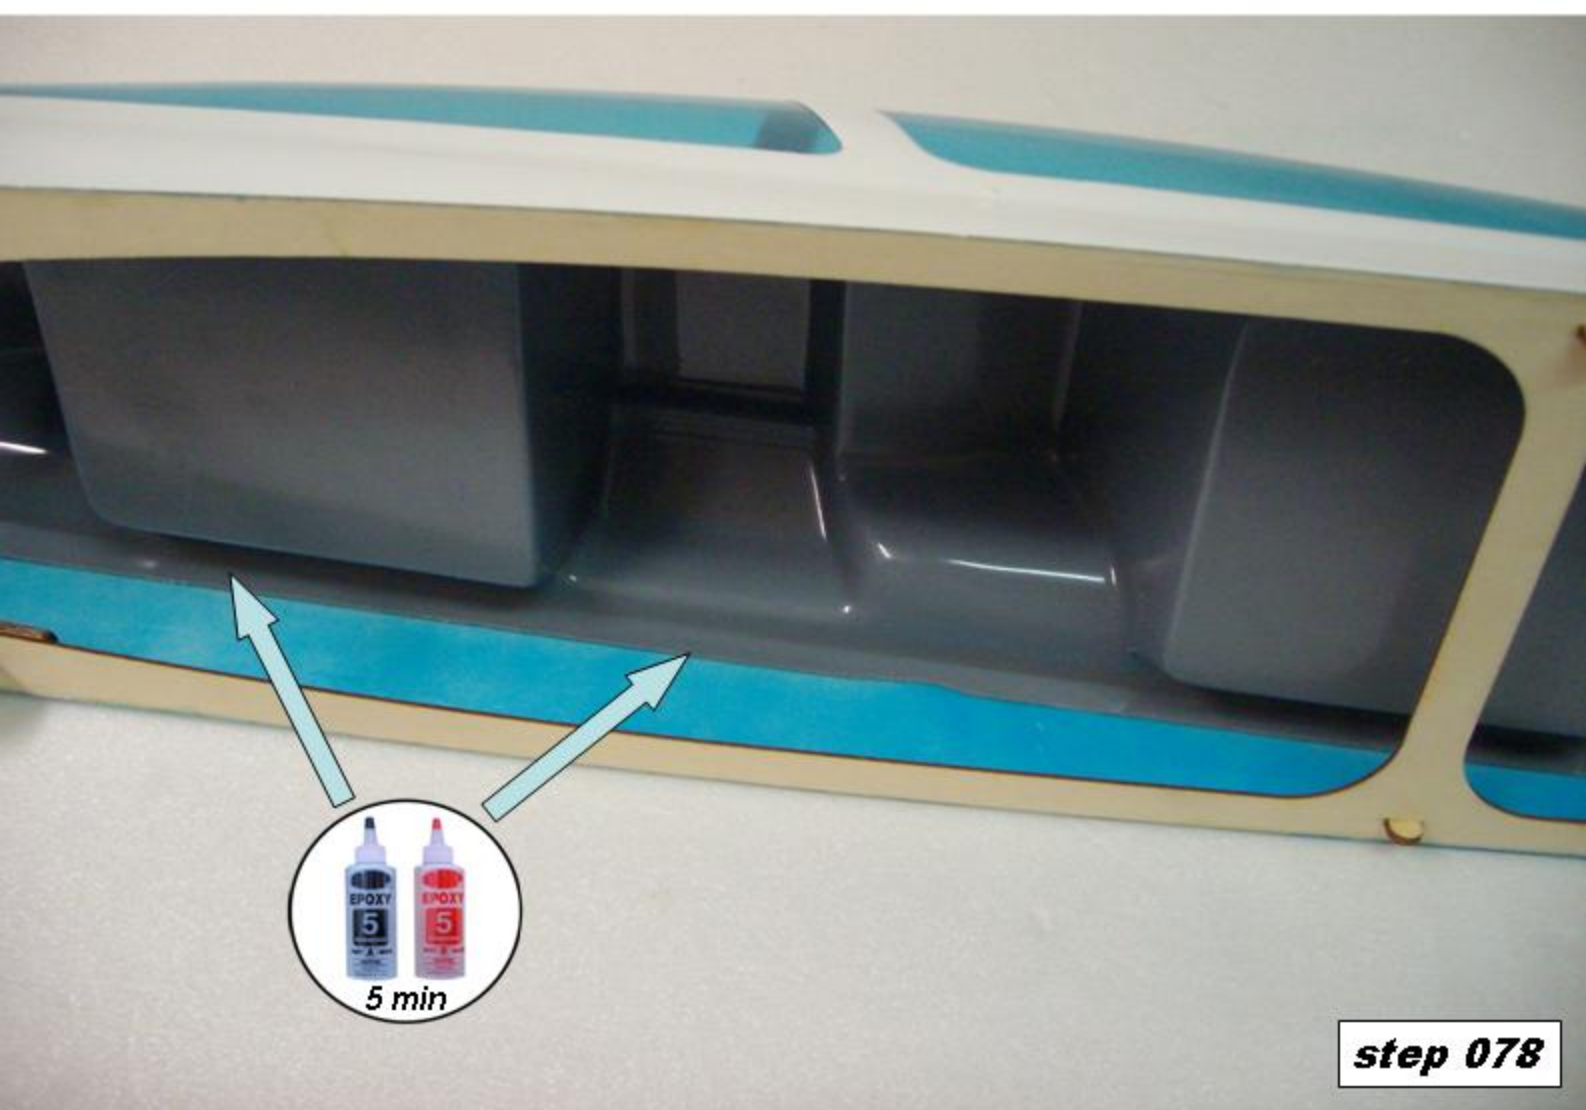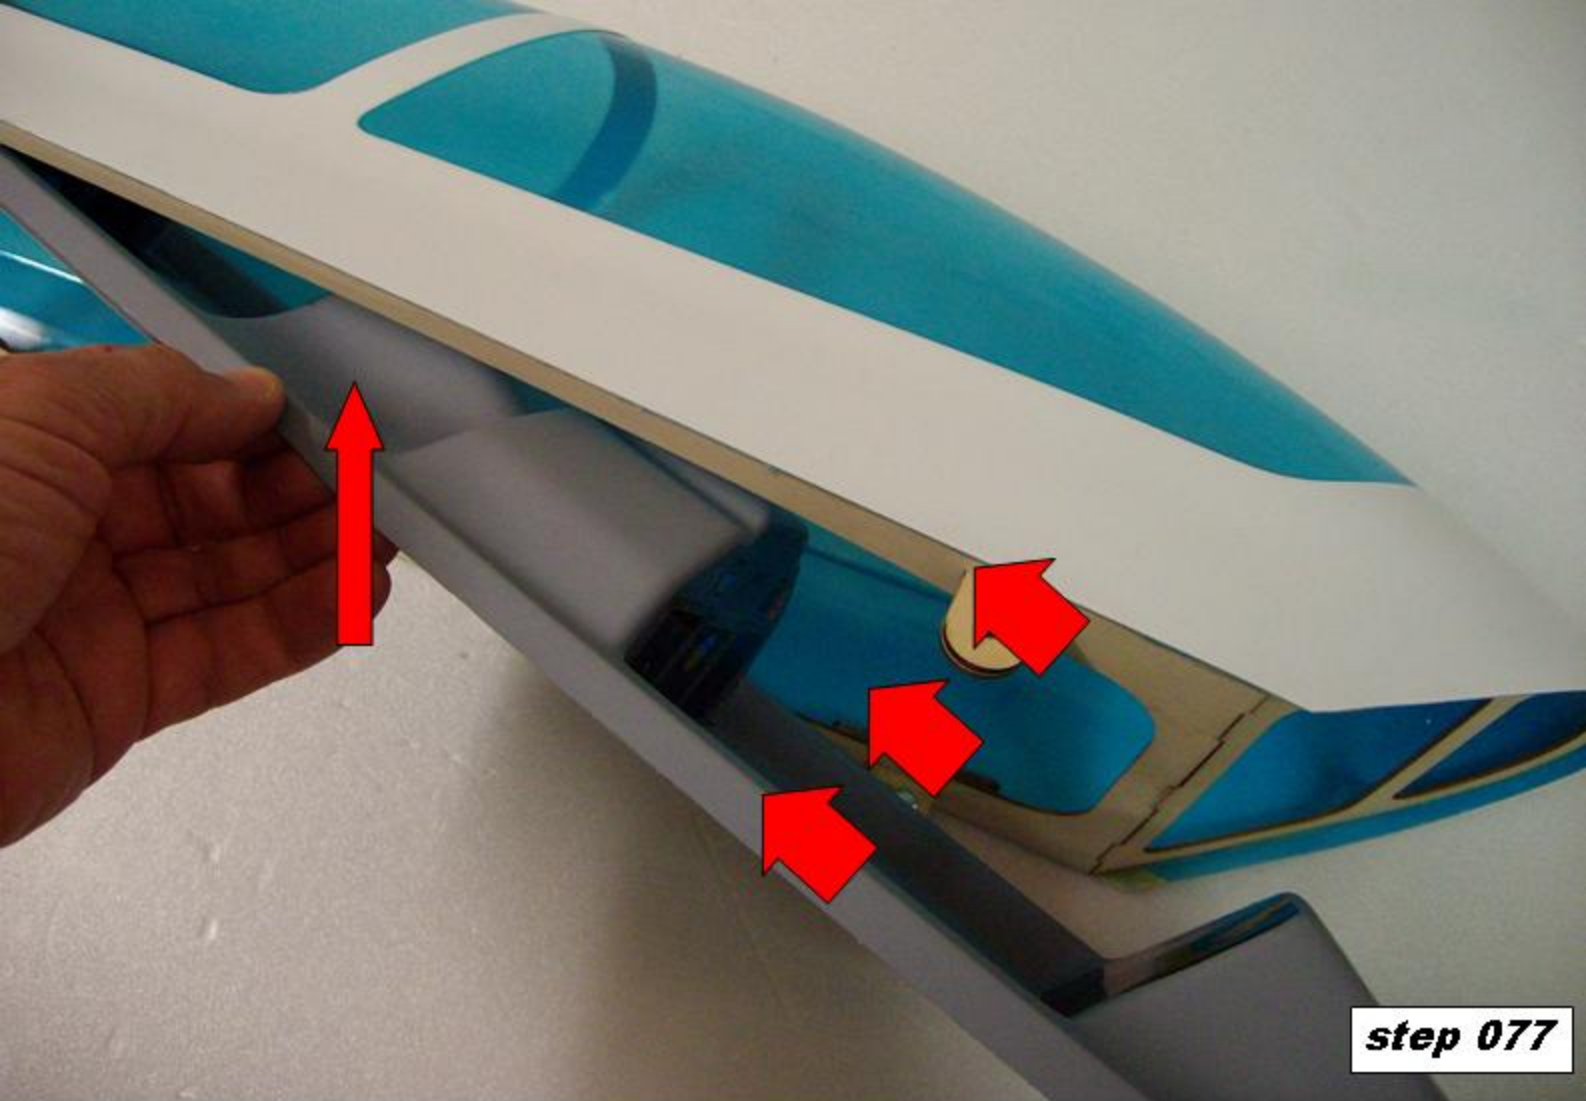




step 079

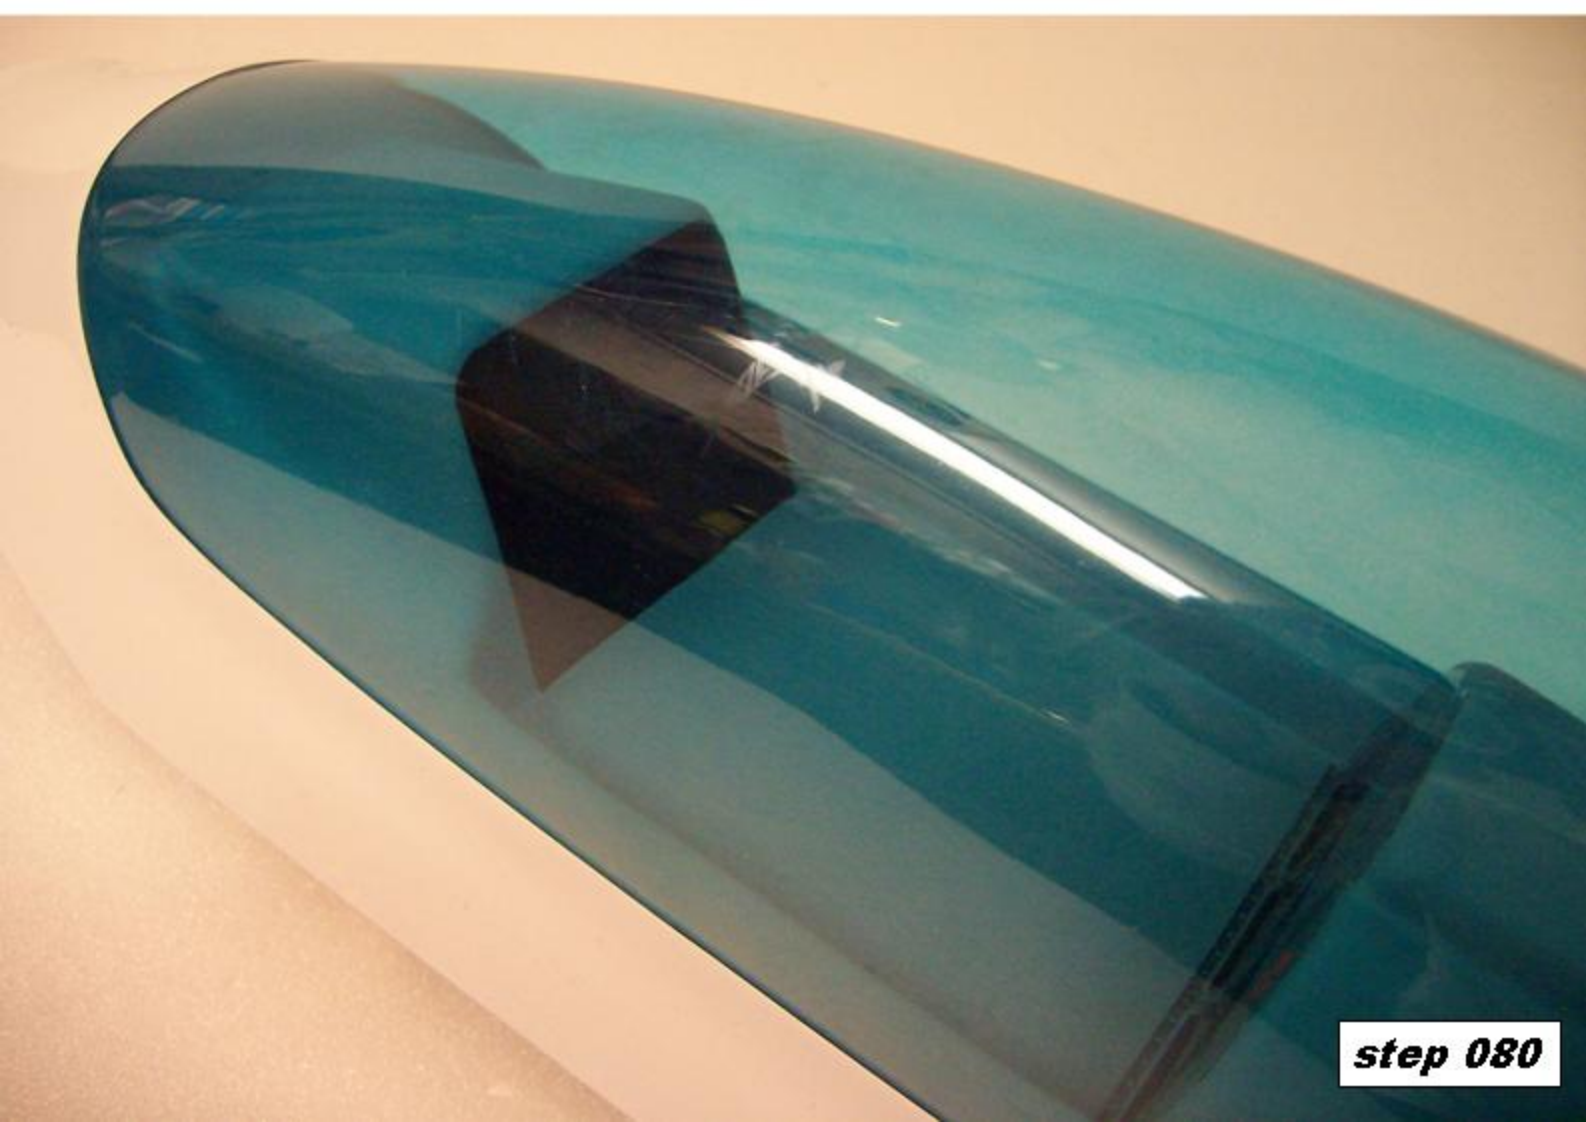



step 080

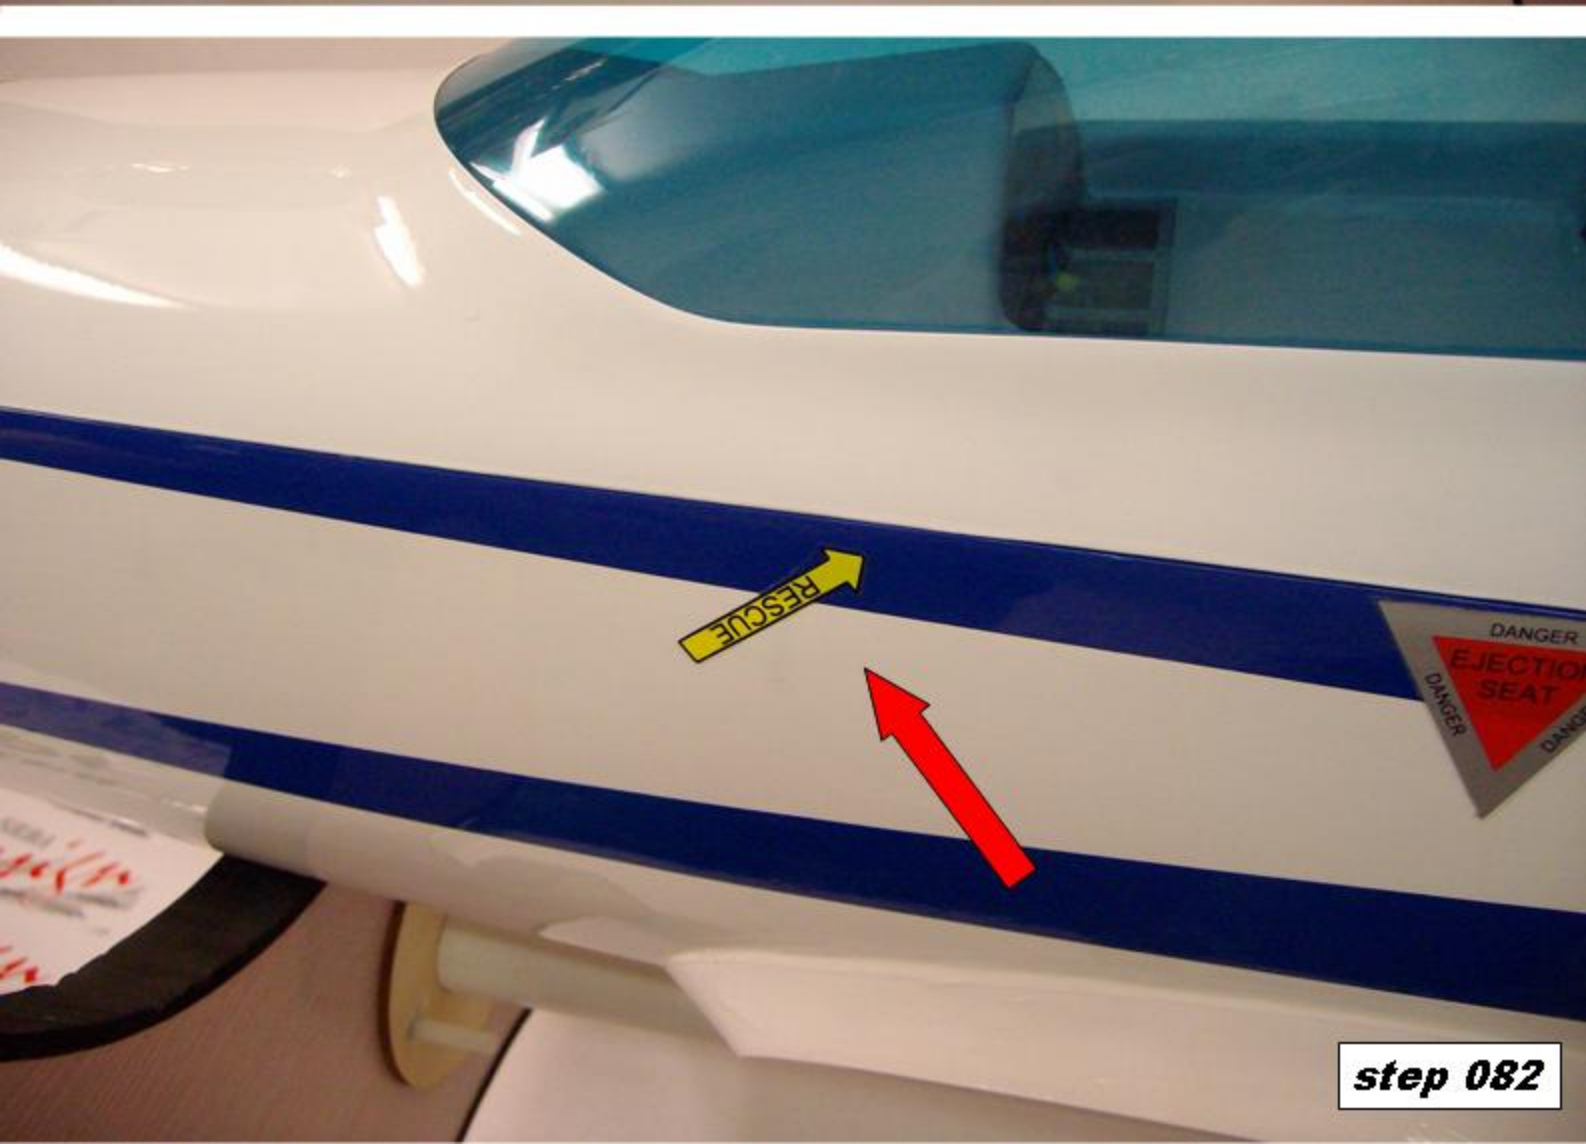





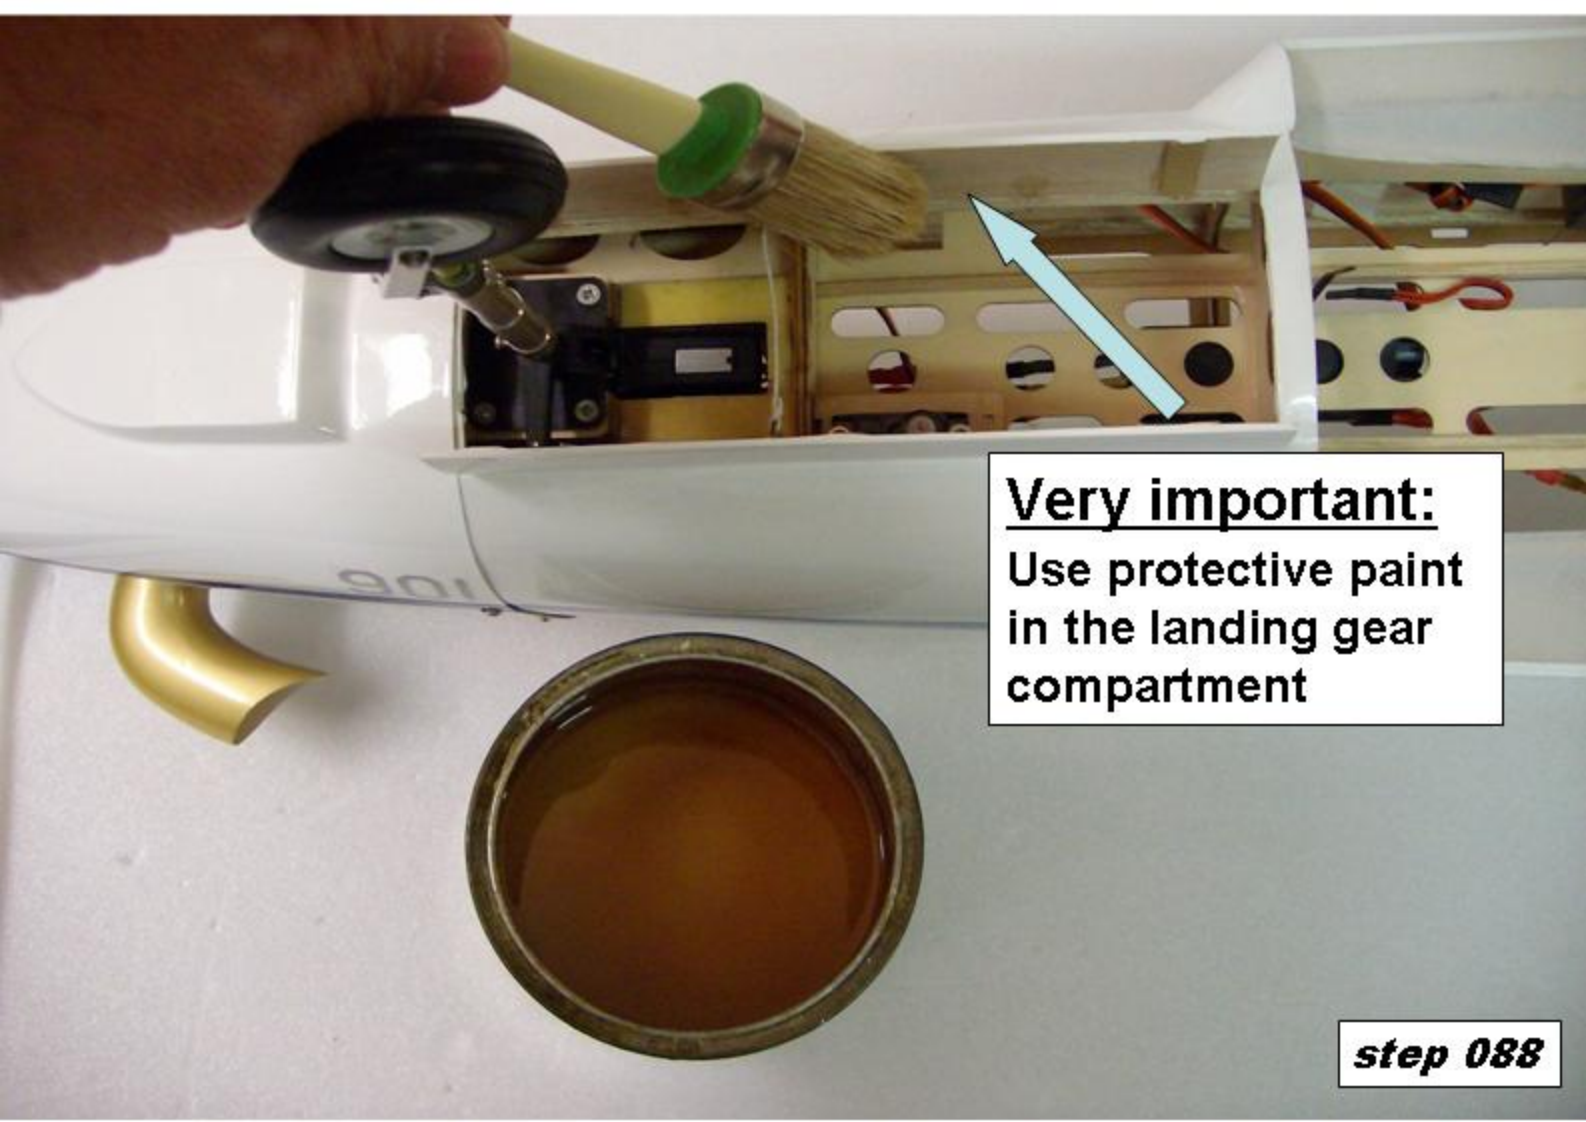

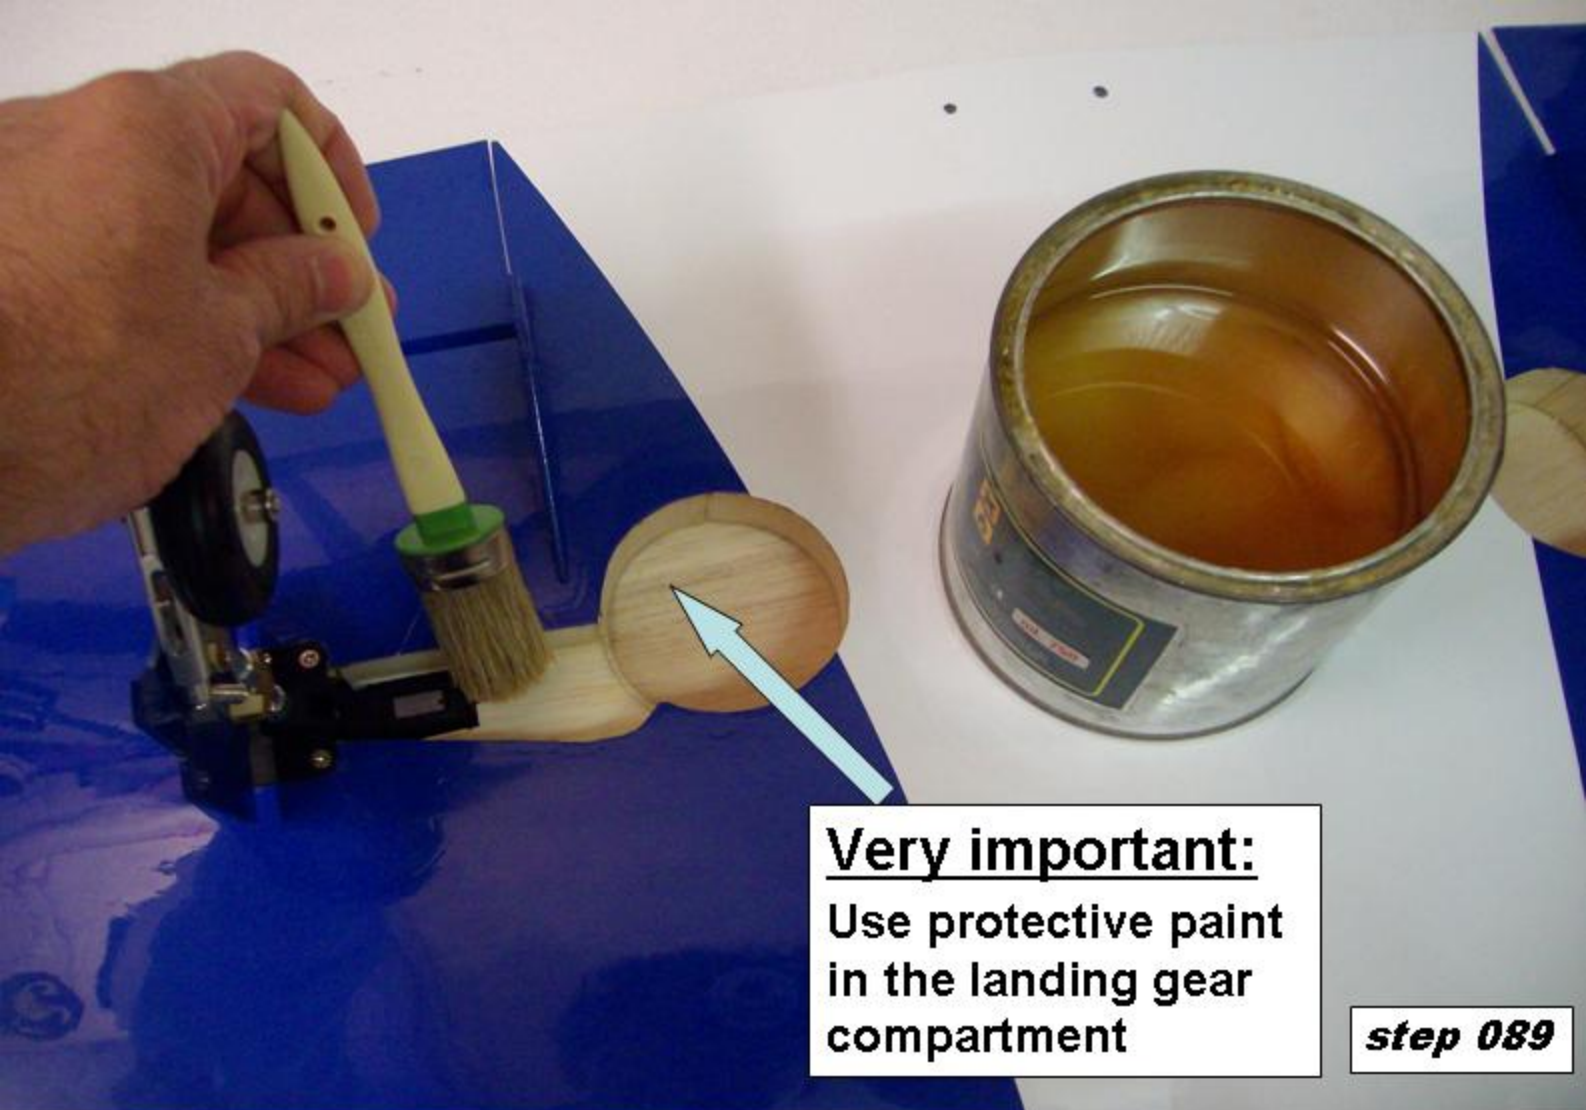

Very important:
Use protective paint
in the landing gear
compartment

step 089



step 090

