

ALIGN



TB70

INSTRUCTION MANUAL

輕量化 動力強

二次降比 皮帶傳動

TAIL BELT DRIVE

Shopping Cart



TB70 MANUAL



INTRODUCTION	CANOPY ASSEMBLY
前言 1	機頭罩安裝 24
SAFETY NOTES	SERVO SETTING AND ADJUSTMENT
安全注意事項 1	伺服器設定調整 25
SAFETY CHECK BEFORE FLYING	ADJUSTMENTS FOR GYRO AND TAIL NEUTRAL SETTING
飛行前安全檢查重要事項 3	陀螺儀與尾翼中立點設定調整 25
EQUIPMENT REQUIRED FOR ASSEMBLY	MAIN BLADES ROTATIONAL SPEED SETTING
自備設備 4	主旋翼轉速設定 25
PACKAGE ILLUSTRATION	POWER COLLOCATION REFERENCE
包裝說明 4	原裝動力數據參考表 26
MODEL STANDARD EQUIPMENT DIFFERENCE	BUSHLESS SPEED CONTROLLER INSTRUCTION MANUAL
標配版本介紹 5	無刷調速器使用說明 27
ASSEMBLY SECTION	CHECKLIST AFTER FLIGHT
組裝說明 6	飛行後檢查清單 29
ELECTRONIC EQUIPMENT ILLUSTRATION	TROUBLESHOOTING
電子設備建議配置圖示 23	飛行中狀況排除 31
ESC AND SERVO WIRING ILLUSTRATION	TB70 SPECIFICATION COMPARISON TABLE
接線示意圖 23	規格對照表 33
BATTERY INSTALLATION ILLUSTRATION	
電池安裝示意圖 23	

Thank you for purchasing Align products. Please read the manual carefully before installing and be sure to retain the manual for future reference. All pictures shown are for illustration purpose only. Actual product may vary due to product enhancement. Specifications, contents of parts and availability are subject to change, ALIGN RC is not responsible for inadvertent errors in this publications.

承蒙閣下選用亞拓遙控世界系列產品，謹表謝意。

使用前，請務必詳閱本說明書，相信一定能夠給您帶來相當大的幫助，也請您妥善保管這本說明書，以做為日後參考。本公司將不對此印刷物之異動負責，也無法主動通知消費者任何更新或異動。所有圖片僅用於展示目的。產品可能因改良而有些不同。本說明書內記載的材質、規格或零件包裝之內容物如有異動，請依亞拓官網公告為主。

!!Remind!! 提醒

ALIGN
自行拆改裝 保固失效
The warranty could
invalid if modified

Dear customers,
For your consumer rights, please do not disassemble or modify Align products. If there is any unauthorized disassembly or modification, the warranty of the product will become invalid immediately! Hereby declare!




敬愛的客戶：

為了您的消費權益，本公司所售出之產品請勿自行拆裝、改裝。如果有任何私自拆改裝，產品的保修、保固責任即刻失效！特此聲明！

Thank you for buying ALIGN Products. The TB70 Helicopter is designed as an easy to use, full featured Helicopter R/C model capable of all forms of rotary flight. Please read the manual carefully before assembling the model, and follow all precautions and recommendations located within the manual. Be sure to retain the manual for future reference, routine maintenance, and tuning. The TB70 is a new product developed by ALIGN. It features the best design available on the R/C helicopter market to date, providing flying stability for beginners, full aerobatic capability for advanced fliers, and unsurpassed reliability for customer support.

感謝您選購亞拓產品。為了讓您容易方便的使用亞拓遙控直升機、請您詳細的閱讀完本說明書之後再進行組裝以及操作這台直升機，同時請您妥善的保存這本說明書、作為日後進行調整以及維修的參考。TB70是由亞拓自行研發的新產品，不論是需求飛行穩定性的初學者或需求性能卓越的飛行愛好者，都將是您最佳選擇。

WARNING LABEL LEGEND 標誌代表涵義

	FORBIDDEN 禁止 Do not attempt under any circumstances. 在任何禁止的環境下，請勿嘗試操作。
	WARNING 警告 Mishandling due to failure to follow these instructions may result in damage or injury. 因為疏忽這些操作說明，而使用錯誤可能造成財產損失或嚴重傷害。
	CAUTION 注意 Mishandling due to failure to follow these instructions may result in danger. 因為疏忽這些操作說明，而使用錯誤可能造成危險。

IMPORTANT NOTES 重要聲明

Important Declaration: It's prohibited to fly before passing legal flight certificate (training certificate) of local laws and regulations. Please adhere to local regulation and management policy and pass test to get legal flight certificate (training certificate). Strictly forbid to operate flight by anyone who is unfamiliar with flight experience.

在尚未通過考取該國法規之合格飛行執照（訓練合格證）前，嚴禁實施飛行，請依據該國相關法規及管理辦法，通過考取合法之飛行執照（訓練合格證），嚴禁無熟練操控飛行經驗者操控飛行。

R/C helicopters, including the TB70 are not toys. R/C helicopter utilize various high-tech products and Technologies to provide superior performance. Improper use of this product can result in serious injury or even death. Please read this manual carefully before using and make sure to be conscious of your own personal safety and the safety of others and your environment when operating all ALIGN products. Manufacturer and seller assume no liability for the operation or the use of this product. Intended for use only by adults with experience flying remote control helicopters at a legal flying field. After the sale of this product we cannot maintain any control over its operation or usage.

As the user of this product, you are solely responsible for operating it in a manner that does not endanger yourself and others or result in damage to the product or the property of others.

TB70 遙控直升機並非玩具，它更結合了許多高科技產品所設計出來的休閒用品。所以高品質的使用不當或不熟悉都可能造成嚴重傷害甚至死亡，使用之前務必詳讀本說明書，切勿忽視注意自身安全。注意：任何遙控直昇機的使用，製造商和經銷商是無法對使用者於零件使用的情況或意外造成不幸所發生之意外負任何責任，本產品原提供給有操作過模型或具備經驗的成人或有相當技術的人在符合當地合法遙控飛行場飛行，以確保安全無虞下操作使用，產品售出後本公司將不負任何操作和使用控制上的任何性能與安全責任。

做為本產品的使用者，您，是唯一對於您自己操作的環境及行為負全部的責任之人。

We recommend that you obtain the assistance of an experienced pilot before attempting to fly our products for the first time. A local expert is the best way to properly assemble, setup, and fly your model for the first time. TB70 Helicopter requires a certain degree of skill to operate, and is a consumer item. Any damage or dissatisfaction as a result of accidents or modifications are not covered by any warranty and cannot be returned for repair or replacement. Please contact our distributors for free technical consultation and parts at discounted rates when you experience problems during operation or maintenance.

As Align Corporation Limited has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed nor accepted for any resulting damage or injury. By the act of use, setup or assembly, the user accepts all resulting liability.

模型產品屬於需要操作技術且為消耗性之商品，如經拆裝使用後，會造成不等情況零件損耗，任何使用情況所造成商品不良或不滿意，請無法於保固條件內要求退貨或維修。如請不保固條件下進行修理，本公司不會為分公司或代理商提供技術指導、特價零件供應服務。對使用者於不當使用、誤裝、組裝、修改、或操作、或所造成之毀壞或傷害，本公司無法控制及負責。任何使用、裝設、組裝、修改、或操作不良所造成之毀壞、意外或傷害，使用者應承擔全部責任。

SAFETY NOTES 安全注意事項



- Fly only in safe areas, away from other people. Do not operate R/C aircraft within the vicinity of homes or crowds of people. R/C aircraft are prone to accidents, failures, and crashes due to a variety of reasons including, lack of maintenance, pilot error, and radio interference. Pilots are responsible for their actions and damage or injury occurring during the operation or as a result of R/C aircraft models.
- Prior to every flight, carefully check rotorhead, spindle, shaft screws and tail blade grip screws, linkage balls and screws, ensure they are firmly secured.
- 遙控直昇飛機、直昇機與高自轉速率的飛器，飛行時務必遠離人群，人為組裝不當或機件損壞、電子控制設備不良，以及操控上的不熟悉，都有可能導致飛行失控傷害等不可預期的意外，請飛行者務必注意飛行安全，並需了解自負風險所造成任何意外之責任。
- 每趟飛行前須仔細檢查，主要翼夾座橫樑螺絲、尾設翼夾座螺絲，以及機身各部位球頭、螺絲，確實上膠紙才能升空飛行。

**LOCATE AN APPROPRIATE LOCATION 遠離障礙物及人群**

R/C helicopters fly at high speed, thus posing a certain degree of potential danger. Choose a legal flying field consisting of flat, smooth ground without obstacles. Do not fly near buildings, high voltage cables, or trees to ensure the safety of yourself, others and your model. For the first practice, please choose a legal flying field. Do not fly your model in inclement weather, such as rain, wind, snow or darkness.

真高機飛行時具有一定的速度，相對的也潛在著危險性，因此在選擇也相對的機場。請嚴格遵守當地法規到合法場所進行飛行。務必選擇在平曠合法場所飛行，並必須注意周圍有沒有人、車房、建築物、高電纜、樹木等等，避免隱蔽的不當場地自己與他人財產的損傷。請勿在下雨、打雷等惡劣天氣下操作，以確保本身及機體的安全。

**NOTE ON LITHIUM POLYMER BATTERIES 鋰離子電池注意事項**

Lithium Polymer batteries are significantly more volatile than alkaline or Ni-Cd/Ni-MH batteries used in RC applications. All manufacturer's instructions and warnings must be followed closely. Mishandling of Li-Po batteries can result in fire. Always follow the manufacturer's instructions when disposing of Lithium Polymer batteries.

鋰離子電池一般用在RC使用的鹼性電池、鎳鎘電池、鎳氫電池比較起來更難相對燃燒的。請嚴格遵守建築電池說明書之使用注意事項，切勿嘗試用鋰離子電池。可能造成火災及爆炸及生命財產安全，切勿大意！

**PREVENT MOISTURE 遠離潮濕環境**

R/C models are composed of many precision electrical components. It is critical to keep the model and associated equipment away from moisture and other contaminants. The introduction or exposure to water or moisture in any form can cause the model to malfunction resulting in loss of use, or a crash. Do not operate or expose to rain or moisture.

真高機內部也是由許多精密的電子零件組成，所以必須嚴格防止潮濕或水氣，避免在浴室或雨天時使用，防止水氣進入機體內導致導線零件及電子零件短路而引發不可預期的意外！

**PROPER OPERATION 勿不當使用本產品**

Please use the replacement of parts on the manual to ensure the safety of instructors. This product is for R/C model, so do not use for other purpose.

請勿自行進行加工，任何的升級或更換機體，請使用包裝盒內目錄中的零件，以確保結構的安全。請嚴格按照產品說明書內操作，請勿濫用使用，切勿用於安全、航空外其它非法用途。

**OBTAIN THE ASSISTANCE OF AN EXPERIENCED PILOT 避免獨自操控**

Before turning on your model and transmitter, check to make sure no one else is operating on the same frequency. Frequency interference can cause your model, or other models to crash. The guidance provided by an experienced pilot will be invaluable for the assembly, tuning, trimming, and actual first flight or unforeseen danger may happen. (Recommend you to practice with computer-based flight simulator)

在飛行前請先檢查，將機體開機和遙控頻率同時正確進行飛行，因為頻率的互相干擾導致自己與他人立即墜毀等意外發生。最好請經驗飛行技巧人士指導指導有量。一定的訓練，避免獨自操作飛行。最好經驗的人士在旁指導，才可以開始飛行。否則將會造成不可預期的意外發生。(建議電腦模擬飛行及於專業進入門必做的訓練)

**SAFE OPERATION 安全操作**

Fly only in safe areas, away from crowds of people. Do not hold helicopters in front of eyes. During take-off, landing, and flight, be sure to keep the helicopter away from all obstacles. Operators must stand at least 10 meters away from the helicopter to avoid injury caused by loose parts due to improper assembly or any unforeseen dangers. Operate this unit within your ability. Do not fly under tired condition and improper operation may cause in danger. Never take your eyes off the model or leave it unattended while it is turned on. Immediately turn off the model and transmitter when you have landed the model.

嚴禁用手打取運行中的真高機，務必遠離人群，並嚴禁真高機對準眼睛；當主旋翼轉動後，或起飛/試飛時，務必遠離障礙物，站立位置應與此距離10公尺以上，避免他人為給此不當造成零件脫落，而引發不可預期的財物及人員損傷。請於自己能力內及範圍一定技術範圍內操作真高機。過於疲勞、精神不佳或不會操作，意外發生危險將可能變高。不要在疲弱狀態外飛行，降落後也請馬上關閉真高機和遙控器電源。

**ALWAYS BE AWARE OF THE ROTATING BLADES 遠離運轉中零件**

During the operation of the helicopter, the main rotor and tail rotor will be spinning at a high rate of speed. The blades are capable of inflicting serious bodily injury and damage to the environment. Be conscious of your actions, and careful to keep your face, eyes, hands, and loose clothing away from the blades. Always fly the model a safe distance from yourself and others, as well as surrounding objects.

真高機主旋翼與尾旋翼運轉時會以高轉速下進行，在高轉速下的旋翼會造成自己與他人或在機上或環境上的嚴重損傷。請勿讓機體運轉中的旋翼與他人接觸，並保持安全距離以避免造成危險及損傷。

**KEEP AWAY FROM HEAT 遠離熱源**

R/C models are made of various forms of plastic. Plastic is very susceptible to damage or deformation due to extreme heat and cold climate. Make sure not to store the model near any source of heat such as an oven, or heater. It is best to store the model indoors, in a climate-controlled, room temperature environment.

真高機機身多半是以PE 纖維或聚乙丙、電子產品為主要材質，因此要遠離溫度極低、日曬，以避免因高溫而使材料若惡化損壞機體之可能。



CAREFULLY INSPECT BEFORE REAL FLIGHT 請嚴格執行飛行前之檢查義務



- Before flying, please check to make sure no one else is operating on the same frequency for the safety.
- Before flight, please check if the batteries of transmitter and receiver are enough for the flight.
- Before turn on the transmitter, please check if the throttle stick is in the lowest position. IDLE switch is OFF
- When turn off the unit, please follow the power anioff procedure. Power ON- Please turn on the transmitter first, and then turn on receiver. Power OFF- Please turn off the receiver first and then turn off the transmitter. Improper procedure may cause out of control, so please to have this correct habit.
- Before operation, check every movement is smooth and directions are correct. Carefully inspect servos for interference and broken gear.
- Check for missing or loose screws and nuts. See if there is any cracked and incomplete assembly of parts. Carefully check main rotor blades and rotor holders. Broken and premature failures of parts possibly cause a dangerous situation.
- Check all ball links to avoid excess play and replace as needed. Failure to do so will result in poor flight stability.
- Check if the battery and power plug are fastened. Vibration and violent flight may cause the plug loose and result in out of control.
- 每次飛行前應先確認所使用的頻率是否會干擾他人，以確保自身與他人的安全。
- 每次飛行前應先檢查發射器與接收器電池的電量是否在足夠飛行的狀態。
- 開機前請檢查門栓桿是否位於最低點，熄火降電開關，定速旋開(IDLE)是否處於關閉位置。
- 開機時必須遵守最新設備機型的程序，開機時應先開啟發射器後，再開啟接收器電壓，開機時應先關閉接收器後，再關閉發射器電壓。不正確的開機程序可能會造成失控的現象，影響自身與他人的安全。請養成正確的操作習慣。
- 開機前請先確定直昇機之各部動作是否順暢，及方向是否正確，並檢查電壓線與動力線是否有干涉或磨損的情形，使用厚膠帶的電壓線結構導致不可預期的危險。
- 飛行前應確認沒有缺少或鬆動的螺絲與螺帽，確認沒有鬆裝或不完整或損壞的零件，仔細檢查主旋翼是否有損壞，特別是接近主旋翼支撐的部位，損壞或鬆裝不完整的零件不僅影響飛行，更會造成不可預期的危險。注意：每次飛行前的安全檢查、保養、及更換機件零件，請確實嚴格執行以確保安全。
- 檢查所有的連接線頭是否有鬆脫的情形，鬆動的連接線頭光更甚，否則可能造成異常機件損壞的危險。
- 確認電池及電源線頭是否固定牢靠，飛行中的鬆動或液化的飛行，可能造成電源線鬆脫於過熱或失效的危險。

INTRODUCTION TO USE OF FUNCTIONAL GLUE/OIL/GREASE 各項功能性膠/油/脂的使用介紹

When you see the marks as below, please use relative glue or grease to ensure flying safety.
標有以下符號之組裝步驟，請配合上膠或上油，以確保機件使用之可靠度。



OIL
潤滑油



CA Glue
瞬間膠



Grease
潤滑油



R48
管狀金屬強力結合膠



T43
螺絲膠

- OIL : Add small amount of OIL.
潤滑油：添加少量潤滑油
- CA : Apply small amount of CA Glue to fix.
黏合膠：使用少量瞬間膠固定
- Grease : Add small amount of Grease.
潤滑油：添加少量潤滑油
- R48 : Apply small amount of Anaerobic Retainer to fix.
管狀金屬強力結合膠：使用少量管狀金屬強力結合膠固定。
R48 is strictly forbidden to be used on screws.
R48 嚴禁用於螺絲固定。
- T43 : Apply small amount of Thread Lock to fix.
螺絲膠：使用少量螺絲膠



Keep plastic parts away from heat.
塑膠件避免靠近熱源。



When assembling ball links,
make sure the "A" character faces outside.
各環面膠與選擇膠扣裝時，"A"字標朝外。



T43 Glue width : approx. 1mm
T43 上膠寬度約1mm

- Anaerobic Retainer (R48) is green penetrating threadlocker and is used to fix the metal tube before assembly at temperatures up to +130°C .
 - Thread Lock(T43) is blue low strength threadlocker and is applied to the small screw(threads) or metal parts before assembly to prevent loosening. Ensure to apply only a small amount and wipe surplus off. When disassembling, recommend to heat the metal joint about 15 Seconds.
 - Grease is kind of lubricant additive which is applied to the one-way bearings or thrust bearing.
- Based on parts physical attributes, please apply small amount of the relative glue or grease accordingly to prevent any parts damage or loosening or unexpected danger happened.

- 管狀金屬強力結合膠 (R48) 為綠色高強度快硬固化的管狀金屬強力結合膠，適用於金屬管狀固定用，可耐高溫至 130 °C 。
 - 螺絲膠 (T43) 為藍色低強度螺絲膠，適合小螺絲；使用於金屬內外殼或膠合螺絲時，請務必適量使用，必要時請用手去除多餘膠量，拆卸時可於金屬接合部位加熱約 15 秒。
 - 潤滑油 (Grease) 為黃狀潤滑油，適用於單向軸承或止推軸承。
- 以上各款功能性膠(油)請依零件屬性需求自行選擇並斟酌其用量，以達到最佳組裝狀態，避免因使用不當造成零件損壞或不可預期的意外發生。


RADIO TRANSMITTER AND ELECTRONIC EQUIPMENT 自備遙控及電子設備

 <p>Transmitter (6-channel or more, Helicopter system) 發射器 (六動以上直昇機模式遙控器)</p>	 <p>Receiver (6-channel or more) 接收器 (六動以上)</p> <p>or 或</p> <p>Remote Receiver 衛星天線</p>	 <p>Intelligent Balance Charger 智慧型平衡充電器 RCC-6CX</p>
 <p>Flybarless System 無平衡翼系統</p>	 <p>[HETB0001] APB00 Digital Pitch Gauge 數位傾正規</p> <p>[HETMT901] Multi-function Tester 多功能檢測計</p>	 <p>22.2V 6S 4200-5800mAh Li-Po Battery 電池 x 2</p>

ADDITIONAL TOOLS REQUIRED FOR ASSEMBLY 自備工具

 <p>Phillips Screw Driver 十字螺絲起子 3.0/1.8mm</p>	 <p>Hexagon Screw Driver 六角螺絲起子 3mm/2.5mm/2mm/1.5mm</p>	 <p>Needle Nose Pliers 尖嘴鉗</p>	 <p>Cutter 刀子</p>	 <p>[H70118] Swashplate Leveler 十字架校正器</p>	 <p>Oil 潤滑油</p>	 <p>CA Glue 瞬間膠</p>	 <p>Grease 潤滑油</p>
--	--	---	--	---	--	--	---

PACKAGE ILLUSTRATION 包裝說明

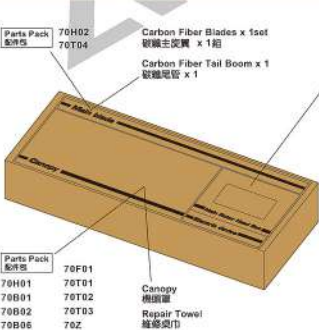

Parts Pack 零件包

70H02
70T04

Carbon Fiber Blades x 1set
碳纖維主旋翼 x 1組

Carbon Fiber Tail Boom x 1
碳纖維尾管 x 1

Parts Pack 零件包

70F01
70H01 70T01
70B01 70T02
70B02 70T03
70B06 70Z

Canopy
機頭罩

Repair Towel
維修桌巾

The Top Combo version includes the following items
Top Combo版本包含以下電器

- 850MX (540KV/453S) Motor x 1
- 850MX (540KV/453S) 無刷馬達 x 1
- RCE-BL200A Brushless ESC x 1
- RCE-BL200A 無刷調速器 x 1
- DS820M High Voltage Brushless Servo x 3
- DS820M 高電壓無刷伺服機 x 3
- DS825M High Voltage Brushless Servo x 1
- DS825M 高電壓無刷伺服機 x 1

The Super Combo version includes the following items
Super Combo版本包含以下電器

- 850MX (490KV/453S) Motor x 1
- 850MX (490KV/453S) 無刷馬達 x 1
- Microbeast Flybarless System
- Microbeast 無平衡翼系統
- RCE-BL130A Brushless ESC x 1
- RCE-BL130A 無刷調速器 x 1
- DS820M High Voltage Brushless Servo x 3
- DS820M 高電壓無刷伺服機 x 3
- DS825M High Voltage Brushless Servo x 1
- DS825M 高電壓無刷伺服機 x 1

The Kit version includes the following items
Kit版本包含以下電器

- 850MX (490KV/453S) Motor x 1
- 850MX (490KV/453S) 無刷馬達 x 1

There are many versions of TB70 for your choice. The Combo includes additional electronics and other equipment. The Instruction Manual will refer to the TB70 Top Combo. You may purchase any additional items referenced in the instruction manual or any spare parts for other TB70 version by referring to more product information in this manual.

TB70系列商品有多種版本可作為選擇，除標準配備會因應購買的零件版本而有些微不同，在組裝、設定上都是一致的，在此我們以Top Combo作為操作範例，您也可依照書面上的零件資訊來增添其他選購商品。

Quick Finder
零件快速碼



TOP COMBO STANDARD EQUIPMENT

TOP COMBO 標準配備

[RH70E52WT]



TB70 Kit x1 set
RCM-BL850MX Brushless Motor(540KV/4535) x 1
RCE-BL200A Brushless ESC x 1
DS820M High Voltage Brushless Servo x 3
DS825M High Voltage Brushless Servo x 1

TB70 空機零件組 x 1
RCM-BL850MX 無刷馬達 (540KV/4535) x 1
RCE-BL200A 無刷調速器 x 1
DS820M 高電壓無刷伺服機器 x 3
DS825M 高電壓無刷伺服機器 x 1

SUPER COMBO STANDARD EQUIPMENT

SUPER COMBO 標準配備

[RH70E56WT]



TB70 Kit x1 set
RCM-BL850MX Brushless Motor(490KV/4535) x 1
MICROBEAST Flybarless System x 1
RCE-BL130A BRUSHLESS ESC x 1
DS820M High Voltage Brushless Servo x 3
DS825M High Voltage Brushless Servo x 1

TB70 空機零件組 x 1
RCM-BL850MX 無刷馬達 (490KV/4535) x 1
MICROBEAST 無平衡翼系統 x 1
RCE-BL130A 無刷調速器 x 1
DS820M 高電壓無刷伺服機器 x 3
DS825M 高電壓無刷伺服機器 x 1

KIT STANDARD EQUIPMENT

KIT 標準配備

[RH70E61WT]



TB70 Kit x1 set
RCM-BL850MX Brushless Motor(490KV/4535) x 1

TB70 空機零件組 x 1
RCM-BL850MX 無刷馬達 (490KV/4535) x 1

ELECTRONIC EQUIPMENT REQUIRED FOR ASSEMBLY 自備電子設備



MICROBEAST
Flybarless System
無平衡翼系統 X 1



RCE-BL200A or RCE-BL130A
Brushless ESC
無刷調速器 x 1



DS820M
High Voltage Brushless Servo
DS820M 高電壓無刷伺服機器 x 3



DS825M
High Voltage Brushless Servo
DS825M 高電壓無刷伺服機器 x 1

ROTORHEAD 主旋翼頭組

70H

THRUST BEARING 止推軸承

Apply Grease. 止推軸承塗上潤滑油。

Obverse of Bearing Faces Inside. 軸承蓋面朝向內側。

Spindle Bearing Spacer 橫軸止推墊圈 $\phi 13.2x \phi 19x1mm$

Bearing 軸承 $10x \phi 19x5mm$

Thrust Bearing 止推軸承 $\phi 10.2x \phi 18x5.5mm$

Socket Collar Screw 鎖錐內六角軸套螺絲 M3x6 mm

Metal Main Rotor Holder 主旋翼夾座

Main Blade Grip Arm 主旋翼夾握臂

Bearing 軸承 $\phi 10x \phi 19x5mm$

70H01

CAUTION 注意

Thrust bearing and spindle damper for radial bearing are wear items; therefore, it is recommended to inspect after every 20 flights and replaced as necessary.
止推軸承及橫軸墊圈屬易於飛行消耗品，建議每 20 趟定期檢查及更換。

WARNING 警告

Please follow the instruction of Thrust Bearing: "IN" faces inward, "OUT" faces outward; Assembly in the wrong direction can cause interference, improper operation, and unpredictable danger.
請務必遵照數字標指示: "IN" 朝內側、"OUT" 朝外側; 組裝方向錯誤會造成干涉、運轉不順。

CAUTION 注意

Logo on the top 字樣朝上

Metal Main Rotor Housing 主旋翼固定座

Spindle 橫軸 $\phi 7x \phi 10x97.5mm$

Apply Grease. 塗上潤滑油。

The spindle and spindle socket screws are wear items, and thus should be inspected for replacement after every 100 flights. For flights with high headspeed, the inspection interval should be reduced to ensure flight safety.
主旋翼橫軸組、橫軸和橫軸螺絲屬於飛行消耗品，建議每 100 趟定期檢查及更換。主旋翼高轉速飛行時，請縮短定期檢查之週期，以確保飛行安全。

Spindle Bearing Spacer 橫軸止推墊圈 $\phi 10x \phi 16x1mm$ x 2

Spindle Collar Screw 橫軸套螺絲 M6x16mm x 2

Spindle Sleeve 橫軸套圈 $\phi 10.15x \phi 17x16.5mm$ x 2

Spindle Damper 橫軸墊圈 $\phi 10x \phi 17x7mm$ x 2

Original manufactory packages contains product already assembled, before flying, please check if the screws are fixed with T43.
原廠零件包裝內零件若已組裝好，第一次飛行前請先確認螺絲是否已上膠不會鬆動。

Please apply a small amount of T43 when tightening the spindle socket screws and make sure to tighten firmly, but not over tighten. Suggest using a torque wrench or torque lock when tightening screws, Torque value 20.9kg.cm
橫軸螺絲緊附時請注意鎖付之氣值與使用適量的轉錶器，建議搭配扭力扳手或扭力鎖付螺絲，鎖付扭力值為 20.9kg.cm。

T43

Apply a small amount of T43 thread lock when fixing a metal part. Do not use T43 on any plastic part.
螺絲鎖附於金屬件請使用適量 T43 (螺絲膠) - 請注意 T43 不可塗在任何的塑膠材質上。

CAUTION 注意

3D flight 100 times or serious crash may cause metal fatigue or damaged. Please check and replace the Collar Screw.
暴力飛行 100 趟或有嚴重摔落，可能有金屬疲勞、破壞疑慮，請務必檢查更換鎖付螺絲。

Spindle Sleeve 橫軸套圈 $\phi 10.15x \phi 17x16.5mm$


Spindle Damper 橫軸墊圈 $\phi 10x \phi 17x7mm$

Spindle Collar Screw 橫軸套螺絲 M6x16mm

Spindle Bearing Spacer 橫軸止推墊圈 $\phi 10x \phi 16x1mm$

SWASHPLATE/MAIN SHAFT 十字盤組 / 主軸



70H02



Original manufactory packages contains product already assembled, before flying, please check if the screws are fixed with T43.



Apply a small amount of T43 thread lock when fixing a metal part. Do not use T43 on any plastic part.

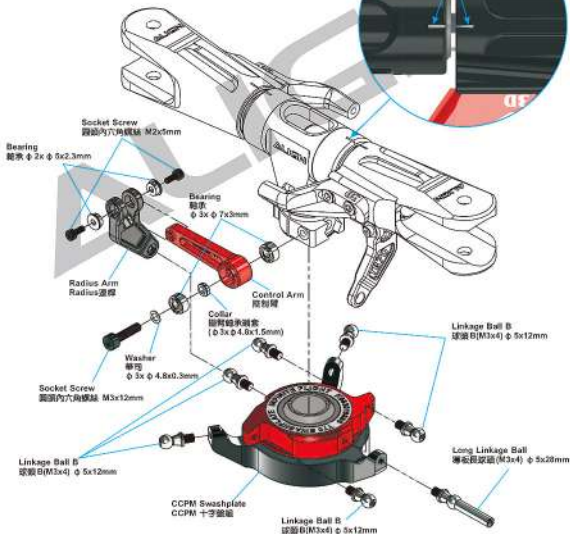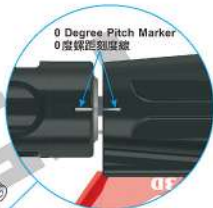



M4 Nut
M4 防鬆螺帽 x 2



Socket Collar Screw
圓頭內六角鉸接螺絲 (M4x24mm) x 2



Linkage Ball B
球頭鉤 (M3x4) (φ 5x12mm) x 2



M4 Nut
M4 防鬆螺帽



Original manufactory packages contains product already assembled, before flying, please check if the screws are fixed with T43.



Apply a small amount of T43 thread lock when fixing a metal part. Do not use T43 on any plastic part.

70H01-1


Socket Collar Screw
圓頭內六角鉸接螺絲
M4x24mm

Linkage Rod Set (A)
連桿組 (A)

Linkage Rod Set (A) Approx. 32mm
連桿組 (A) 約 32mm



Linkage Ball B
球頭鉤 (M3x4) (φ 5x12mm)



Socket Collar Screw
圓頭內六角鉸接螺絲
M4x24mm

M4 Nut
M4 防鬆螺帽

Main Shaft
主軸 φ 10x φ 12x171.2mm



For installation, make sure the "Check Point" is face upward, then use plier or wrench grasp the center of hexagonal rod to adjust its suitable length, turns clockwise to decrease the length, turns counter clockwise to increase the linkage length.

You may adjust the length of ball link to adjust blade tracking.

組裝時請將連桿中間可調節螺絲朝上。請使用尖嘴鉗或十字螺絲起子調整連桿中間六角桿的長度，逆時針轉動為調整連桿長度；逆時針轉動為調整連桿長度。

若飛行中有變態情形，可適當調整連桿長度改善。



Left-hand
定轉


Check Point
調整螺絲

Right-hand
正轉

Optional Equipment 選購品

Swashplate Leveler
十字盤校正器
[H70116]

Horizontally Level
水平

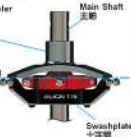

While using Flybarless system, please use the swashplate leveler to calibrate swashplate. Adjust the length of servo linkage rod to make sure the swashplate is leveled before start setting up to ensure the gyro provides the best performance.

使用無平衡系統，請務必使用十字盤調整器校正十字盤，調整十字盤平衡度，調整十字盤平衡度，再進行基本傳感設定，這樣才能在飛行時提供最佳性能。

1. Main rotor head and main shaft are wear items; it is recommended to inspect after every 200 flights and replace as necessary. For high headspeed flights, the inspection interval should be reduced to ensure flight safety.
2. Make sure to check and change the parts if any failure due to normal deterioration or mechanical wear to prevent expected danger during high headspeed flight.

1. 旋翼頭組及主軸屬於飛行消耗品，建議每200趟定期檢查及更換，請縮短定期檢查之週數，並確實檢查您的直昇機，以確保飛行安全。
2. 若發生人為疏忽不當或機件損壞造成模型高速度旋轉，應檢查系統確實檢查，特別建議更換磨損的零件，避免高主旋翼轉速飛行時，發生不可預期的意外。

BODY 機身組

70B



Original manufactory packages contains product already assembled, before flying, please check if the screws are fixed with T43.



Apply a small amount of T43 thread lock when fixing a metal part. Do not use T43 on any plastic part.

CAUTION Logo on the top
注意 字樣朝上



CAUTION 注意



Bearing 軸承
($\phi 10x\phi 19x5mm$) x2



Bearing 軸承
($\phi 8x\phi 16x3mm$) x1



M3 Specialty Washer
M3 特殊墊圈 ($\phi 3x\phi 6x2mm$) x 16



Socket Screw
圓頭內六角螺絲 (M2.5x8mm) x 4



Socket Screw
圓頭內六角螺絲 (M2.5x8mm) x 2



Socket Screw
圓頭內六角螺絲 (M3x6mm) x 2



Socket Screw
圓頭內六角螺絲 (M3x10mm) x 2



Socket Collar Screw
圓頭內六角鎖緊螺絲 (M3x8mm) x 12



Socket Collar Screw
圓頭內六角鎖緊螺絲 (M3x12mm) x 4



Socket Button Head Screw
半圓頭內六角螺絲 (M3x6mm) x 2

70B04

Gyre Mounting Bolt
陀螺固定螺栓

Already assembled
已組裝完成

Tail Boom Block
尾管固定塊

70B01

Tail Boom Mount Set
尾管固定座組

70B03

Main Shaft Bottom
Bearing Holder
主軸下軸承座



Bearing 軸承
($\phi 10x\phi 19x5mm$)

Upper Main Frame (R)
上機板 (右)

Front Drive Shaft
Bearing Housing
引擎驅動軸承座

70B04

Aluminum Hex
Frame Bolts
六角機身螺栓

70B02

Battery Latch
電池扣板

Front Shaft Mount
前軸固定座

Already assembled
已組裝完成

Canopy Support Damper
機頭固定彈簧組
($\phi 4.6x\phi 11x22mm$)

Canopy Support Bolt
機頭固定支撐柱
($\phi 3x\phi 5x\phi 6.5x7.3mm$)

Socket button head screw
圓頭內六角螺絲
(M3x14mm)

M3 Specialty Washer
M3 特殊墊圈
($\phi 3x\phi 5.7x8x2mm$)

Socket Button Head Screw
半圓頭內六角螺絲
M3x6mm

Washer 墊圈
($\phi 2.5x\phi 5.2x0.6mm$)

Socket Screw
圓頭內六角螺絲
M2.5x8mm

Socket Collar Screw
圓頭內六角鎖緊螺絲
M3x8mm

Socket Screw
圓頭內六角螺絲
M2.5x8mm

Socket Screw
圓頭內六角螺絲
M3x10mm

70B04

Canopy Mounting Bolt
機頭固定螺栓

Upper Main Frame (L)
上機板 (左)

Socket Screw
圓頭內六角螺絲
M3x6mm

It is recommended to use # 800-1000 water sandpaper to polish the edge of the cutting part of the fuselage board. This way could prevent the wires of electronic equipment from being cut.


建議於機身板切割處的邊緣，使用#800-1000水砂紙打磨，可防止電子設備線路被割破。

Waterproof Abrasive Paper
水砂紙 (#800-1000)



TAIL BOOM MOUNT SET 尾管固定座組

70T01

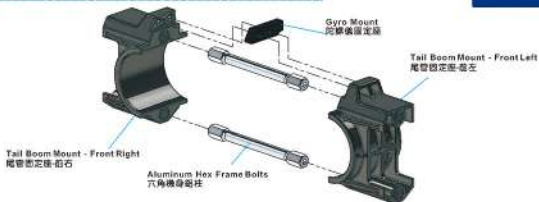

BELT PULLEY SET 皮帶輪組

70B05

- Socket Screw
圓頭內六角螺絲(M3x18mm) x2
- Socket Collar Screw
圓頭內六角鎖緊螺絲(M3x20mm) x1
- Bearing
軸承(φ 3x φ 7x3mm) x1
- Washer
華司(φ 3x φ 4.8x0.5mm) x1

Facet cutout for Belt Tensioner Bolt, please fit against the Main Frame.
皮帶張緊器的小平面切口，請對準機架固定。

Belt Tensioner Bolt
皮帶張緊器
Belt Tensioner Spring
皮帶張緊簧

The Belt Tensioner Spring is inserted into the third hole on the outside of the Belt Pulley Arm.
皮帶張緊簧插入皮帶張緊器外側第三孔位置。

Belt Pulley Arm
皮帶張緊臂


- Socket Collar Screw
圓頭內六角鎖緊螺絲 M3x20mm
- Socket Screw
圓頭內六角螺絲 M3x18mm
- Bearing
軸承 φ 3x φ 7x3mm
- Belt Pulley Copper Sleeve
皮帶輪襯套
- Belt Pulley
皮帶輪
- Bearing
軸承 φ 2x φ 7x3mm
- Washer
華司 φ 3x φ 4.8x0.5mm
- Tail Belt Clip Gear Housing
尾皮帶張緊器

During the flight, the Belt Pulley Arm will timely give pressure according to the belt tightness. Please pay attention to the Belt Pulley Arm position. It should be adjusted to correct rest position to function properly.

Adjust the tension of the Tail Belt as depicted on page 21, until the belt tensioner reaches a flat position. During the flight, the Belt Tensioner works to maintain a constant tension applied on the Tail Belt.

皮帶張緊臂在飛行過程中，針對皮帶鬆緊度的改變，適時的給予壓力，使飛行順暢。所以請注意，皮帶張緊臂在停止的位置，才能確實地發揮功能。

如第 21 頁所述調整尾帶皮帶的張力，直到皮帶張緊器達到平坦位置。在飛行過程中，皮帶張緊器用於保持施加在尾帶上的恆定張力。

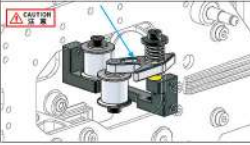

- Bearing
軸承 3x φ 7x3mm
- Belt Pulley
皮帶輪
- Belt Tensioner Copper Sleeve
皮帶張緊器
- Bearing
軸承 φ 3x φ 7x3mm
- Socket Screw
圓頭內六角螺絲 M3x18mm




CAUTION 注意
Original manufacturer packages contains product already assembled, before flying, please check if the screws are fixed with T43.

43
Apply a small amount of T43 thread lock when fixing a metal part.
Do not use T43 on any plastic part.

Top Combo **70B06**

Super Combo **70B07**

Kit **70B08**

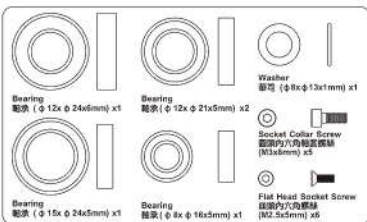


Belt Pulley Assembly 皮帶輪組 50T



Tail Drive Belt Pulley Assembly 尾傳動皮帶輪組 27T



Tail Drive Belt Pulley Assembly 尾傳動皮帶輪組 28T

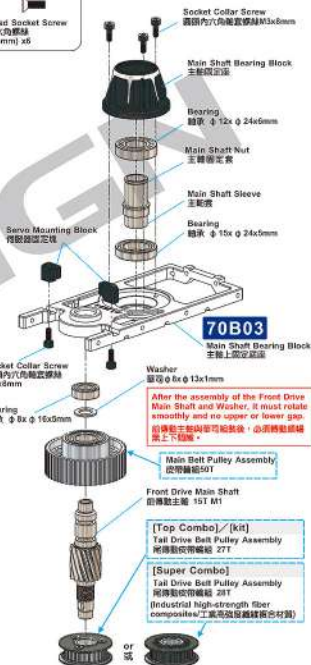


70B03
70B04


Original manufactory packages contains product already assembled, before flying, please check if the screws are fixed with T43.



Apply a small amount of T43 thread lock when fixing a metal part. Do not use T43 on any plastic part.

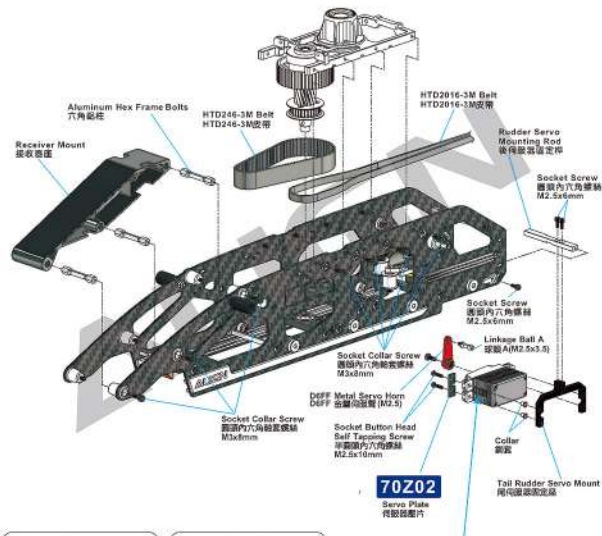

Socket Collar Screw 螺絲內六角軸套螺絲(M3x8mm) x 18	
M3 Specialty Washer M3 特殊螺母 (φ 3x φ 8x2mm) x 18	
Socket Screw 螺絲內六角螺絲 (M2.5x6mm) x 4	

Linkage Ball A 球頭A(M2.5x3.5) x 1	
Socket Screw 螺絲內六角螺絲(M2.5x6mm) x 2	
Socket Button Head Screw 半圓頭內六角螺絲 (M2.5x10mm) x 4	

DS825M High Voltage Brushless Servo
DS825M 高壓無刷伺服機

1520 μs Standard Band / 1520 μs 寬頻系統	
Stall Torque/ 輸出扭力	8.0kg.cm(6.0V) 10.0kg.cm(7.4V) 12.5kg.cm(8.4V)
Motion Speed/ 動作速度	0.040sec/60° (6.0V) 0.030sec/60° (7.4V) 0.028sec/60° (8.4V)
Dimension/尺寸	40 x 28 x 39mm
Weight/重量	72g




Original manufactory packages contains product already assembled, before flying, please check if the screws are fixed with T43.



Apply a small amount of T43 thread lock when fixing a metal part. Do not use T43 on any plastic part.

DS820M High Voltage Brushless Servo
DS820M 高壓無刷伺服馬達

1520 μ s Standard Band / 1520 μ s 寬頻系統	
Stall Torque/ 輸出扭力	17.0kg.cm(6.0V) 22.0kg.cm(7.4V) 23.0kg.cm(8.4V)
Motion Speed/ 動作速度	0.075sec/60° (6.0V) 0.060sec/60° (7.4V) 0.055sec/60° (8.4V)
Dimension/尺寸	40 x 20 x 39mm
Weight/重量	30g

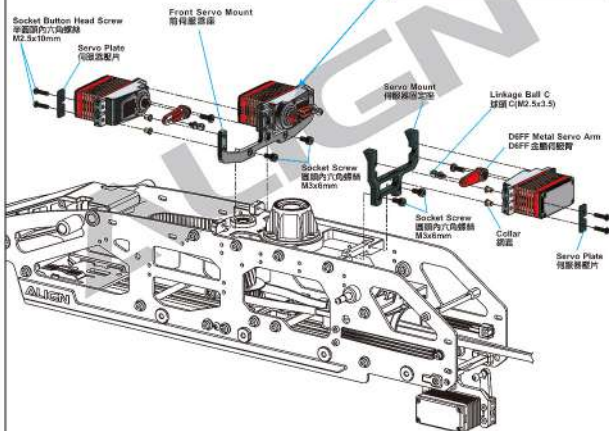

Linkage Ball C(M2.5x4)
 球頭 C(M2.5x4) ϕ 3x12mm) x 3

Socket Button Head Screw
 半圓頭內六角螺絲(M2.5x10mm) x 4

Socket Button Head Screw
 半圓頭內六角螺絲(M2.5x10mm) x 8

70B03



M3 Specialty Washer
M3 特殊墊圈 (φ 3x φ 8x2mm) x 4



Socket Collar Screw
圓頭內六角鎖緊螺絲(M3x8mm) x4



Socket Screw
圓頭內六角螺絲(M3x8mm) x2



Socket Screw
圓頭內六角螺絲(M3x12mm) x2

Anti Rotation Bracket
十字鎖轉板


Socket Screw
圓頭內六角螺絲M3x8mm



Original manufacturer packages contains product already assembled, before flying, please check if the screws are fixed with T43.



Apply a small amount of T43 thread lock when fixing a metal part. Do not use T43 on any plastic part.

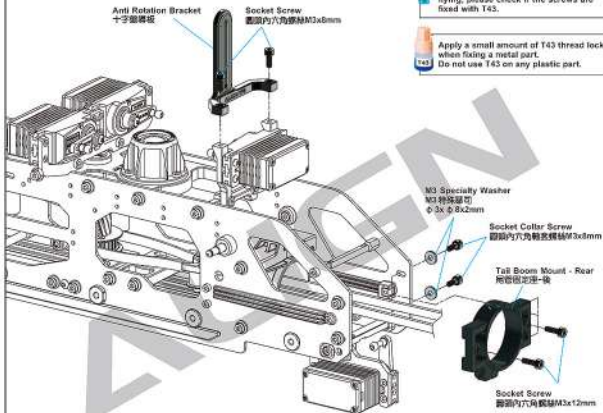

Main frame assembly key point :

First do not fully tighten the screws of main frames and put two bearings through the main shaft to check if the movements are smooth. The bottom bracket must be firmly touched the level table top(glass surface) ; please keep the smooth movements on main shaft and level bottom bracket, then slowly tighten the screws. This assembly can help for the power and flight performance.

機身銅板組立重點：

銅板螺絲先不完全鎖緊，放入主軸貫穿兩顆軸承確認上下移動必需滑順，主體銅板必須與水平桌面（玻璃平面）緊實緊貼；請保持主軸滑順與底板平行桌頂後慢慢鎖緊螺絲，正確銅板的組裝對動力與飛行性能有顯著幫助。






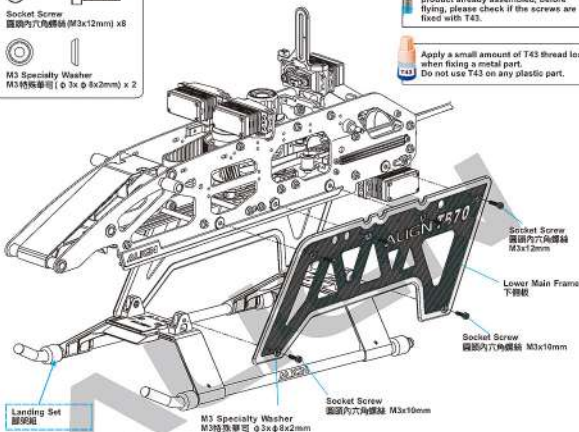
70B03



Original manufactory packages contains product already assembled, before flying, please check if the screws are fixed with T43.

Apply a small amount of T43 thread lock when fixing a metal part.
Do not use T43 on any plastic part.


-  
Socket Screw
圓頭內六角螺絲 (M3x10mm) x 4
-  
Socket Screw
圓頭內六角螺絲 (M3x12mm) x 8
-  
M3 Specialty Washer
M3特務華司 (φ 3x φ 8x2mm) x 2



LANDING SET 腳架組

70F01

-  
Socket Screw
圓頭內六角螺絲 (M2.5x10mm) x 2
-  
Socket Screw
圓頭內六角螺絲 (M2.5x10mm) x 8
-  
M3 Set screw
M3 止空螺絲 (M3x4mm) x 4

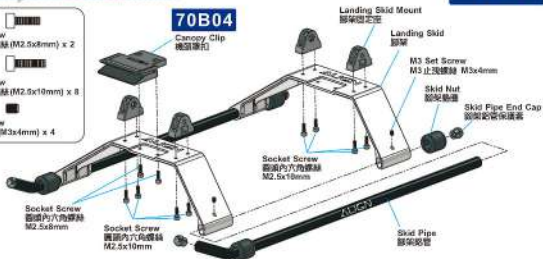

[Top Combo]

Motor Belt Pulley Assembly
馬達皮帶輪組 22T

[Super Combo]

Motor Belt Pulley Assembly
馬達皮帶輪組 23T

[kit]

Motor Belt Pulley Assembly
馬達皮帶輪組 23T

Socket Button Head Screw
半圓頭內六角螺絲 M2x6mm

Motor Wheel Cover A
馬達輪蓋A

Motor Belt Pulley
馬達皮帶輪

Tail Belt Wheel Cover
馬達輪蓋

Motor Belt Pulley Shaft
馬達皮帶輪軸

Flat Head Socket Screw
圓頭內六角螺絲 M4x8mm

When locking the screw to Motor Belt Pulley, must use the glue and make sure you slightly lock it tight. 鎖緊馬達皮帶輪的止滾螺絲時，務必點膠並適量用力鎖緊。


70B03

M4 Set Screw
M4止滾螺絲 M4x4mm

CAUTION 注意

Be sure to align the Motor Belt Pulley Assembly with the groove of the motor spindle, or the belt won't be in a horizontal position. 鎖螺絲時，務必將馬達皮帶輪組，對齊馬達心軸的溝槽位置，否則馬達皮帶將歪斜。

4.5-4.8mm

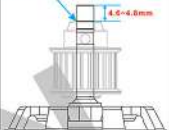

Flat Head Socket Screw
圓頭內六角螺絲 (M4X8mm) x4



M4 Set Screw
M4止滾螺絲 (M4x4mm) x2



Socket Button Head Screw
半圓頭內六角螺絲 (M2x6mm) x3

CAUTION 注意



Original manufactory packages contains product already assembled, before flying, please check if the screws are fixed with T43.

Apply a small amount of T43 thread lock when fixing a metal part. Do not use T43 on any plastic part.

Attention! Please adjust to a proper tightness when assembling Motor Drive Belt. If it's too loose, it will easily cause the pulley to slip. Also pay attention to tighten the screws of the motor mount.

請注意！馬達傳動皮帶，組裝時請調整適當張緊，過鬆容易導致皮帶輪打滑，並注意調整馬達固定螺絲。

Socket Screw
圓頭內六角螺絲 (M2.5x6mm) x3

Socket Screw
圓頭內六角螺絲 (M3x8mm) x4

M3 Specialty Washer
M3 特殊壓墊 (φ3xφ10x2mm) x4

Motor
馬達

Motor Mount
馬達固定座

Motor Drive Belt
馬達傳動皮帶

Socket Screw
圓頭內六角螺絲 M2.5x6mm

70B04

Gyro Mount
陀螺儀固定板

Socket Collar Screw
圓頭內六角帶蓋螺絲 M3x8mm


M3 Specialty Washer
M3 特殊壓墊 (φ3xφ10x2mm)

TAIL 尾部組

70T

When assembling the tail boom ensure the boom is properly installed in the tail boom mount and check to make sure belt is in the correct position.

尾管組裝時必須確實頂住尾管固定座，以確保皮帶調整位置正確。



Original manufactory packages contains product already assembled, before flying, please check if the screws are fixed with T43.



Apply a small amount of T43 thread lock when fixing a metal part. Do not use T43 on any plastic part.

70T04




Use a string or flexible wire to pull the belt through the boom. Feed one end through the boom, loop through belt and feed back through the boom. Gently pull both ends of the string or wire until the belt is completely pulled through the boom. Please refer to the diagram below. Confirm the belt is installed correctly and not turned more than 90 degrees. Improper installation of the belt can result in serious damage to the helicopter or people.

建議使用繩子或線子拉幫皮帶的另外一端穿過尾管，皮帶裝裝方向請依下方尾管動皮帶裝配圖示安裝，確認皮帶裝裝方向正確，否則將發生不可預期的危險。

DRIVE BELT ILLUSTRATION

尾傳動皮帶裝配圖示

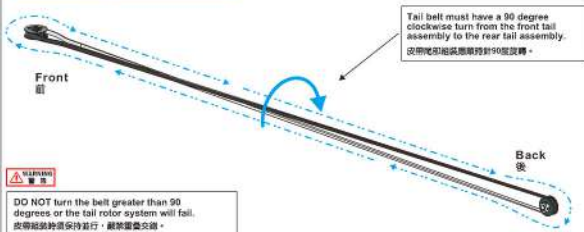

Tail belt must have a 90 degree clockwise turn from the front tail assembly to the rear tail assembly. 皮帶尾節組裝應轉90度旋轉。






DO NOT turn the belt greater than 90 degrees or the tail rotor system will fail. 皮帶組裝時須保持前行，嚴禁歪裝交錯。

70B06

CAUTION
注意

Original manufactory packages contains product already assembled, before flying, please check if the screws are fixed with T43.

Apply a small amount of T43 thread lock when fixing a metal part. Do not use T43 on any plastic part.

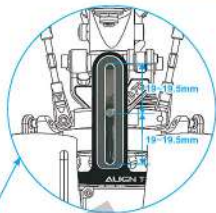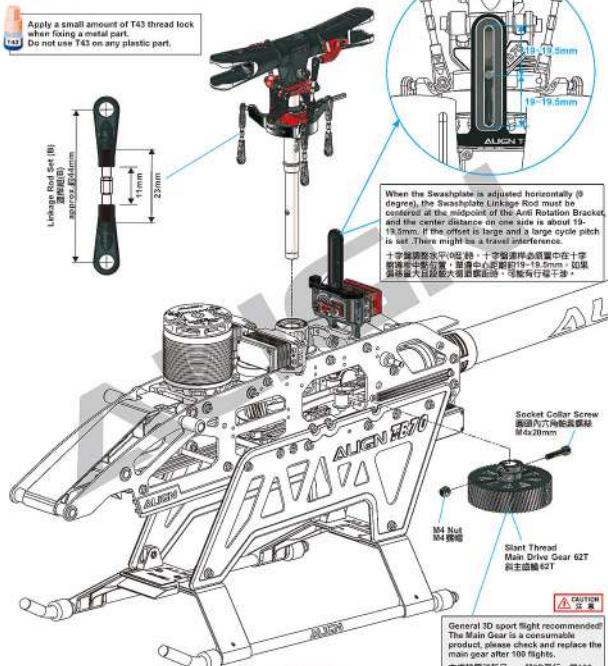

When the Swashplate is adjusted horizontally (0 degree), the Swashplate Linkage Rod must be centered at the midpoint of the Anti Rotation Bracket and the center distance on one side is about 19-19.5mm. If the offset is large and a large cycle pitch is set, there might be a travel interference.
十字盤調整水平(0度)時，十字盤連桿必須置中在十字盤旋轉架中點位置，單邊中心距離約19-19.5mm。如果偏移量大且設定大週期螺距，可能有行程干涉。




CAUTION
注意

General 3D sport flight recommended! The Main Gear is a consumable product, please check and replace the main gear after 100 flights.
主齒輪屬消耗品，一般3D飛行，用100趟，建議！注意檢查並更換新齒輪。

CAUTION
注意

Install the main shaft into the main drive gear after the belt has been installed, then align main shaft with the main shaft mounting sleeve, insert screw and tighten. DO NOT over tighten as this may cause damage of main shaft mounting sleeve.
請將組裝好紙帶之主軸穿入主齒輪後將主軸對準，穿入後對準主軸固定套上的孔位鎖附。並以適量扭力鎖附即可。過度鎖緊易造成主軸固定套變形。

- 
 Socket Collar Screw
圓筒內六角鎖緊螺絲 (M4x20mm) x 1
- 
 M4 Nut
M4的螺帽 x 1

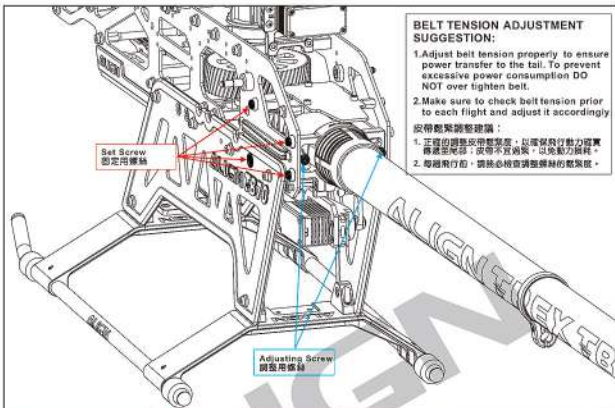
BELT TENSION ADJUSTMENT SUGGESTION:

1. Adjust belt tension properly to ensure power transfer to the tail. To prevent excessive power consumption DO NOT over tighten belt.
2. Make sure to check belt tension prior to each flight and adjust it accordingly

皮帶鬆緊調整建議：

1. 正確的調整皮帶鬆緊度，以確保飛行動力確實傳遞至尾管；皮帶不宜過緊，以免動力損耗。
2. 每趟飛行前，務必檢查皮帶調整螺絲的鬆緊度。

PATENTED DESIGN
專利設計
ADJUSTABLE BELT TENSION DESIGN / 可調節皮帶張力設計


The Upper Main Frame cleverly inserts a rail, simply by turning a few screws, then allows the belt tension to adjust conveniently.

上機板巧妙地插入軌道，只需調節幾個螺絲，即可方便地調節皮帶張力。

ADJUSTING WAY 調整方式



Make sure to check belt tension prior to each flight and adjust accordingly. Both sides must be rotated equally.

注意：調整時務必將兩側的調整螺絲同時放鬆或鎖緊。

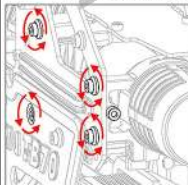


1. First loosen the screws on the two sides of the Upper Main Frame.

1. 先鬆轉機身上側板外兩邊位固定螺絲。

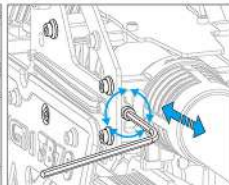

2. Then adjust the adjustment screw on the side of the Upper Main Frame to the proper position. When the screw is loosened, the tail pipe will tighten the belt backward, and if it is locked, the tail pipe will loosen the belt forward.

2. 再將機身上側板內的調整螺絲調整至適當位置。螺絲鬆開時為尾管向後鬆緊皮帶，鎖緊則為尾管向前放鬆皮帶。

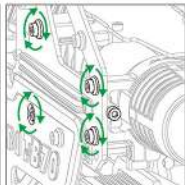

3. After adjusting to the proper tightness, tighten the fixing screw.

3. 調整適當鬆緊度後，再將固定螺絲鎖緊即可。

70H01-1


70Z04



When tightening the main blade fixing screw, please tighten it firmly, but not over tighten, or it may cause the damage of main blade holder and result in danger.


組裝主翼螺絲時請注意適量緊度即可，過緊可能會導致主翼翼夾受受損，飛行意外發生。

Main Blade Fixing Screw
主翼固定用螺絲

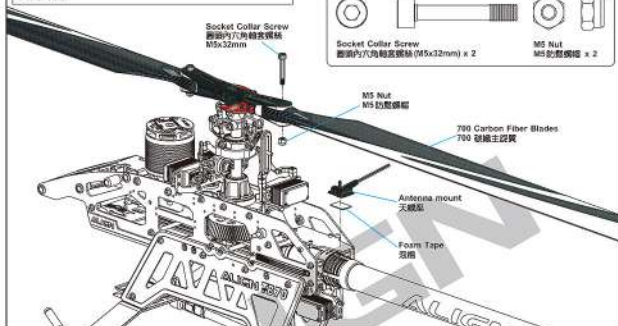

70T02

70T04

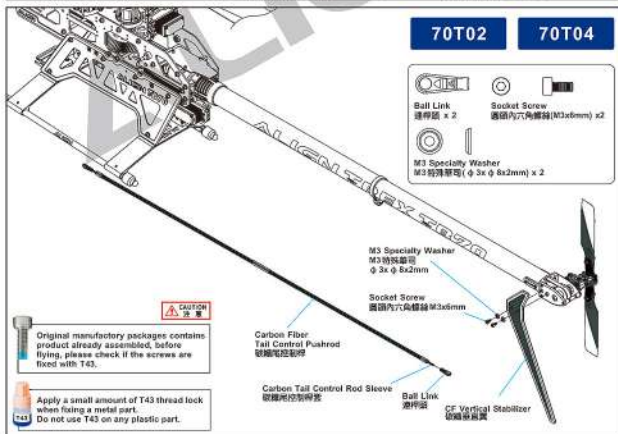

Original manufacturer packages contains product already assembled, before flying, please check if the screws are fixed with T43.




Apply a small amount of T43 thread lock when fixing a metal part.
Do not use T43 on any plastic part.

ELECTRONIC EQUIPMENT ILLUSTRATION


電子設備建議配置圖示

ALIGN

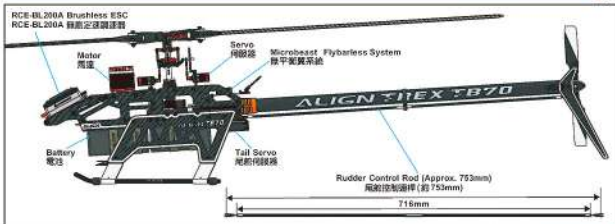

ESC AND SERVO WIRING ILLUSTRATION 接線示意圖

ALIGN

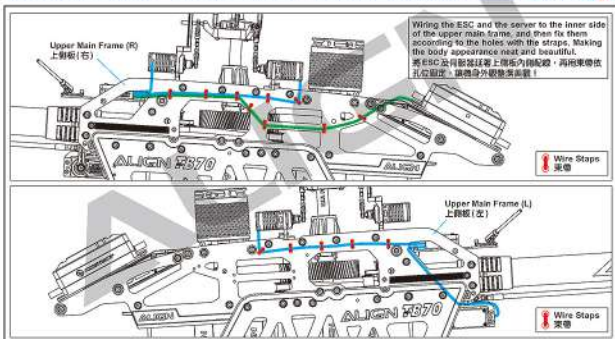

BATTERY INSTALLATION ILLUSTRATION 電池安裝示意圖


ALIGN

Please fix the 2 batteries On the battery mount evenly.
兩顆電池請平均固定於電池板上。

70B02




Please strictly abide by the precautions for use in the lithium-polymer battery manual. Improper use of lithium-polymer batteries may cause fire and damage life and property safety. Do not be careless!
請嚴格遵守鋰聚合物電池的書之使用注意事項，切勿違反鋰電池。若輕視疏忽，火災發覺及生命財產安全，切勿大意！

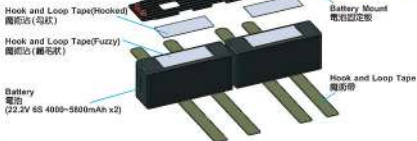

INSERT THE BATTERY FROM THE FRONT
前置式電池滑軌設計

New 3K Main frame embedded with battery mounting rails with patented spring loaded latching mechanism.
3K機框內電池滑軌一體成型，整合式彈簧結構鎖卡卡榫設計。

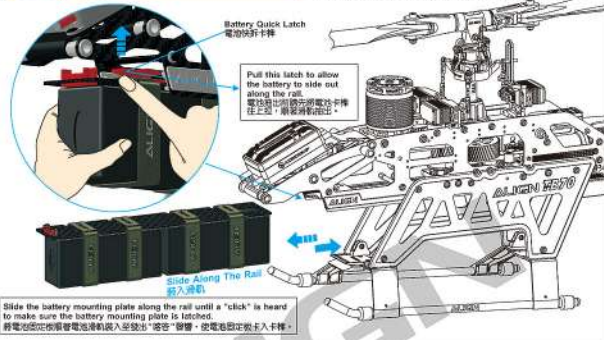

CANOPY ASSEMBLY 機頭罩安裝


Advanced Lightweight Canopy
高強度輕量化機頭罩



Quick release latch design
卡式快速拆換設計



When assembling the canopy to the unit, please completely wedge into the groove of the bottom plate.
機頭罩前蓋於機頭時，請完全卡入主體底板之溝槽內。

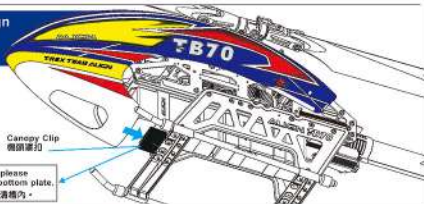



To set this option is to turn on the transmitter and connect to BEC power.

Note: For the safety, please do not connect ESC to the brushless motor in order to prevent any accident caused by the motor running during the setting.

此項設定只要開啟發射器，接上BEC電源即可進行操作。注意：為了安全起見，設定前請先不要將無刷调速器與無刷馬達三條線接上，以免調整時啟動馬達而發生危險。

SERVO CONFIGURATION 伺服器配置

Following the servo configuration diagram on right, plug the servos to Gyro.

請依照右側顯示的伺服器名稱，將伺服器接到陀螺儀。



ADJUSTMENTS FOR GYRO AND TAIL NEUTRAL SETTING

陀螺儀與尾翼中立點設定調整


Turn off Revolution mixing (RVMX) mode on the transmitter, then set the gain switch on the transmitter and the gyro to non-head lock mode, or disable gain completely. After setting the transmitter, connect the helicopter power and proceed with rudder neutral point setting. **Note:** When connecting to the helicopter power, please do not touch tail rudder/stuck and the helicopter, wait for 3 seconds for gyro to enable, and the rudder servo horn should be 90 degrees to the tail servo. Tail pitch slider should be halfway on the tail output shaft. This will be the standard rudder neutral point. After completing this setting, set the gain switch back to heading lock mode, with gain at around 70%.

發射器內陀螺儀設定須關閉發射器模式，並將發射器上的感應器鎖與陀螺儀切至「非鎖定模式」或將陀螺儀功能關閉。發射器設定完成後接上直升機電源，即可進行尾翼中立點調整。注意：當接上直升機電源時請勿碰動尾桿或尾槳槳葉，待3秒陀螺儀功能開啟後，尾舵調整桿與尾舵伺服器成 90 度，尾翼調整桿須調整至尾槳輸出軸的中間位置，即為標準尾桿中立點設定，設定完成後，切換至「鎖定模式」，增益約 70% 左右。

TAIL NEUTRAL SETTING 尾翼中立點設定

After the gyro is enable and under non-head lock mode, correct setting position of tail servo and tail pitch assembly is as photo. If the tail pitch assembly is not in the middle position, please adjust the length of rudder control rod to trim.

陀螺儀功能開啟後，在非鎖定模式下，尾舵調整桿與尾翼 Pitch 調整桿正確調整位置。若尾翼 Pitch 調整桿未置於調整輸出軸的中間位置，請調整尾桿長度修正。

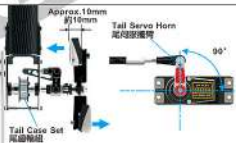

HEAD LOCK DIRECTION SETTING OF GYRO 陀螺儀鎖定方向設定

To check the head lock direction of gyro is to move the tail clockwise and the tail servo horn will be trimmed counterclockwise. If it trims in the reverse direction, please switch the gyro to "REVERSE".

陀螺儀鎖定方向的確認，應手搖尾桿使尾翼順時針運動，尾舵調整桿應逆時針修正。反方向時請將陀螺儀上「鎖定方向」切換修正。



MAIN BLADES ROTATIONAL SPEED SETTING 主旋翼轉速設定



The maximum speed of TB70 helicopter is 2200RPM; 2150RPM is enough for hard 3D flight.

It is strictly forbidden to set the Main Blades speed to exceed **2200RPM** during flight, over-rotation may cause damage to the body structure or unforeseen danger, even lives and property of others. Beginner are recommended the RPM/ speed setting should not exceed **1850RPM**.

TB70 直昇機，最高轉速為 2200RPM；飛行時轉速 2150RPM，動力已足夠暴力飛行。

直昇機的主旋翼有安全使用轉速範圍，飛行時主旋翼轉速設定嚴禁超過 **2200RPM**，超轉可能導致機體結構破壞及不可預期之意外，甚至危害他人生命財產。初學者建議轉速設定不超過 **1850RPM**。



The maximum speed of TB70 helicopter is 2200RPM; 2150RPM is enough for hard 3D flight.
TB70 直昇機，最高轉速為 2200RPM；飛行時轉速 2150RPM，動力已足夠暴力飛行。

RCM-BL850MX (540KV/4535) MOTOR 無刷馬達

KV	KV 值	540KV(RPM/V)	Input Voltage	輸入電壓	12S
Stator Diameter	定子外徑	45 mm	Stator Thickness	定子厚度	35mm
Stator Arms	矽鋼片槽數	12	Magnet Poles	磁鐵極數	10
Max Continuous Current	最大持續電流	120A	Max Instantaneous Current	最大瞬間電流	250A(2sec)
Max Continuous Power	最大持續功率	5330W	Max Instantaneous Power	最大瞬間功率	11000W(2sec)
Dimension	尺寸	Shaft #6x56.7x97.5mm	Weight	重量	Approx. 570g

RCM-BL850MX (490KV/4535) MOTOR 無刷馬達

KV	KV 值	490KV(RPM/V)	Input Voltage	輸入電壓	12S
Stator Diameter	定子外徑	45 mm	Stator Thickness	定子厚度	35mm
Stator Arms	矽鋼片槽數	12	Magnet Poles	磁鐵極數	10
Max Continuous Current	最大持續電流	115A	Max Instantaneous Current	最大瞬間電流	250A(2sec)
Max Continuous Power	最大持續功率	5100W	Max Instantaneous Power	最大瞬間功率	11000W(2sec)
Dimension	尺寸	Shaft #6x56.7x97.5mm	Weight	重量	Approx. 570g

SPECIFICATION


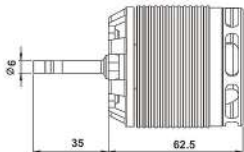


ILLUSTRATION 接線示意圖

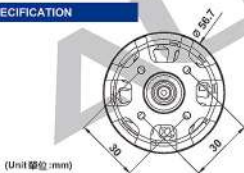

The motor rotates in different direction with different brand ESCs. If the wrong rotating direction happens, please switch any two cables to make the motor rotates in right direction.
由於各品牌電子變速器的馬達啟動轉向不盡相同，若發生轉向錯誤時，請將馬達與電子變速器的接線任兩條對調即可。

BRUSHLESS SPEED CONTROLLER INSTRUCTION MANUAL

無刷調速器使用說明



RCE-BL200A/RCE-BL130A Brushless ESC can be set up by ALIGN ASBOX Multifunction Programmer. So please scan QR code for ALIGN website start downloading for more information: <http://www.align.com.tw/download-en/asbox/>


RCE-BL200A/RCE-BL130A無刷調速器可透過ALIGN ASBOX 多功能設定盒進入參數設定，請掃描QR Code 連結至拓納網下載相關資訊：<https://www.align.com.tw/index.php/download/asbox/>

- The default throttle range of this ESC is from 1100 μ s to 1940 μ s, so you need to re-calibrate the throttle range when the first time you use this ESC or after you replace the transmitter.
 - During the ESC/Radio calibration, please set the throttle curve to NORMAL and ensure the corresponding throttle amounts to the maximum throttle endpoint and the minimum throttle endpoint on your transmitter are respectively 100% and 0%.
- 電子調速器的油门行程範圍預設為1100 μ s~1940 μ s，當首次使用電子調速器或更換其他遙控器使用時，均應重新設定油门行程。
 - 進行油门行程校準時，請將油门曲線預設為NORMAL，並確保遙控器油门最高為對應的油门值為100%，油门最低為對應的油门值為0%。

RCE-BL200A BRUSHLESS ESC 無刷調速器

- RPM Signal Wire (Yellow) & BEC Output Wire (Red/Brown): plug it into the RPM input channel on the flybarless system. (This wire can be used for providing RPM signal data when using external speed-governing device. plug it into the battery channel or any unoccupied channel on the receiver. [For better BEC power supply, we recommend plugging this wire into the battery channel or any unoccupied channel on FBL system if the FBL system is permitted.]
- Throttle Signal Wire (White/Red/Black): plug it into the throttle channel on the receiver or the corresponding channel on the FBL system, such as RX B channel on the VBAR system. For which channel you should plug it in, it depends on what kind of receiver and FBL system you use. The White wire is for transmitting throttle signals, the Red & Black cables are parallelly connected in the BEC output wire, which means BEC voltage output wire and ground cable.
- RPM信號線(黃)及BEC輸出線(紅、棕)：插入無刷平衡系統轉速輸入通道；(當使用外部定速器，可使用RPM信號線提供轉速信號輸入，選擇額外的BEC輸出線插入接收機電為專用通道或任意空閒通道。(為獲得更好的BEC供電效果，在無刷平衡系統允許的情況下，建議將BEC線插入無刷平衡系統的電池專用通道或任意空閒通道。)
- 油门信號線(白、紅、黑)：插入接收機油门通道或無刷平衡系統對應通道，如VBAR系統的RX B通道，但根據機架型及無刷平衡系統類型而定。其中白線用於發送油门信號，而紅線和黑線分別並聯在內置BEC的輸出端(即BEC電壓輸出線和地線)。

I. Connections 接線示意圖

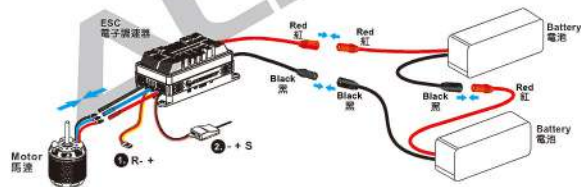

Model 型號	RCE-BL200A Brushless ESC RCE-BL200A無刷調速器
Input Voltage 輸入電壓	6-14S LiPo Battery 鋰電池(22.2V-51.8V)
Cont./Peak Current 持續/瞬間電流	200A/300A
BEC Voltage BEC電壓	Switch-mode, 5V-8V Adjustable Voltage (Step: 0.1V), 10A/30A Cont./Peak Current 開關穩壓BEC，輸出電壓5V-8V可調(調整幅度為0.1V每階)，輸出電流持續10A，瞬間30A
Throttle Signal/BEC Output & RPM Signal Transmission Wire 油门信號/BEC輸出&RPM信號傳輸線	White/Red/Black: Throttle Signal Wire; Red/Brown/Yellow: BEC Output & RPM Signal Transmission Wire 白、紅、黑三色線為油门信號線；紅、棕、黃三色線為BEC輸出及RPM信號傳輸線
Separate Programming Port 獨立參數程式設計介面	For connecting ALIGN ASBOX Multifunction Programmer, WIFI module, or cooling fan. 用於連接ALIGN ASBOX多功能設定盒或WiFi模組，可為輔助散熱風扇供電
Size/Weight 尺寸/重量	106x50x36mm/325g

BRUSHLESS SPEED CONTROLLER INSTRUCTION MANUAL


無刷調速器使用說明



RCE-BL130A BRUSHLESS ESC 無刷調速器

- 1** RPM Signal Wire (Yellow): plug it into the RPM input channel on the flybarless system. (This wire can be used for providing RPM signal data when using external speed-governing device.)
- 2** BEC Output Wire (Red/Brown): plug it into the battery channel or any unoccupied channel on the receiver. (For better BEC power supply, we recommend plugging this wire into the battery channel or any unoccupied channel on FBL system if the FBL system is permitted.)
- 3** Throttle Signal Wire (White/Red/Black): plug it into the throttle channel on the receiver or the corresponding channel on the FBL system, such as RX B channel on the VBAR system. For which channel you should plug it in, it depends on what kind of receiver and FBL system you use. The White wire is for transmitting throttle signals, the Red & Black cables are parallelly connected in the BEC output wire, which means BEC voltage output wire and ground cable.
- 4** RPM信號線(黃)：插入飛平面翼系統轉速輸入通道；(當使用外部定速器時，可使用RPM信號線提供轉速信號輸入。)
- 2** BEC輸出線(紅、棕)：選擇額外的BEC輸出線插入接收機電池專用通道或在應空閒通道。(為獲得更好的BEC供電效果，在飛平面翼系統允許的情況下，建議將BEC線插入飛平面翼系統的電池專用通道或任意空閒通道。)
- 3** 油门信號線(白、紅、黑)：插入接收機油门通道或飛平面翼系統對應通道，如VBAR系統的RX B通道。依據接收機類型及飛平面翼系統類型而定，其中白線用於傳送油门信號，而紅線和黑線分別並聯在內部BEC的輸出端(即BEC電壓輸出線和地線)。

I. Connections 接線示意圖

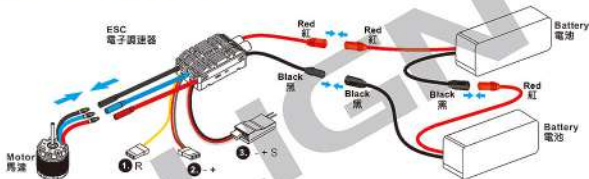

Model 型號	RCE-BL130A Brushless ESC RCE-BL130A無刷調速器
Input Voltage 輸入電壓	6-12S LiPo Battery 鋰電池(22.2V-44.4V)
Cont./Peak Current 持續/瞬間電流	130A/200A
BEC Voltage BEC電壓	Switch-mode, 5V-8V Adjustable Voltage (Step: 0.1V), 10A/25A Cont./Peak Current 開關電壓BEC，輸出電壓5V-8V可調(調節精度為0.1V每步)，輸出電流持續10A，瞬間25A
Throttle Signal/BEC Output & RPM Signal Transmission Wire 油门信號/BEC輸出&RPM信號傳輸線	White: Throttle Signal Wire / Red/Black, Red/Brown: BEC Output Wire / Yellow: RPM Signal Transmission Wire 白色為油门信號線/紅黑和紅棕二色線為BEC輸出線/黃色為RPM信號傳輸線
Separate Programming Port 獨立參數程式設計介面	For connecting ALIGN ASBOX Multifunction Programmer, WIFI module, or cooling fan. 用於連接多功能LCD導航程式設計介面或WIFI模組，可為輔助散熱器降溫供電
Size/Weight 尺寸/重量	92x45.5x28.5mm/195g

II. Throttle Range Calibration 油门行程校准操作方法

- 1** Turn on the transmitter and move the throttle stick to the top position.
開啟遙控器，將油门打到底。
- 2** Connect the ESC to a battery. The motor will emit "12s" indicating the ESC is powered on normally.
電子調速器接電池，高聲喇叭"12s"表示音，表示供電正常。
- 3** 5 seconds later, the motor will emit two short beeps indicating the maximum throttle position has been successfully calibrated and accepted.
等待5秒，高聲發出"噠-噠"雙短音響，表示油门最高點校准成功。
- 4** Move the throttle stick to the bottom position, 1 second later, a short beep will emit indicating the minimum throttle position has been accepted.
將油门拉杆移到底部，等待1秒，"噠"一聲表示音，油门最低點校准成功。
- 5** The ESC will keep beeping indicating the number of LiPo cells you have plugged in. (A long beep represents 5, a short beep represents 1. E.g. The ESC will beep two long beeps and two short beeps to indicate a 12S LiPo pack.)
高聲持續蜂鳴或提示音告知電池數(長音響一表示5，短音響一表示1，例如：12S電池蜂鳴"噠-噠-噠-噠")
- 6** The motor will keep a long beep to indicate the calibration is completed, the power system is ready to go.
高聲持續"噠"長音響一，校准完成成功，系統準備就緒，可隨時起飛。



Maintenance and careful inspection before and after flights are the most important part of flight safety, pilots are responsible for every detail to implement. Negligence of these inspections and maintenance may lead to accidents and dangers during the flight, and even damage to life and property.

飛行前/後的仔細檢查和維護保養是飛行安全最重要的一環，飛行員必須對每一個細節負責並落實到位。忽視這些檢查和維護，可能會導致飛行過程中發生事故和危險，甚至造成生命財產損失。




1 Check the Main blades.

Visually inspect if the appearance of the Main Blades is good, and carefully check that there is no damage, crack or abnormality on the surface.



2 Check the Tail Blades.

Visually inspect if the appearance of the Tail Blades is good, and carefully check that there is no damage, crack or abnormality on the surface.

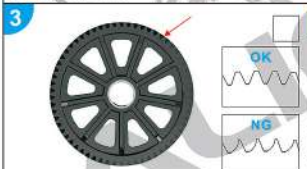

Please check to the main gear regularly, and replace it if obvious wear is found. The main gear is a consumable.

Please pay attention to check and replace new gears every 100 times of 3D sport flight.



4 Check All electronic equipment connection.

Plug, socket and cable appearance is good, correctly and firmly connected with each other.



5 Check battery efficiency.

To prevent the plug from falling off and causing power failure, the plug and socket must be connected firmly.



6 Check linkage rod and ball of main rotor head and tail rotor head.

Slightly shake linkage ball by hand. It's normal if you can't shake it; however, it's abnormal if it's shaken a lot and must be replaced the new linkage and linkage balls to prevent loose parts for any flight error and danger.

7

Thrust Bearing
止推軸承

Obverse of Bearing
Facas Inside.
軸承內已開口端內。

Grease

Check thrust bearing and bearing of main rotor holder. Check if there is wear or damage of thrust and bearing. Bearing should be smooth enough. If anything is worn, it must be replaced immediately.
Please follow the instructions for thrust bearing assembly. Any incorrect assembly will result in flight error.

8

Grease

One-way Bearing
單向軸承

This face up cover
此蓋面上蓋方向

Check one-way bearing is rotated well and apply a little amount of grease on it for maintenance.

9

OIL

Main Shaft Bearing Block Maintenance.
Gently rotate the motor bearing. If it works smoothly, then apply oil on it for maintenance.
If it does not work smoothly, please change the new bearings.

10

ALIGN

Check the socket collar screws of Main Blades to ensure they are tightening.

11

Check the M4 nut screws to ensure they are tightening.

12

Check Tail assembly screws to ensure they are tightening.

13

Check the M4 set screw to ensure they are tightening.

14

Check socket screws to ensure they are tightening.

	Problem 狀況	Cause 原因	Solution 對策
Blade Tracking 雙槳平衡	Tracking is Off 雙槳	Pitch linkage rods are not even length PITCH連桿長度調整不平均	Adjust length of Linkage rod A. 調整連桿A長度
Rudder Response 尾舵反應	Drifting of tail occurs during hovering, or delay of rudder response when centering rudder stick. 停滯時尾翼向某一邊偏移，或原動力向前後拉桿到中立點時，尾翼產生延遲，無法停頓在控制位置上。	Rudder neutral point improperly set 尾中立點設定不密	Reset rudder neutral point 重設尾中立點
	Tail oscillates (hunting or wags) at hover or full throttle 停滯或全油門時尾翼左右來回搖擺。	Rudder gyro gain too low 尾舵陀螺儀感度太低	Increase rudder gyro gain 增加尾舵陀螺儀感度
		Rudder gyro gain too high 尾舵陀螺儀感度太高	Reduce rudder gyro gain 降低尾舵陀螺儀感度

If above solution does not resolve your issues, please check with experienced pilots or contact your Align dealer.
※在做完以上調整後，仍然無法改善情況時，應立即停止飛行並向有經驗的飛手諮詢或連絡您的經銷商。

FLIGHT NOTE

1. Helicopter and related equipments should be maintained on a regular schedule.
2. Make sure to check flight and record it every time. This record would be helpful for your future reference of maintenance and repaired.
3. Pre-flight and after flight, please deliberately check if every spare parts and electronic equipment work well and no damage.
4. Please strictly do every inspection and check the screws are locked well, not loose at all, before flight.
5. Regular maintenance recommendations: Replace thrust bearings every 30 hours of flight. Replace the main shaft fixed bearing(6901ZZ) and main rotor clamp bearing(6800ZZ) every 60 hours of flight. When the number of flights exceeds 100, please carry out regular maintenance of the entire aircraft and replace parts (such as bearings and washers) to ensure flight safety.
6. For more operation introduction, please read the instruction manual carefully and obey the local regulations.

飛行小叮嚀：

1. 飛行機及相關設備均需要定期維護保養！
2. 每次檢查保養應確實記錄，良好的保養檢查及飛行習慣，將會提供您日後維修或更換耗材的參考及幫助。
3. 飛行前、及飛行後，務必詳細檢查機身各部位零配件/電子設備之性能是否正確，而且無損耗老化現象。
4. 請嚴格執行檢查的義務，飛行前應檢查螺絲確實鎖緊沒有鬆動，才能升空飛行。
5. 定期保養建議：每飛行30小時，更換止推軸承，每飛行60小時更換主軸固定軸承、主旋翼夾軸承。
飛行次數超過100趟時，請進行全機定期保養並更換零件(如軸承類及墊圈等消耗品)，以確保飛行安全。
6. 更多詳細操作介紹，請參閱使用說明書，並謹遵守當地法規。

Thank you for purchasing and supporting ALIGN products.

The Align Team is dedicated to you by innovating and developing new RC Helicopters, Multicopters, and FPV Racing Quads. We strive to provide a more diversified experience for our customers. Visit our website at www.align.com.tw for latest news, information, and updates about our extensive line of products for the RC enthusiasts.

Good Flying!

再次感謝您對亞拓系列商品的喜愛與支持，您的肯定是對我們最大的認同。

亞拓團隊秉持創新研發的精神，開發遙控齒齒飛機/多軸飛行機/穿越機系列商品，提供給您體驗更多樣化的飛行樂趣。您可以透過下列連結，隨時瞭解亞拓的最新動態，以及各項訊息分享。

祝願您有一個愉快的飛行體驗。



ALIGN Flight Safety
亞拓飛行安全宣導



ALIGN Shopping Cart
亞拓購物車



facebook
ALIGN FaceBook



ALIGN Website
亞拓官網



ALIGN Quick Finder
亞拓零件快速購



YouTube
ALIGN YouTube

一、遙控無人機產品標示

本產品最大起飛重量：6.36公斤	(1)
<input checked="" type="checkbox"/> 應 <input type="checkbox"/> 免 依遙控無人機管理規則至民航局「遙控無人機規範管理系統」(https://drone.caa.gov.tw/) 進行線上註冊，註冊號碼應標明於機身顯著處。	(2)
<input checked="" type="checkbox"/> 應 <input type="checkbox"/> 免 具備航空站或飛行場圖資軟體功能。	(3)
<input type="checkbox"/> 異型式檢驗(認可)標章且應向民航局申請辦理實體檢驗。 <input checked="" type="checkbox"/> 免辦理檢驗或認可。	(4)(5)
操作人 <input type="checkbox"/> 免持操作證 <input type="checkbox"/> 應持普通操作證 <input checked="" type="checkbox"/> 應持專業操作證。	(6)
操作本產品前，經檢查確保符合飛航安全條件後從事活動，並禁止飲酒或使用影響精神之藥物，亦不得於公告禁止或限制區域飛航，其餘請詳參見本產品所附操作手冊說明。	(7)(8)
違反上述規定者，中央及地方主管機關得依民航法禁止其活動，並處以新臺幣1萬至150萬元罰鍰，情節重大者沒入遙控無人機。	(9)(10)
本標示依據遙控無人機管理規則第17條第1項規定辦理。	(11)

二、遙控無人機相關法規說明：

- 遙控無人機管理規則(以下稱管理規則)第6條第1項：自然人所有之最大起飛重量250公克以上之遙控無人機及政府機關(構)、學校或法人所有之遙控無人機，應由所有人向民航局申請註冊，並將註冊號碼標明於遙控無人機上顯著之處後，始得操作。
- 管理規則第9條：註冊號碼應依下列方式顯示於遙控無人機上顯著之處：一、以標籤、烙印、噴漆或其他能辨識之方式標明，且應確保耐久與航活動時不至脫落並保持清潔、明顯能辨識。二、標籤位置應為遙控無人機之固定結構外殼。三、其顏色應註冊號碼與背景明顯反差，且以白色最為標識。
- 管理規則第12條第1項：最大起飛重量1公斤以上且裝置導航設備之遙控無人機，應具備防止遙控無人機進入禁航區、限航區及航空站或飛行場四周之一定距離範圍之導航軟體系統，其導航應符合本法第4條第4項第99條之13第1項公告之範圍。
- 管理規則第13條：遙控無人機之設計、製造、改裝，應由設計者、製造者或改裝者檢附申請書向民航局申請型式檢驗，經型式檢驗合格者，發給型式檢驗合格證，並發給型式檢驗標章。自備外進口之遙控無人機，應由進口者依第一項規定向民航局申請型式檢驗，或檢附申請書向民航局申請認可，經認可者，發給認可證明文件及型式檢驗標章。前二項之遙控無人機，其型式檢驗單經民航局公告者，得免辦理檢驗或認可。
- 管理規則第15條第1項：最大起飛重量25公克以上之遙控無人機，為確保遙控無人機符合設計、製造、改裝之性能要求，應由其所有人檢附申請書向民航局申請實體檢驗，經檢驗合格者，發給實體檢驗合格證書。
- 管理規則第20條：遙控無人機操作證分業，申請者年齡及其他規定如下：
A. 專業操作證：申請者應年滿16歲，經申請後，由民航局發給。
B. 普通操作證：申請者應年滿15歲，經學科測驗合格後，由民航局發給。
C. 專業操作證：申請者應年滿15歲並符合相關規定後，經複核檢查及學、術科測驗合格後，由民航局發給。
前項各類操作證之操作規程如下：一、學習操作證：持有人屬於持有遙控無人機普通操作證或專業操作證之操作人在旁指導下，依其指導操作證或專業操作證所屬之機型之遙控無人機，學習操作最大起飛重量未達二十五公斤之遙控無人機。二、普通操作證：持有人得操作自自然人所有最大起飛重量二公斤以下、未達二十五公斤且裝置導航設備之遙控無人機。三、專業操作證：持有人得操作政府機關(構)、學校或法人所有之遙控無人機及自然人所有最大起飛重量十五公斤以上之遙控無人機。
- 管理規則第25條：操作人操作遙控無人機應遵守下列事項：一、直中或直線直距不得超過百分之0.02或距直中或直線直距不得超過每公升0.1毫瓦。二、不得受機械性扭力或震動。導致行為能力受損者。三、不得對任何生命財產造成直接或間接之危害行為。
- 管理規則第26條：操作人從事遙控無人機飛航活動前，應依遙控無人機製造者所提供之維修指引對遙控無人機系統進行檢查，符合安全飛航條件後始得活動。
- 民用航空法遙控無人機專章第119條第1項：遙控無人機之所有人須操作人有下列情事之一者，由民航局禁止其操作證，並處新臺幣30萬元以上150萬元以下罰鍰，並得沒入遙控無人機：一、違反第99條之13第1項規定，於禁航區、限航區及航空站或飛行場四周之一定距離範圍內從事飛航活動。二、違反第99條之14第1項第1款規定，逾規定高度或高度400呎從事飛航活動。
- 民用航空法遙控無人機專章第119條第2項：遙控無人機之所有人或操作人有下列情事之一者，禁止其活動，並處新臺幣5萬元以上30萬元以下罰鍰；情節重大者，並得沒入遙控無人機：一、違反第99條之10第2項規定，未領有操作證而操作遙控無人機。二、違反第99條之15第3項規定，未投保或未足額投保責任保險而從事遙控無人機活動。遙控無人機之所有人或操作人有下列情事之一者，禁止其活動，並處新臺幣3萬元以上15萬元以下罰鍰；情節重大者，並得沒入遙控無人機：一、違反第99條之10第1項內關於遙控無人機註冊或標明註冊號碼之規定。二、違反第99條之13第2項內關於直航市、縣(市)政府公告區域、時間及其他管理事項之規定。三、違反第99條之14第1項第2款至第10款遙控無人機飛航活動應遵守之規定。本條規定之處罰，除同時違反第99條之13第1項或第99條之14第1項第1款由民航局處罰外，由直轄市、縣(市)政府處罰之。
- 民用航空法遙控無人機專章第119條第3項：違反第99條之17所定規則有關限制類別、檢驗、認可、維修與檢查、飛航活動之活動亦可及內容、製造者與進口者之登錄及責任、飛航安全相關事件之通報等事項規定者，禁止其活動，並處新臺幣1萬元以上150萬元以下罰鍰；情節重大者，並得沒入遙控無人機。

※有關後續遙控無人機法規最新資訊，請詳見：<https://drone.caa.gov.tw/> 或掃描右方QR Code。



感謝您購買亞拓系列商品，謹表謝意！

- 亞拓E1精英專業機、M4/MR極速多旋機、M470L/M480XL/M600L多功能無人機、E「衛星導航無人機」，與用戶已有預先安裝資料，操作者可直接在交通資訊用航空間無人機專區註冊完後，登錄系統下拉選擇型號即可快速完成註冊程序。
- 亞拓T-RACE系列E1空機機、MR25XP穿殼機(多旋空拍機系列商品，其屬於「自備無人機(含航空模型機)」，親友飛自行辦理型式檢驗登錄作業。
- 相關型號、規格、尺寸(長×寬×高)、飛機重量(含/不含稅費空機淨重/含/不含稅費配重、使用動力、導航方式一等詳細資訊，請掃描右側QR Code「亞拓無人機註冊碼」，或參考「亞拓無人機註冊教學」進行登錄註冊。




STANDARD EQUIPMENT

Equipment \ Versions	Top Combo	Super Combo	Kit
Illustration	 Hard 3D	 Sport 3D	 Hard 3D & Sport 3D
Brushless Motor	RCM-BL850MX(540KV/4535)	RCM-BL850MX(490KV/4535)	RCM-BL850MX(490KV/4535)
Brushless ESC	RCE-BL200A	RCE-BL130A	—
Servo	DS820M x3	DS820M x3	—
Rudder Servo	DS825M	DS825M	—
Flybarless System	—	Microbeast Flybarless System	—
Main Blade	700 Carbon Fiber Blades	700 Carbon Fiber Blades	700 Carbon Fiber Blades
Tail Blade	105 Carbon Fiber Tail Blades	105 Carbon Fiber Tail Blades	105 Carbon Fiber Tail Blades
Motor Belt Pulley	22T	23T	23T
Drive Gear Ratio	9.38 : 1 : 4.83	8.96 : 1 : 5.0	8.96 : 1 : 4.83
Max RPM (approx.)	2400RPM	2290RPM	2290RPM

SPECIFICATION

Equipment \ Versions	Top Combo	Super Combo	Kit
Length	1356mm	1356mm	1356mm
Width	187mm	187mm	187mm
Height	358mm	358mm	358mm
Main Blade Length	650-730mm	650-730mm	650-730mm
Main Rotor Diameter	1542mm	1542mm	1542mm
Tail Length	105-115mm	105-115mm	105-115mm
Tail Rotor Diameter	279mm	279mm	279mm
Frame Weight	2.3kg	2.3kg	2.3kg
Flying Weight (with battery)	Approx. 5kg (Battery :Align 12S 5200mAh)	Approx. 4.9kg (Battery :Align 12S 5200mAh)	—
Battery	12S 4000-5800mAh	12S 4000-5800mAh	12S 4000-5800mAh



ALIGN

www.align.com.tw

www.align.com.tw

www.align.com.tw

www.align.com.tw

www.align.com.tw

www.align.com.tw

www.align.com.tw

www.align.com.tw



TB70



亞拓科技股份有限公司
ALIGN CORPORATION LIMITED MADE IN TAIWAN

2023.Mar.06 G00782